

# BARCO

BARCO PROJECTION SYSTEMS

BARCO DATA  
701

90 00719

INSTALLATION MANUAL

Date:  
100294

Art. No.  
59 75625A

# BARCO

BARCO PROJECTION SYSTEMS

BARCO DATA  
701

90 00719

INSTALLATION MANUAL

Date:  
100294

Art. No.  
59 75625A

# TABLE OF CONTENTS

WARNINGS .....	1
SAFETY INSTRUCTIONS .....	1
On safety .....	4
On installation .....	5
On servicing .....	6
On cleaning .....	6
On repacking .....	7
On illumination .....	7
UNPACKING & DIMENSIONS .....	9
Unpacking .....	10
Projector dimensions .....	11
INSTALLATION GUIDELINES .....	13
* Environment .....	14
* What about ambient light ? .....	14
* Which screen type? .....	15
* What image size? How big should the image be? .....	15
* Where to install the projector? .....	16
* How to install the projector? .....	24
INSTALLATION SET UP .....	25
Access to controls .....	26
Scan adaptation .....	28
Projector set up .....	33
a) Setting the projector address. ....	35
b. Power up mode. ....	36
c. Baud rate for communication with a computer, e.g. IBM PC (or compatible), MAC, ....	37
d. Password mode .....	37
POWER (MAINS) CONNECTION .....	39
Input power (mains) voltage adaptation. ....	40
Power (mains) cord connection .....	40
Fuses .....	40
Switching on/off .....	41
INSTALLATION ADJUSTMENTS .....	43
Entering the adjustment mode .....	44
Overview flow chart installation mode. ....	45
Installation mode start up .....	46
Scheimpflug adjustment .....	50
Optical lens focusing .....	52
Electrical focusing .....	53
Raster centering .....	54
CRT projection angle adjustment .....	56
Alignment of the projector. ....	60

# TABLE OF CONTENTS

Appendix A : Ceiling mount adapter 700 .....	61
Appendix B : Ceiling mount kit for 700 projectors .....	63
Appendix C : G2 adjustment .....	65

**WARNINGS**

**SAFETY INSTRUCTIONS**

**on safety**

**on installation**

**on servicing**

**on cleaning**

**on repacking**

**on illumination**

**Notice on Safety**

Projectors are built in accordance with the requirements of the international safety standards IEC 950 and UL 1950, which are the safety standards of information technology equipment including electrical business equipment.

These safety standards impose important requirements on the use of safety critical components, materials and isolation, in order to protect the user or operator against risk of electric shock and energy hazard, and having access to live parts. Safety standards also impose limits to the internal and external temperature rises, radiation levels, mechanical stability and strength, enclosure construction and protection against the risk of fire.

Simulated single fault condition testing ensures the safety of the equipment to the user even when the equipment's normal operation fails.

**INSTALLATION INSTRUCTIONS**

*Before operating your projector please read this manual thoroughly, and retain it for future reference.*

*Installation and preliminary adjustments should be performed by qualified BARCO personnel or by authorized BARCO service dealers.*

**OWNER'S RECORD**



The part number and serial number are located at the left side of the projector. Record these numbers in the spaces provided below. Refer to them whenever you call upon your BARCO dealer regarding this product.

**PART NUMBER:**

**SER. NUMBER:**

**DEALER:**

# SAFETY INSTRUCTIONS

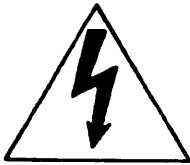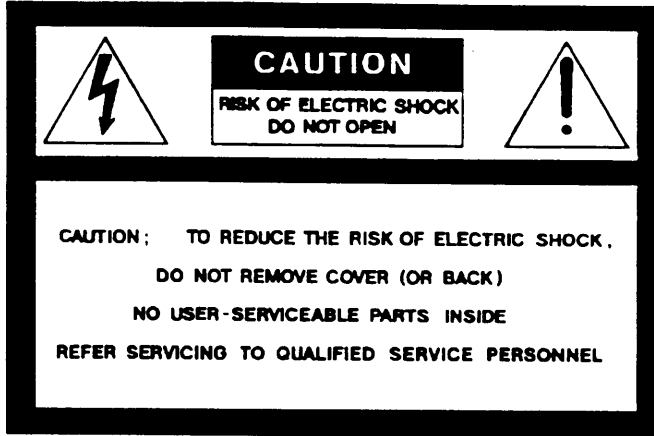

The lightning flash with an arrowhead within a triangle is intended to tell the user that parts inside this product may cause a risk of electrical shock to persons.



The exclamation point within a triangle is intended to tell the user that important operating and/or servicing instructions are included in the technical documentation for this equipment.

**WARNING**  
**TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PROJECTOR TO RAIN OR MOISTURE**

## FEDERAL COMMUNICATION COMMISSION (FCC STATEMENT)

This equipment has been tested and found to comply with the limits of a class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

- \* All the safety and operating instructions should be read before using this unit.
- \* The safety and operating instructions manual should be retained for future reference.
- \* All warnings on the projector and in the documentation manuals should be adhered to.
- \* All instructions for operating and use of this equipment must be followed precisely.

## On safety

1. This product should be operated from an AC power source

Operating AC power voltage of the projector when leaving the factory:

BARCODATA 701  
Art.No. 90 00719 (120V AC)


The projector leaves the factory for 120 Vac.

If you are not sure of the type of AC power available, consult your dealer or local power company.

2. This product is equipped with a 3-wire grounding plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.

**WARNING FOR THE CUSTOMERS: THIS APPARATUS MUST BE GROUNDED (EARTHED) via the supplied 3 conductor AC power cable.**  
(If the supplied power cable is not the correct one, consult your dealer.)

### B. Power cord with ANSI 73.11 plug:

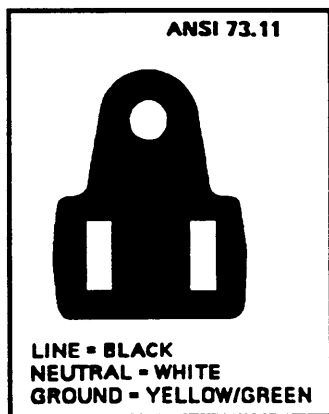

The wires of the power cord are colored in accordance with the following code.

Green/yellow: ground  
White: neutral  
Black: line (live)



# SAFETY INSTRUCTIONS

3. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.

To disconnect the cord, pull it out by the plug. Never pull the cord itself.

4. If an extension cord is used with this product, make sure that the total of the ampere ratings on the products plugged into the extension cord does not exceed the extension cord ampere rating. Also make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes.

5. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.

Never spill liquid of any kind on the product. Should any liquid or solid object fall into the cabinet, unplug the set and have it checked by qualified service personnel before resuming operations.

6. Lightning - For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the projector due to lightning and AC power-line surges.

## On installation

1. Do not place this projector on an unstable cart, stand, or table. The projector may fall, causing serious damage to it.

2. Do not use this projector near water.

3. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the projector and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This projector should not be placed in a built-in installation or enclosure unless proper ventilation is provided.

## On servicing

Do not attempt to service this projector yourself, as opening or removing covers may expose you to dangerous voltage potentials and risk of electric shock!

**Refer all servicing to qualified service personnel.**

**Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:**

a. When the power cord or plug is damaged or frayed.

- b. If liquid has been spilled into the projector.
- c. If the product has been exposed to rain or water.
- d. If the product does not operate normally when the operating instructions are followed. Note :  
Adjust only those controls that are covered by the operating instructions since improper adjustment of the other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- e. If the product has been dropped or the cabinet has been damaged.
- f. If the product exhibits a distinct change in performance, indicating a need for service.

**Replacement parts** - When replacement parts are required, be sure the service technician has used original BARCO replacement parts or authorized replacement parts which have the same characteristics as the BARCO original part. Unauthorized substitutions may result in degraded performance and reliability, fire, electric shock or other hazards. Unauthorized substitutions may void warranty.

**Safety check** - Upon completion of any service or repairs to this projector, ask the service technician to perform safety checks to determine that the projector is in proper operating condition.

## **On cleaning**

**Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.**

- To keep the cabinet looking brand-new, periodically clean it with a soft cloth. Stubborn stains may be removed with a cloth lightly dampened with mild detergent solution. Never use strong solvents, such as thinner or benzine, or abrasive cleaners, since these will damage the cabinet.
- To ensure the highest optical performance and resolution, the projection lenses are specially treated with an anti-reflective coating, therefore, avoid touching the lens. To remove dust on the lens, use a soft dry cloth. Do not use a damp cloth, detergent solution, or thinner.

## **On repacking**

Save the original shipping carton and packing material; they will come in handy if you ever have to ship your projector. For maximum protection, repack your set as it was originally packed at the factory.

## **On illumination**

In order to obtain the best quality for the projected image, it is essential that the ambient light which is allowed to fall on the screen be kept to an absolute minimum.

## **SAFETY INSTRUCTIONS**

When installing the projector and screen, care must be taken to avoid exposure to ambient light directly on the screen. Avoid adverse illumination on the screen from direct sunlight or florescent lighting fixtures.


The use of controlled ambient lighting, such as incandescent spot light or a dimmer, is recommended for proper room illumination. Where possible, care should also be taken to ensure that the floors and walls of the room in which the projector is to be installed are non-reflecting, dark surfaces. Brighter surfaces will tend to reflect and diffuse the ambient light and hence reduce the contrast of the projected image on the screen.




**UNPACKING  
DIMENSIONS**

## Unpacking


To open the banding, pull on the clip as shown in the first drawing.

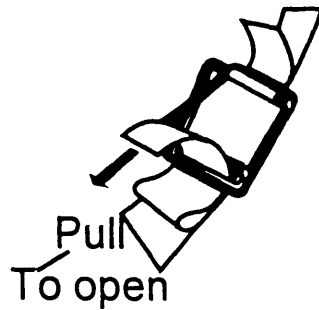

Take the projector out of its shipping carton and place it on a table.

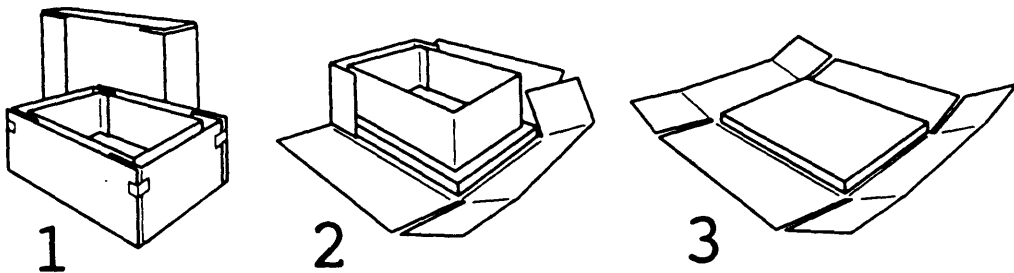

Save the original shipping carton and packing material, they will come in handy if you ever have to ship your projector. For maximum protection, repack your projector as it was originally packed at the factory.


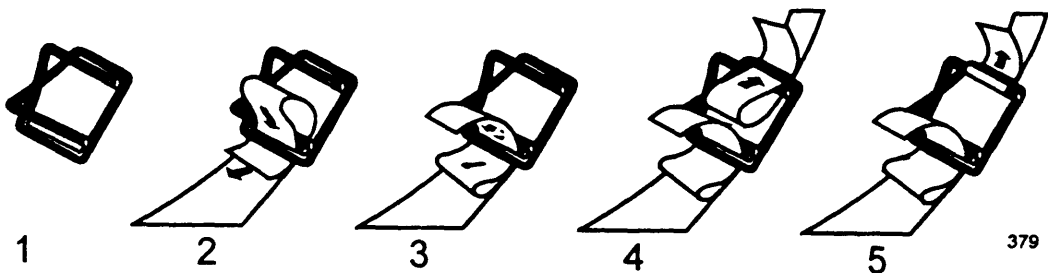


Contents of the shipped box :

- 1 BARCODATA 701.
- 1 remote control.
- 1 power cable with outlet plug type ANSI 73.11.
- 1 owner's manual.
- 1 installation manual.

# UNPACKING AND DIMENSIONS

## Projector dimensions

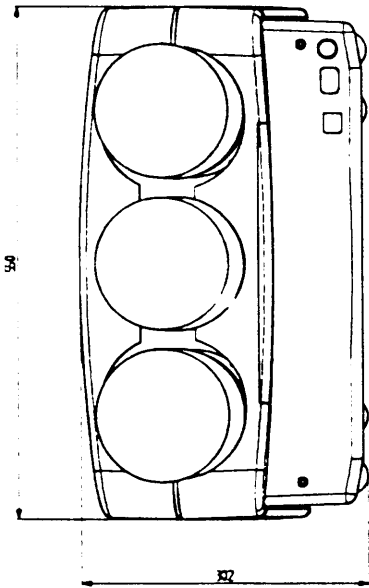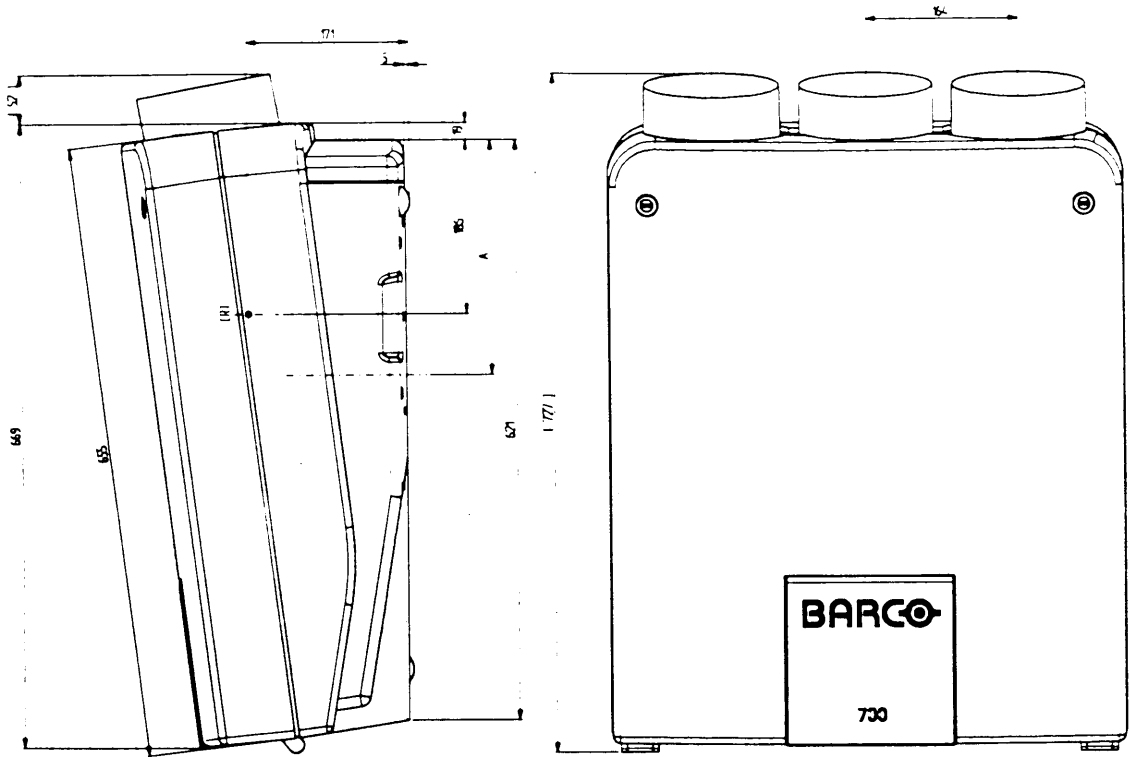

Center of gravity	A
Lens type HD6	220mm

# UNPACKING AND DIMENSIONS

UNPACKING AND DIMENSIONS



## INSTALLATION GUIDELINES

### Environment

**What about ambient light?**

**Which screen type?**

**What image size? How big should the image be?**

**Where to install the projector?**


**How to install the projector?**

## Installation guidelines

Careful consideration of things such as image size, ambient light level, projector placement and type of screen to use are critical to the optimum use of the projection system.

### \* Environment

Do not install the projection system in a site near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust or humidity. Be aware that room heat rises to the ceiling; check that the temperature near the installation site is not excessive.

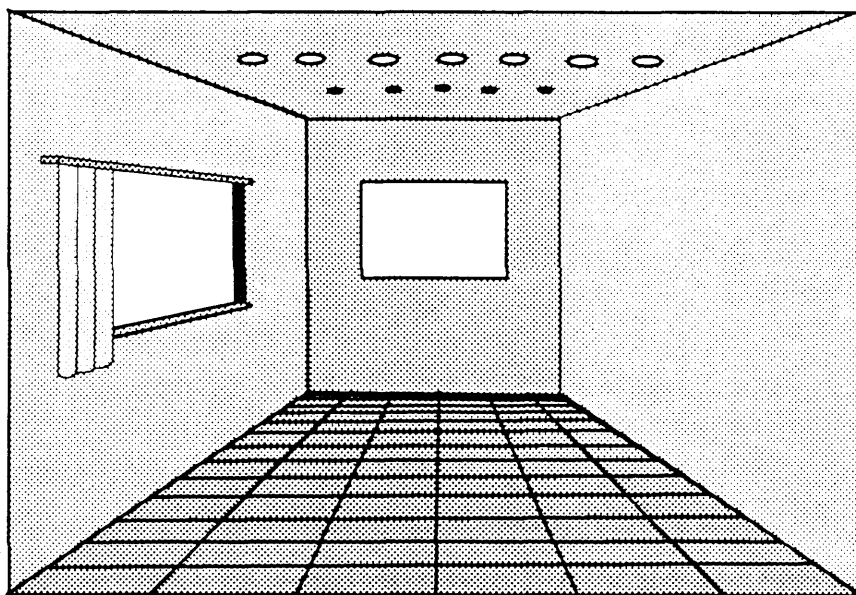

### \* What about ambient light ?

The ambient light level of any room is made up of direct or indirect sunlight and the light fixtures in the room. The amount of ambient light will determine how bright the image will appear. So, avoid direct light on the screen.

Windows that face the screen should be covered by opaque drapery while the set is being viewed. It is desirable to install the projecting system in a room whose walls and floor are of non-reflecting material. The use of recessed ceiling lights and a method of dimming those lights to an acceptable level is also important. Too much ambient light results in a 'wash out' of the projected image. This appears as less contrast between the darkest and lightest parts of the image. With bigger screens, the 'wash out' becomes more important. As a general rule, darken the room to the point where there is just sufficient light to read or write comfortably. Spot lighting is desirable for illuminating small areas so that interference with the screen is minimal.


## Which screen type?

There are two major categories of screens used for projection equipment. Those used for front projected images and those for rear projection applications.

Screens are rated by how much light they reflect (or transmit in the case of rear projection systems) given a determined amount of light projected toward them. The 'GAIN' of a screen is the term used. Front and rear screens are both rated in terms of gain. The gain of screens range from a white matte screen with a gain of 1 (x1) to a brushed aluminized screen with a gain of 10 (x10) or more. The choice between higher and lower gain screens is largely a matter of personal preference and another consideration called the Viewing angle.

In considering the type of screen to choose, determine where the viewers will be located and go for the highest gain screen possible. A high gain screen will provide a brighter picture but reduce the viewing angle.

*For more information about screens, contact your local screen supplier.*

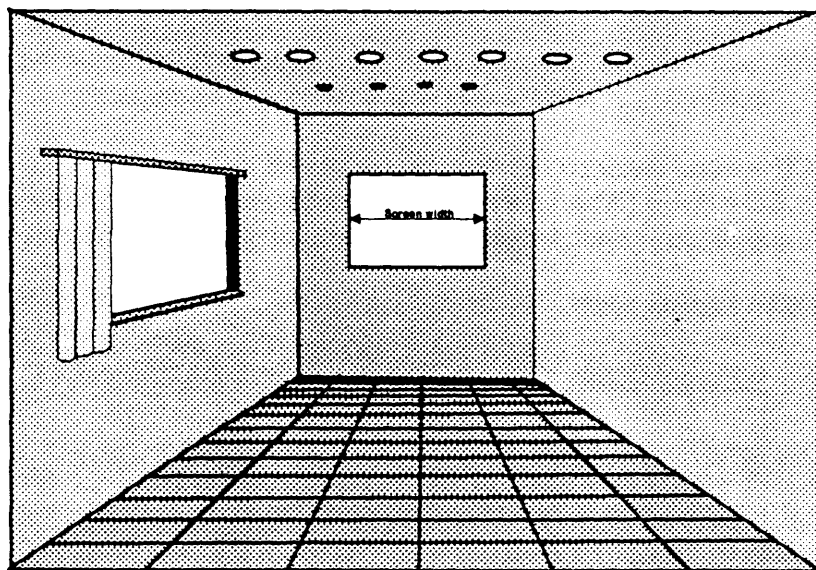

## What image size? How big should the image be?

The BARCODATA 701 is designed for projecting an image width from 1.4m (4.6') to 6m (20') with an aspect ratio of 4 to 3. It leaves the BARCO factory, adjusted as a ceiling front projector for a screen width of 2.4m. Changing the image size from the factory preset requires a realignment of the projector.

**\* Where to install the projector?**

To indicate a correct installation position it is necessary to know the distance :

- projector - ceiling
- projector - screen

To find this correct position for the BARCODATA 701, equipped with HD6 lenses, 3 possible ways are indicated in the next paragraphs.

- a diagram which indicates PD (projector to screen distance) and a Correction Value A, both in function of the screen width.
- a table which immediately gives the correct position PD and the Correction Value A for different screen widths.
- a formula which directly gives the correct position PD and the Correction Value A.

Abbreviations used on drawing and diagrams on next pages

B = Distance between ceiling and top of the screen.

A = Correction Value, extra value to be added to B to obtain the correct installation position. (In some cases the A value can be negative.)



CD = Total distance between projector and ceiling.

CD = A + B (When the result is negative, enlarge the distance between ceiling and top of the screen, mount screen lower, until CD becomes zero or positive)

SW = Screen width.

PD = Perpendicular distance between screen and projector.

# INSTALLATION GUIDELINES

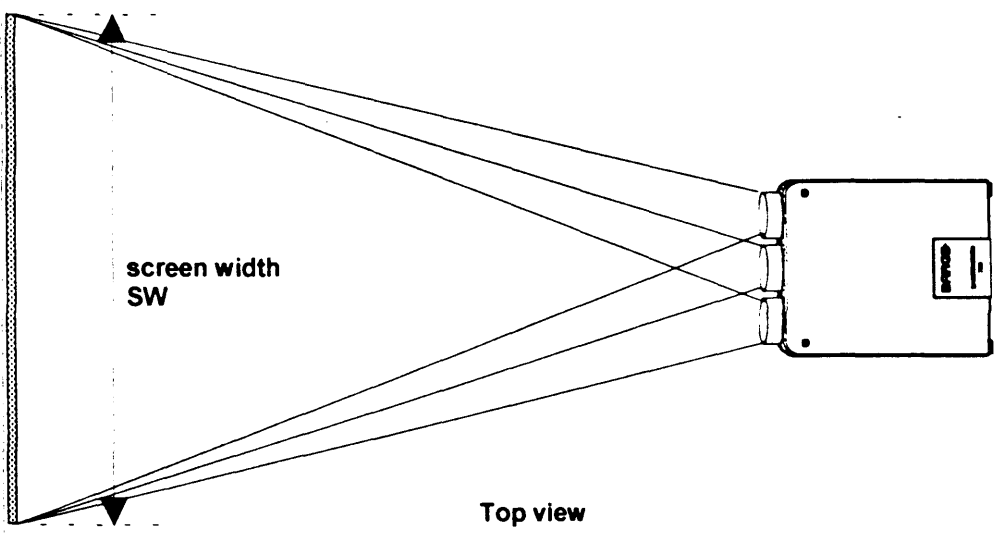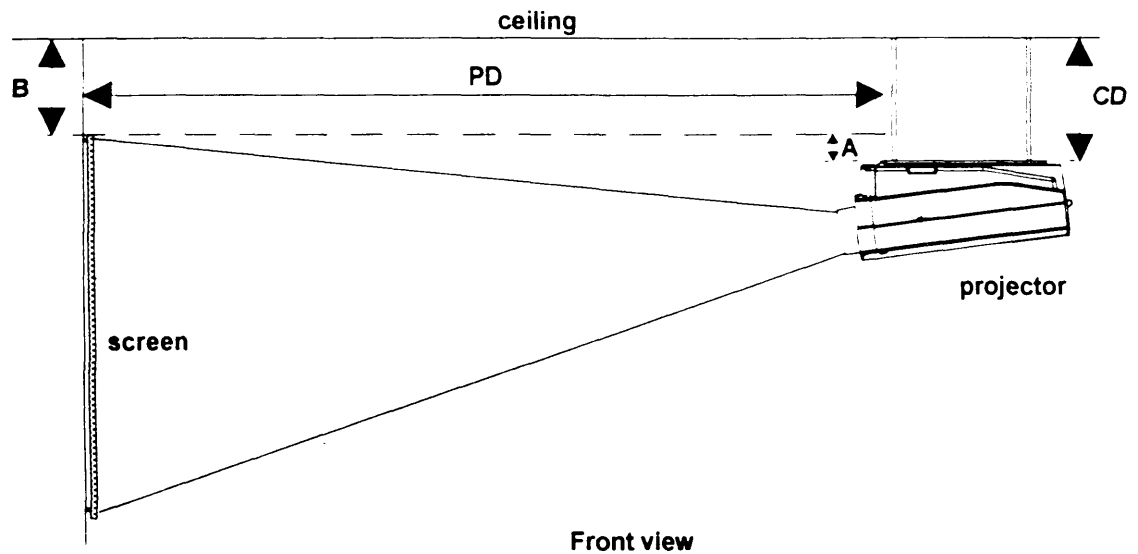


# INSTALLATION GUIDELINES

Projector to screen distance with regard to the screen width for *HD6* lenses (metric).

PD


scale : 1 cm = 0.50 m

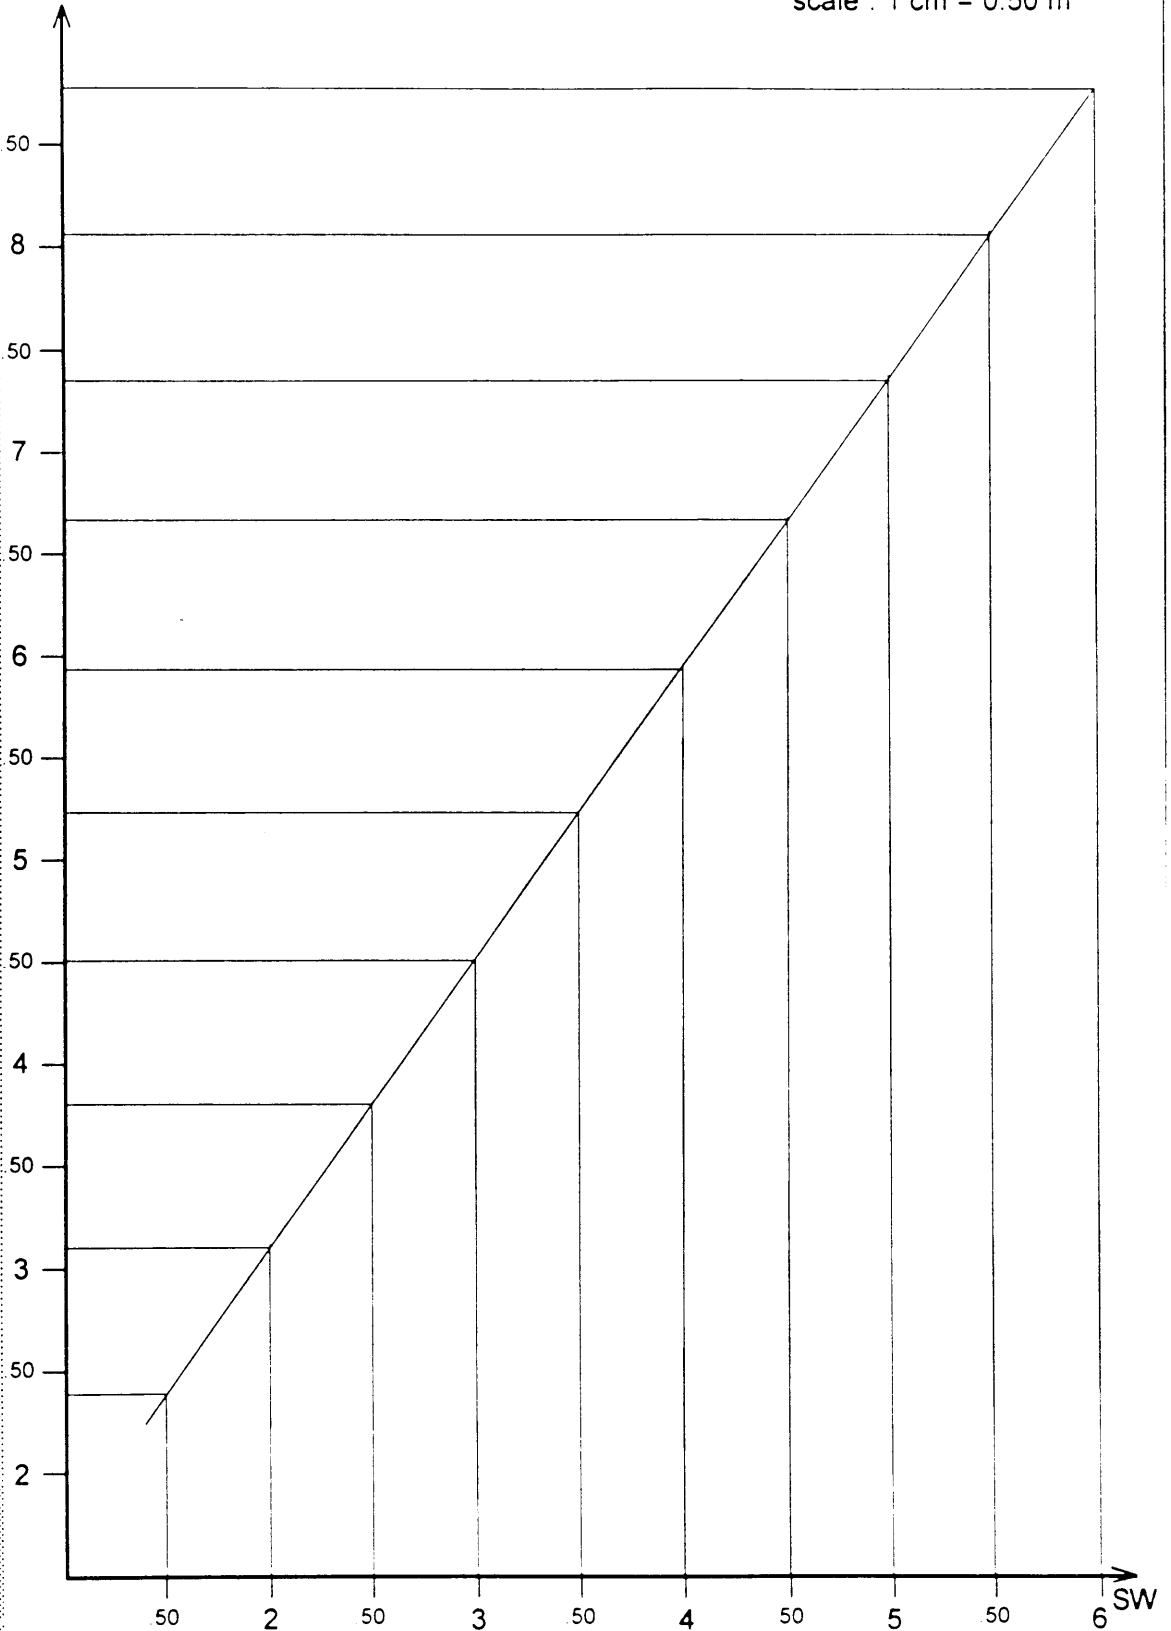

# INSTALLATION GUIDELINES

Correction value A with regard to the screen width for *HD6 lenses* (metric).

scale : SW : 1 cm = 0.50 m  
A : 1 cm = 5 cm

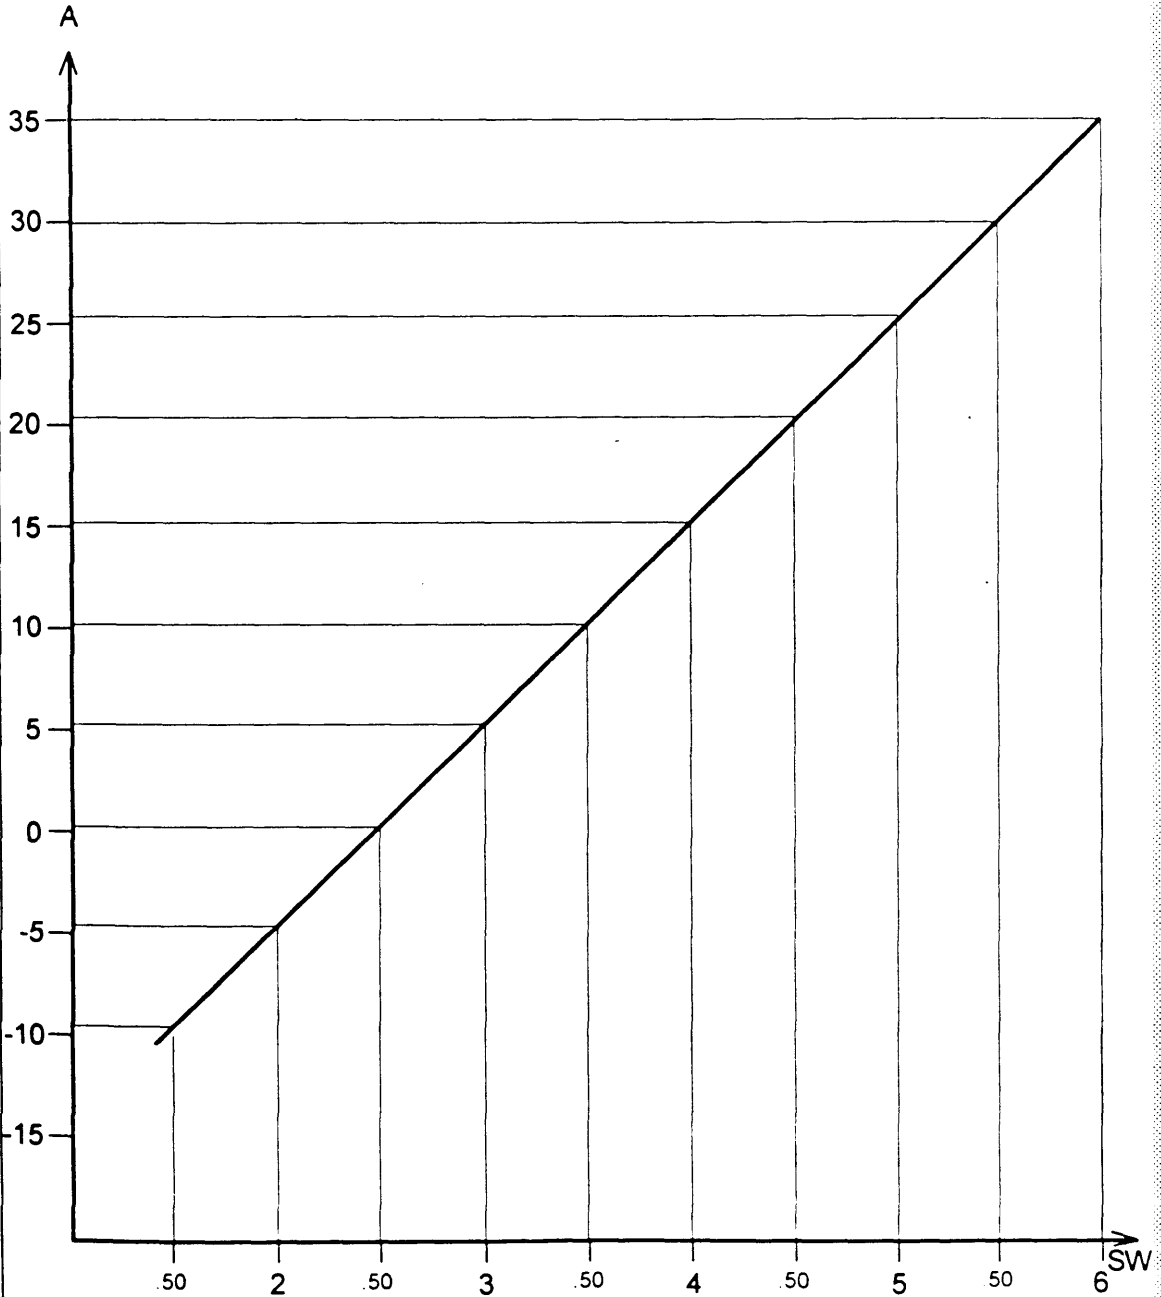

# INSTALLATION GUIDELINES

Table and formulas for Projector to screen distance and correction value A with regard to the screen width for *HD6 lenses* (metric).

SW[m]	PD[m]	A[cm]	SW[m]	PD[m]	A[cm]
1.4	2.24	-10.5	3.8	5.65	13.2
1.5	2.38	-9.5	3.9	5.79	14.2
1.6	2.53	-8.5	4	5.93	15.2
1.7	2.67	-7.5	4.1	6.08	16.1
1.8	2.81	-6.5	4.2	6.22	17.1
1.9	2.95	-5.5	4.3	6.36	18.1
2	3.09	-4.6	4.4	6.50	19.1
2.1	3.24	-3.6	4.5	6.64	20.1
2.2	3.38	-2.6	4.6	6.79	21.1
2.3	3.52	-1.6	4.7	6.93	22.1
2.4	3.66	-0.6	4.8	7.07	23.1
2.5	3.80	0.3	4.9	7.21	24.1
2.6	3.95	1.3	5	7.35	25.1
2.7	4.09	2.3	5.1	7.50	26.0
2.8	4.23	3.3	5.2	7.64	27.0
2.9	4.37	4.3	5.3	7.78	28.0
3	4.51	5.3	5.4	7.92	29.0
3.1	4.66	6.2	5.5	8.06	30.0
3.2	4.80	7.2	5.6	8.21	31.0
3.3	4.94	8.2	5.7	8.35	32.0
3.4	5.08	9.2	5.8	8.49	33.0
3.5	5.22	10.2	5.9	8.63	34.0
3.6	5.37	11.2	6	8.77	35.0
3.7	5.51	12.2			

Formulas (metric)

$$PD[m] = 1.42 \times SW[m] + 0.254$$


$$A[cm] = 9.9 \times SW[m] - 24.4$$



# INSTALLATION GUIDELINES

Projector to screen distance with regard to the screen width for *HD6 lenses* (inch).


scale : 1 inch = 50 inch

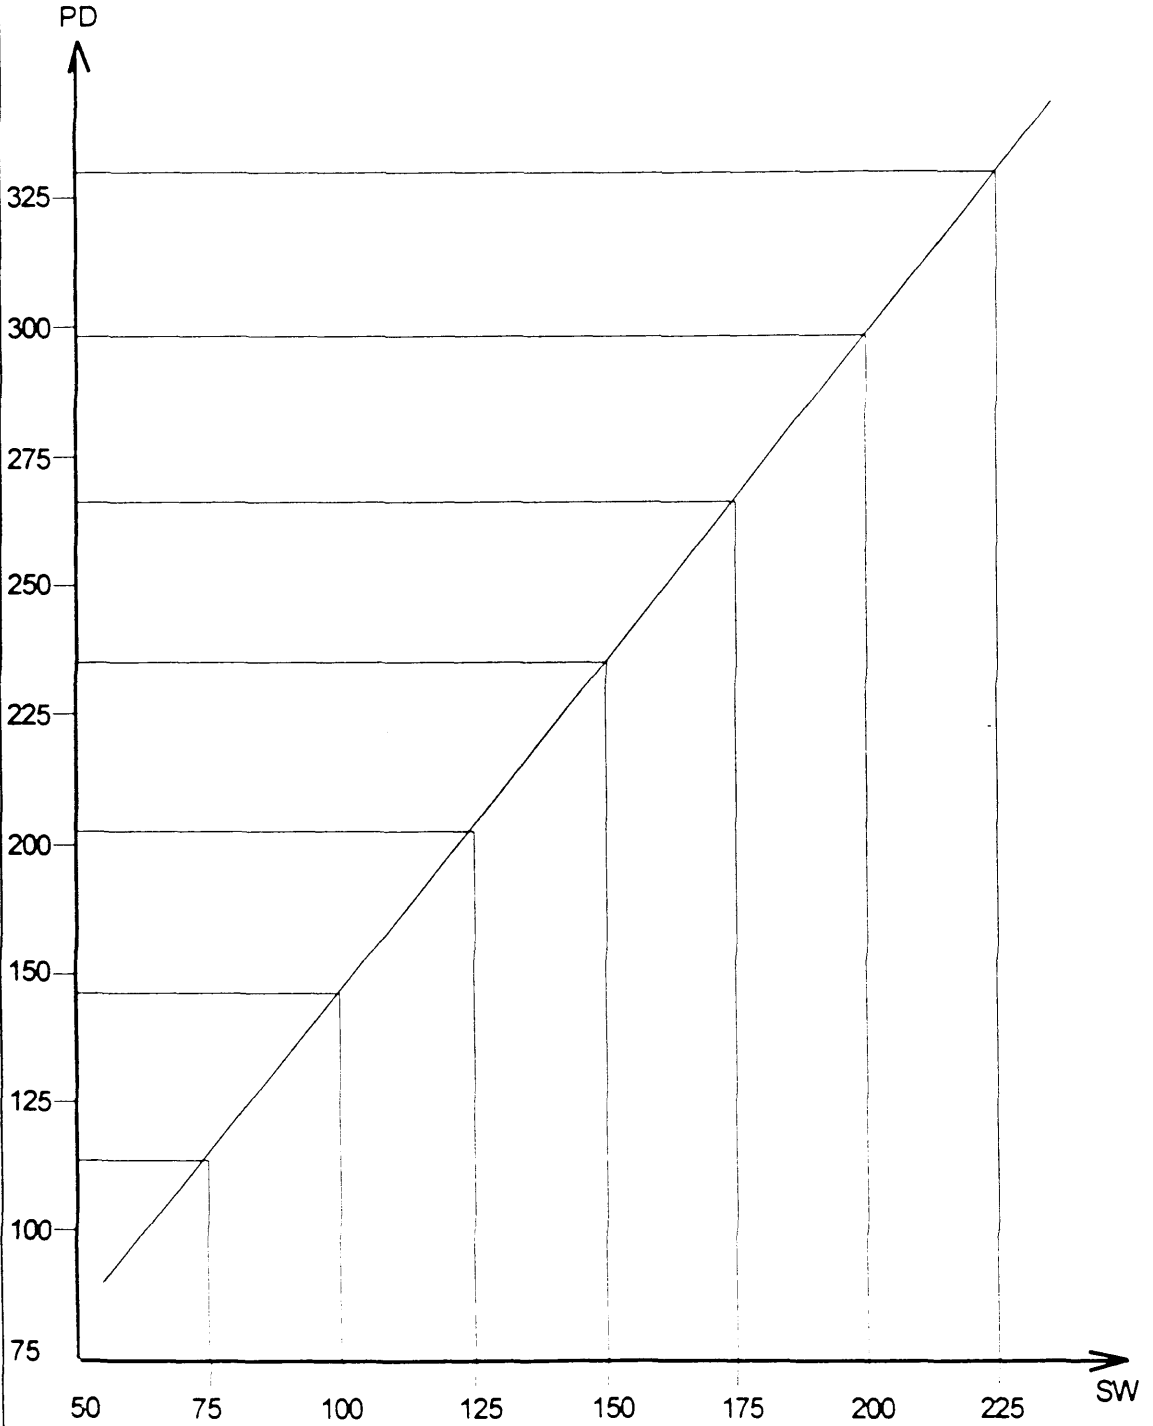

# INSTALLATION GUIDELINES

Correction value A with regard to the screen width for *HD6 lenses* (inch).

scale : SW : 1 inch = 50 inch  
A : 1 inch = 4 inch

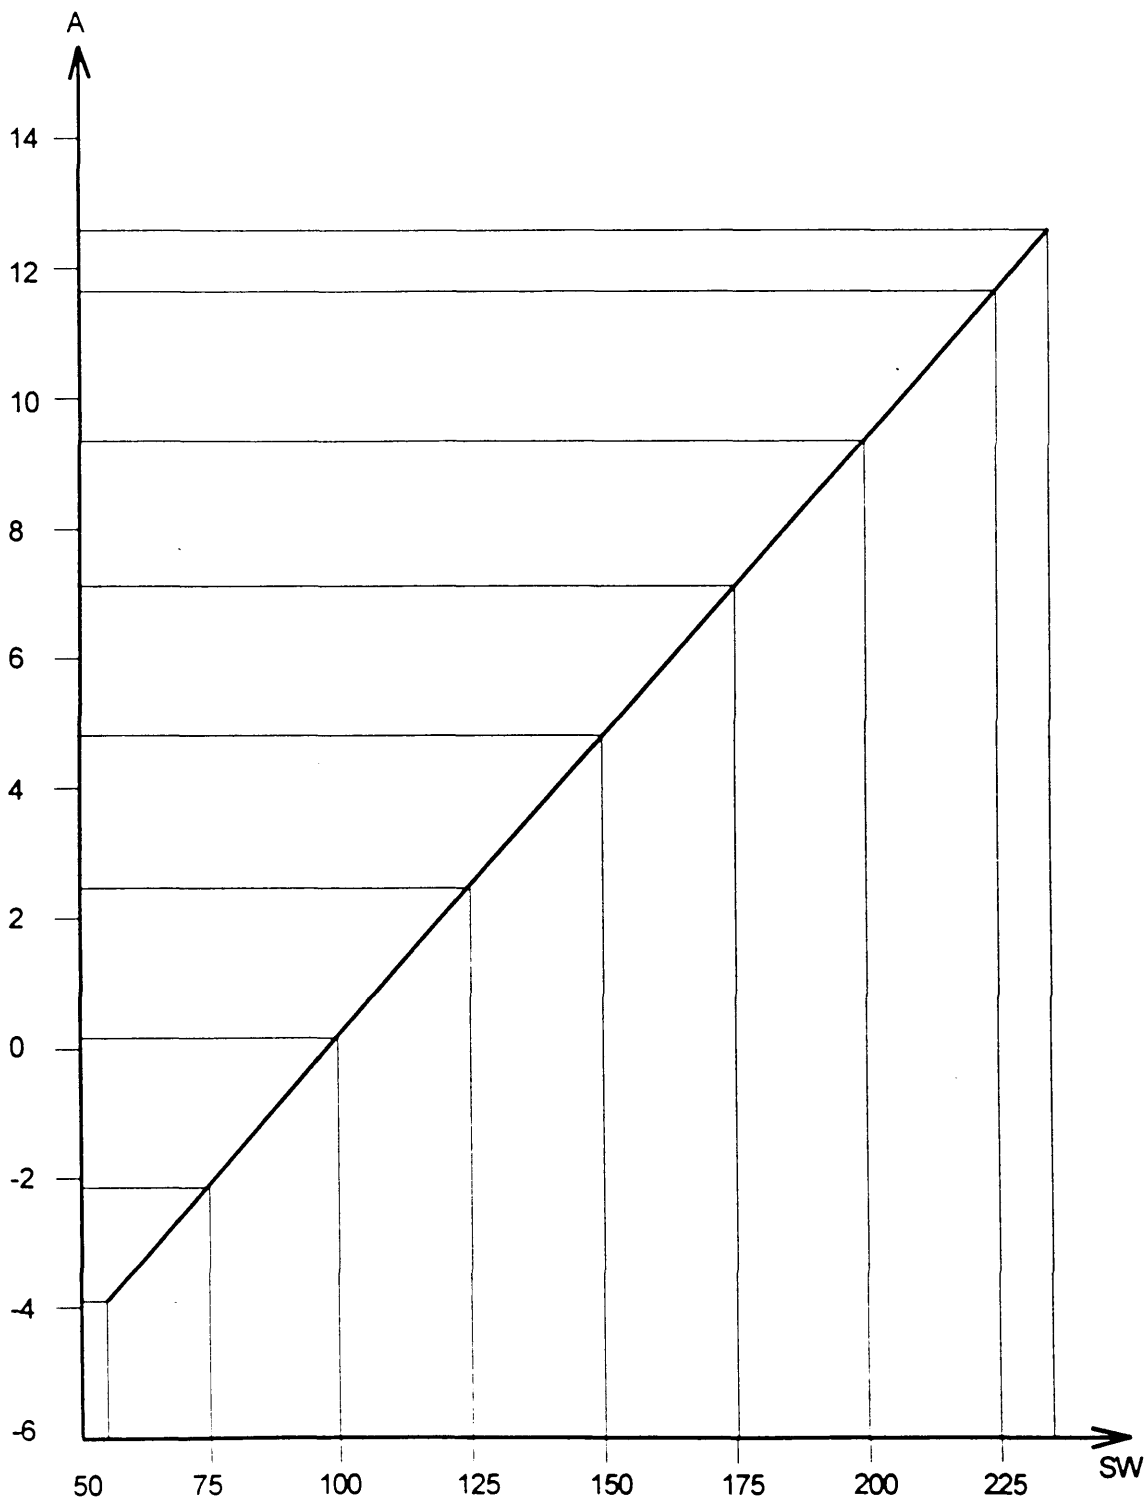

# INSTALLATION GUIDELINES

Table and formulas for Projector to screen distance and correction value A with regard to the screen width for *HD6 lenses* (inch).

SW	PD	A	SW	PD	A
55	88.10	-4.1	150	223.00	5.2
60	95.20	-3.6	155	230.10	5.7
65	102.30	-3.1	160	237.20	6.2
70	109.40	-2.6	165	244.30	6.7
75	116.50	-2.1	170	251.40	7.2
80	123.60	-1.6	175	258.50	7.7
85	130.70	-1.1	180	265.60	8.2
90	137.80	-0.7	185	272.70	8.7
95	144.90	-0.2	190	279.80	9.2
100	152.00	0.2	195	286.90	9.7
105	159.10	0.7	200	294.00	10.1
110	166.20	1.2	205	301.10	10.6
115	173.30	1.7	210	308.20	11.1
120	180.40	2.2	215	315.30	11.6
125	187.50	2.7	220	322.40	12.1
130	194.60	3.2	225	329.50	12.6
135	201.70	3.7	230	336.60	13.1
140	208.80	4.2	235	343.70	13.6
145	215.90	4.7	236	345.12	13.7

Formulas (inch)

$$PD = 1.42 \times SW + 10$$

$$A = 0.099 \times SW - 9.61$$

**\* How to install the projector?**

Ceiling mount or table mount?

To install the BARCODATA 701, apply always the BARCO kits which are specially designed for this function.

BARCO ceiling support.

Always use the BARCO ceiling support to attach your BARCODATA 701 to the ceiling. (BARCO order number : 98 27990)

The installation instruction for this support is enclosed in the packet of the set.

*BARCO projection table.*

Height adaptable projection table provides a stable stand for your projector, and makes it possible to adapt the projector perfectly to the local requirements. (BARCO order number 98 27740).

**INSTALLATION SET UP**

Access to controls

Scan adaptation



## Access to controls

Opening procedure :

During the projector set up and installation it is necessary to open the top cover.

To get access, procede as follow :

- \*Turn both lock screws with a screwdriver or a coin counter clockwise.
- \* Lift up and pivot the top cover.

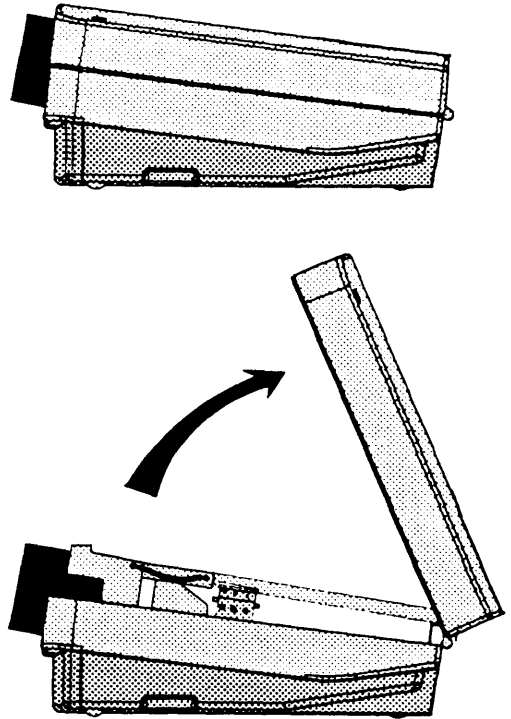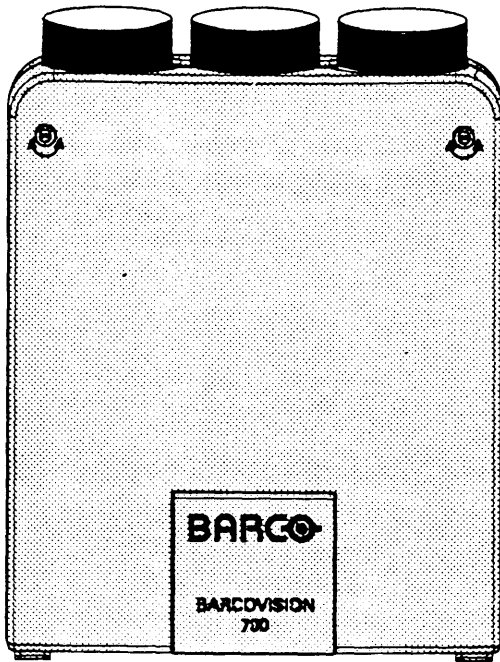


- \* Support the top cover with the hand, no support is incorporated.

## INSTALLATION SET UP

During some installations it will become handy to remove the top cover totally. Therefore,

- pivot the top cover  $\pm 60^\circ$
- push the top cover to the front side of the projector until it jumps out of its hinges. Turn the top cover till  $90^\circ$  and lift it up.

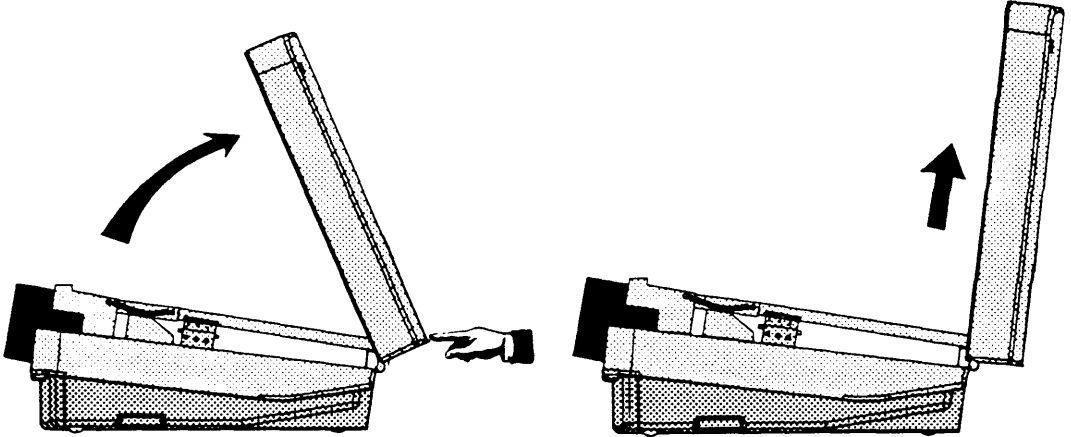

Re-install the cover :

Hook the top cover into the cabinet hinges. Pivot the top cover  $30^\circ$  and pull it backwards until it fits in the hinges. Close the cover and secure the lock screws by turning clockwise with a screwdriver or coin.

## Scan adaptation

The scanning can be switch by turning the Horizontal and Vertical scan connectors and the convergence connectors.

To change the scanning, it is necessary to open the projector top cover and to rotate the chassis.


For opening the projector's top cover, see Getting access to controls.

### WARNING

**TURN OFF PROJECTOR AND UNPLUG THE POWER CORD BEFORE CHANGING THE SCAN DIRECTION.**

Getting access to the scan connectors and the convergence connectors.


- Open the top cover and to remove it, see Getting access to controls.
- To open the chassis, loosen both indicated retaining screws

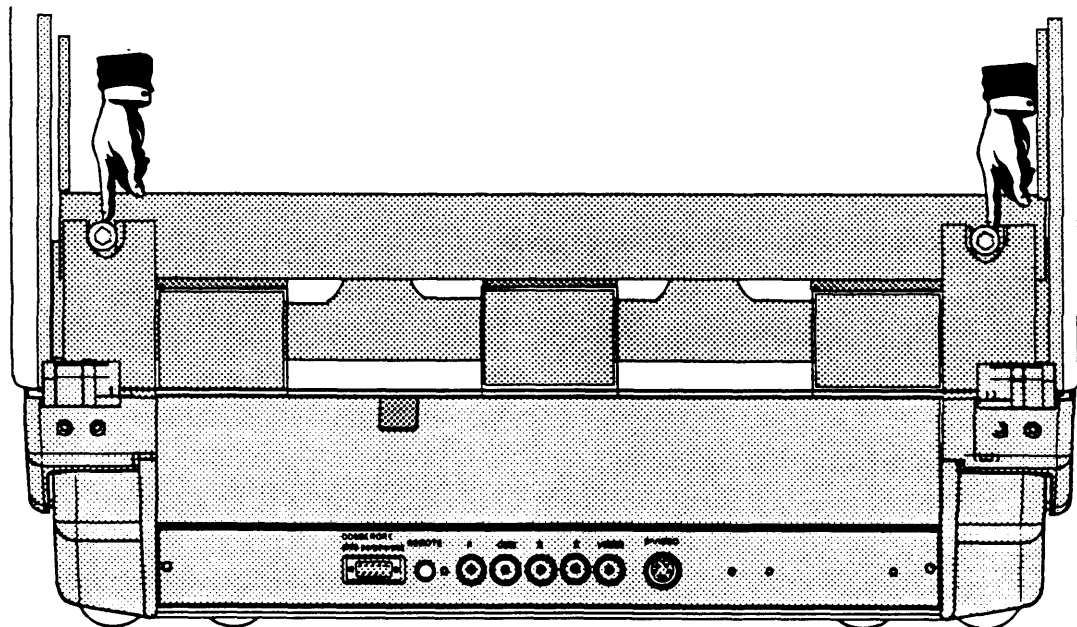

Turn the chassis to the front of the projector until it grips in its locks.



# INSTALLATION SET UP

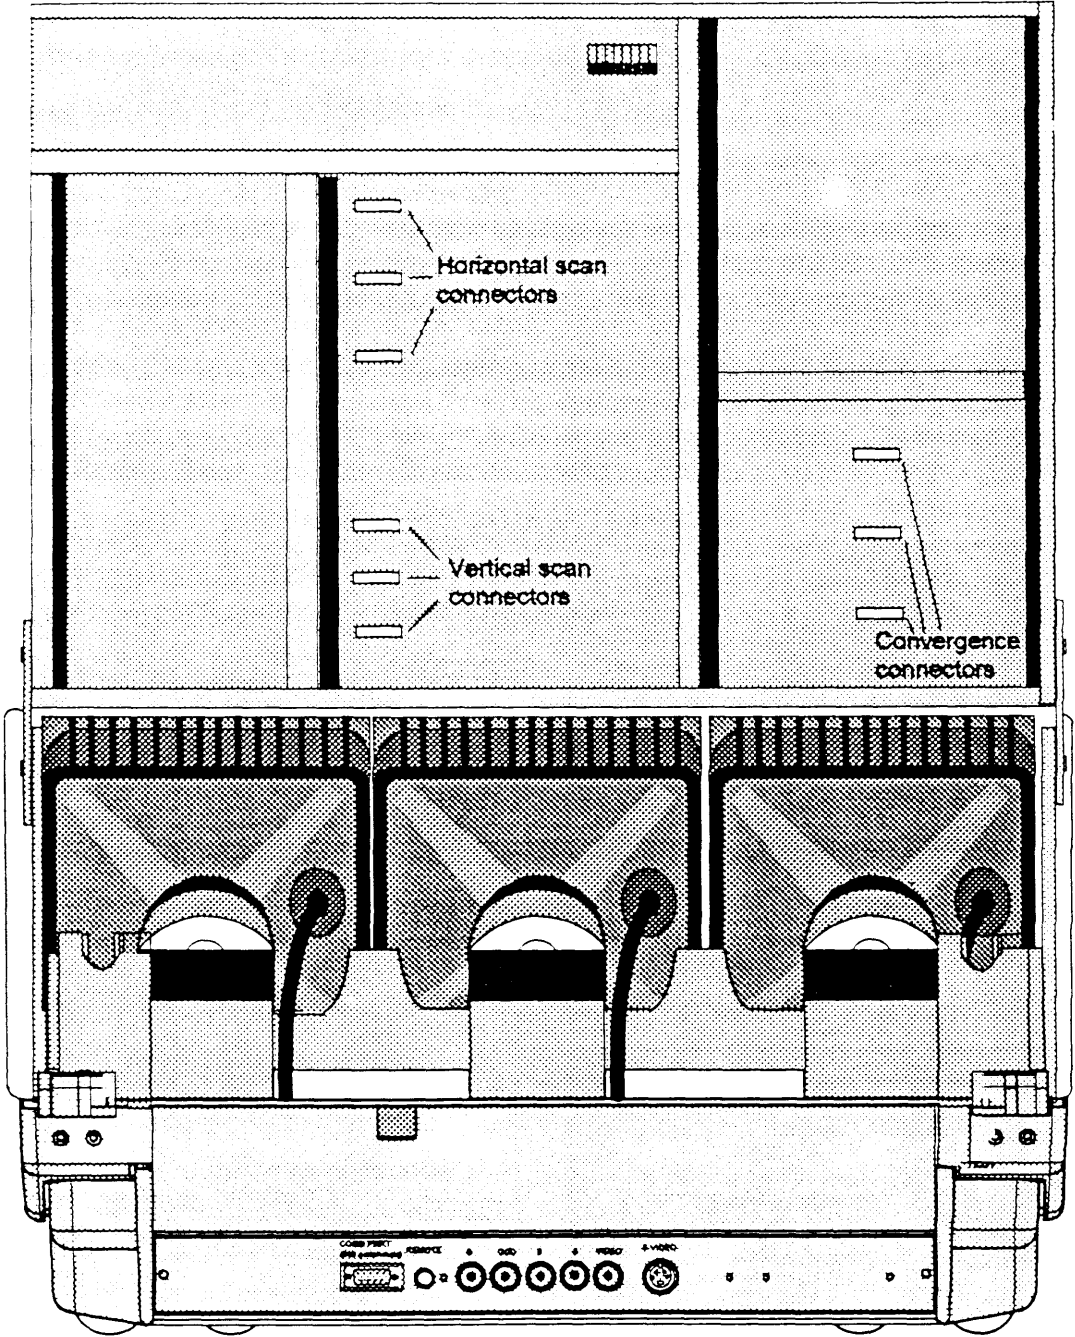


## A : Horizontal scan inversion

Three connectors are used, one for each horizontal deflection coil. When changing the horizontal scan, insure that all three connectors are set in the same position. See position of the connectors for the corresponding projector configuration.


## B : Vertical scan inversion

Three connectors are used, one for each vertical deflection coil. When changing the vertical scan, insure that all three connectors are set in the same position. See position of the connectors for the corresponding projector configuration.

Top view of the connectors; upper three connectors for horizontal scan inversion, lower three for vertical scan inversion.

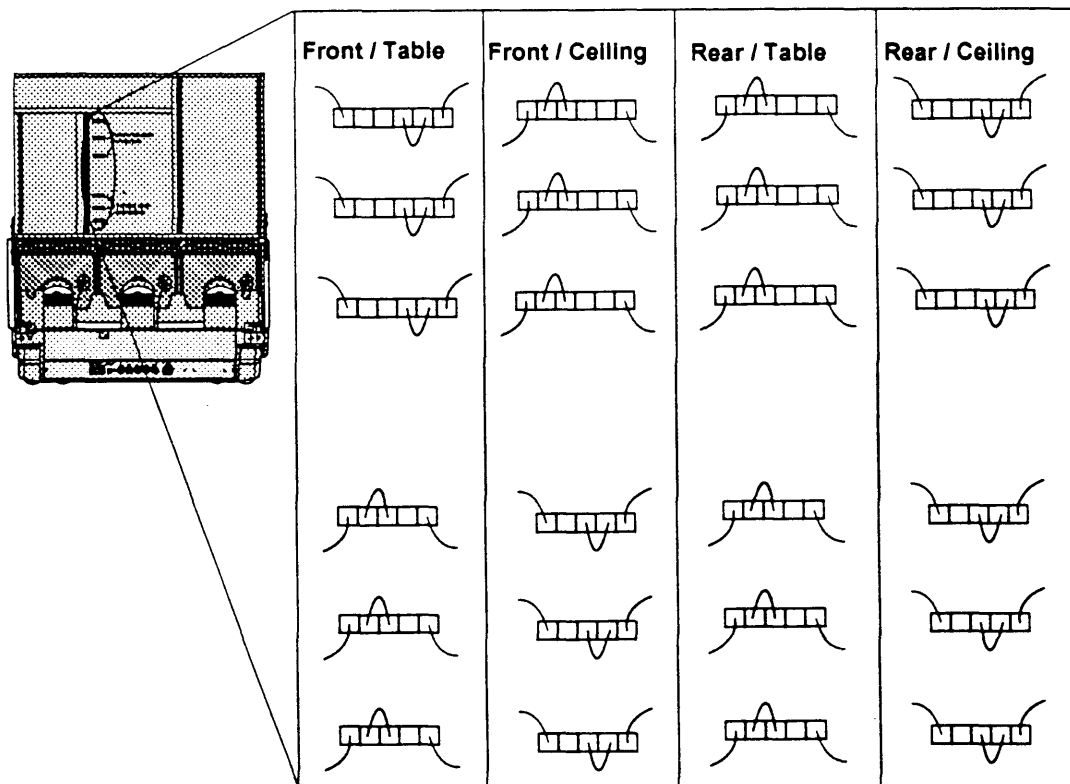

## C : Convergence connectors

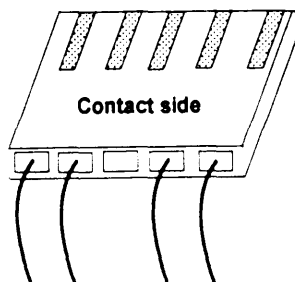

Three connectors are used. The position of these connectors has to be changed when switching from one configuration to another.

With an open chassis, for a *front-table* or a *rear ceiling* configuration, the connectors must be plugged in with the *contacts upwards* (away from the tubes). For a *front-ceiling* or *rear-table* configuration, the connectors must be plugged in with the *contacts facing the tubes*

# INSTALLATION SET UP

After scan inversion, close the chassis and close the top cover. Reconnect the power cord to the wall outlet.

## Note

Switching over from floor to ceiling or vice versa requires a complete readjustment of picture geometry and convergence.

Check of the correct connector position


Note : this check procedure can only be done after power (mains) connection. So, first continue with the *projector set up* and the *connections* and then return to this checking procedure.

Switch on the BARCODATA 701 and press **ADJUST** to start up the adjustment mode. Select with the arrow keys 'Service' and press **ENTER**. The service menu will be displayed. Select 'IDENTIFICATION' and press **ENTER**. On this screen, information is given about the projectors configuration.

Configuration when leaving the factory : ceiling/front configuration.

Follow next procedure to check the configuration :


- switch on the projector.
- the projector starts up on the last selected source.
- press the **ADJUST** key.
- highlight 'service' with the arrow keys and press **ENTER**.

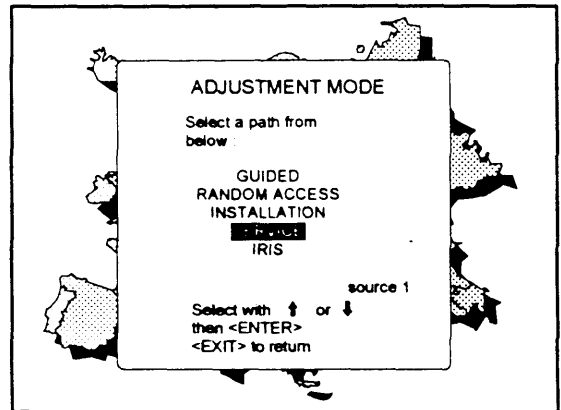


The 'service mode menu' will be displayed

- select with the arrow keys 'identification' and press **ENTER**.

The projector displays the Identification screen

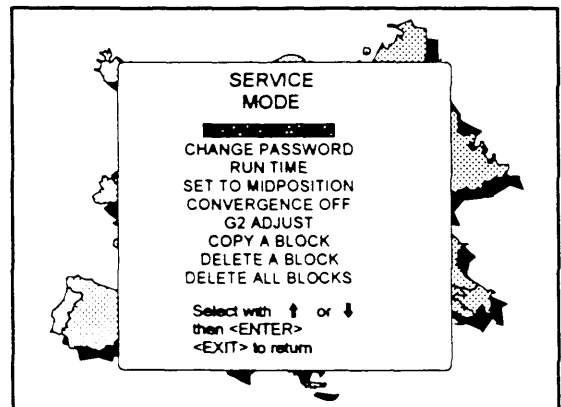

This screen gives information about the projector configuration in the subject 'config'.

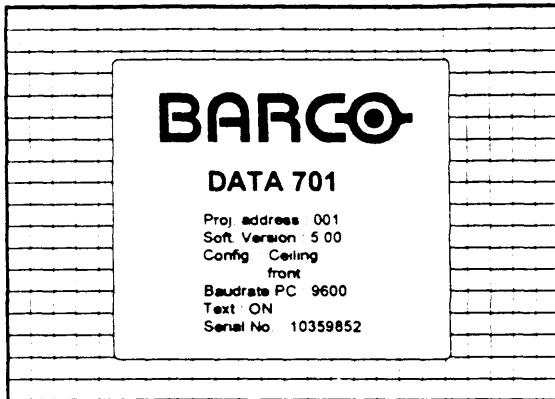

814

**PROJECTOR SET UP**

**Projector address**

**Power up mode**

**Baud rate for communication with PC or MAC.**

**Password mode**


## Projector Set Up

The DIP switches on the CPU unit allow a set up of the projector.

- projector address (4 DIP switches)
- Power up (1 DIP switch)
- baud rate (1 DIP switch)
- password (1 DIP switch)

Getting access to the DIP switches

- Open the top cover (see installation set up)
- Open the chassis (see installation set up)

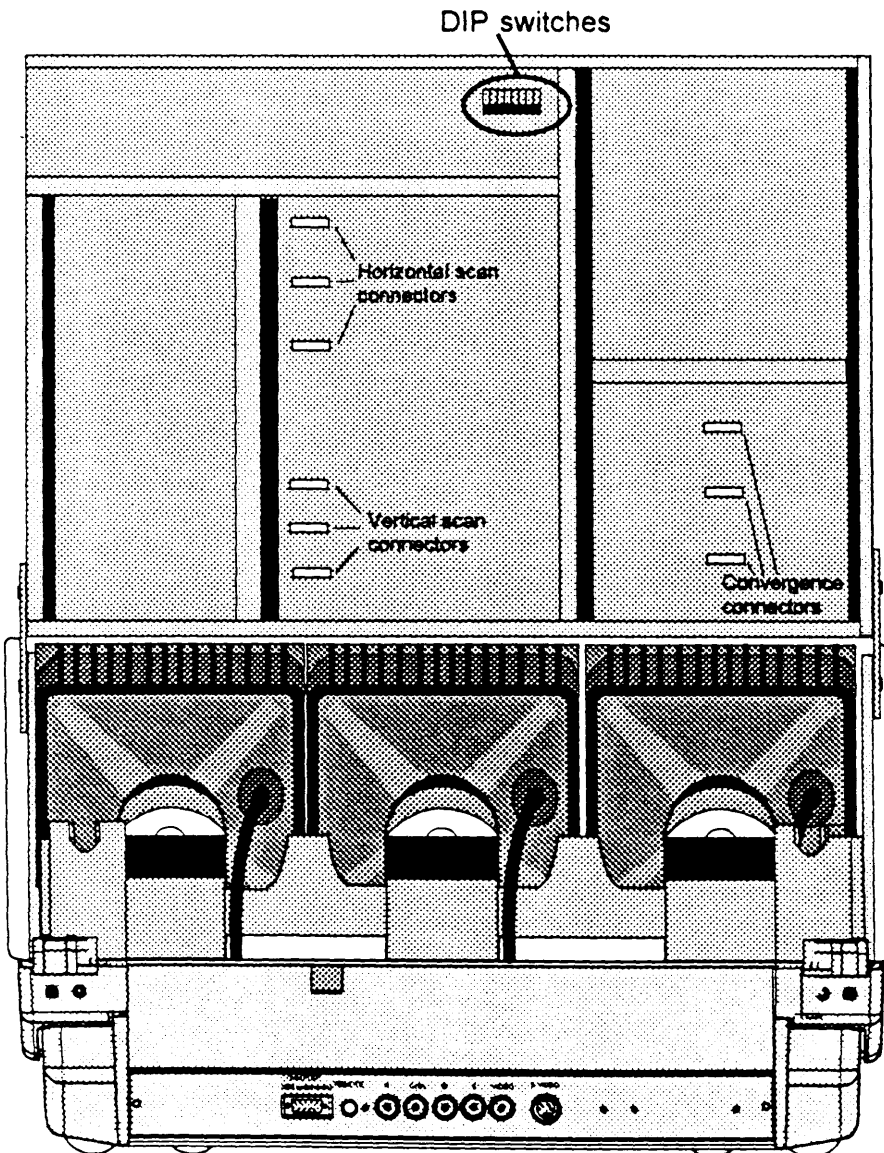

# PROJECTOR SET UP


## a) Setting the projector address.

The projector's address may be set to any value between 0 and 16. When the address is set, the projector can be controlled now by a :

- RCU700 for addresses between 0 and 9.
- computer, e.g. IBM PC (or compatible), Apple MAC, etc., for addresses between 0 and 16.

Note : a projector will respond to a RCU700 set to an address of '0' regardless of what address is set in the projector itself.

Address setting is a hardware set up of your projector which must be done during installation. Therefore 4 DIP switches are provided on the controller unit.

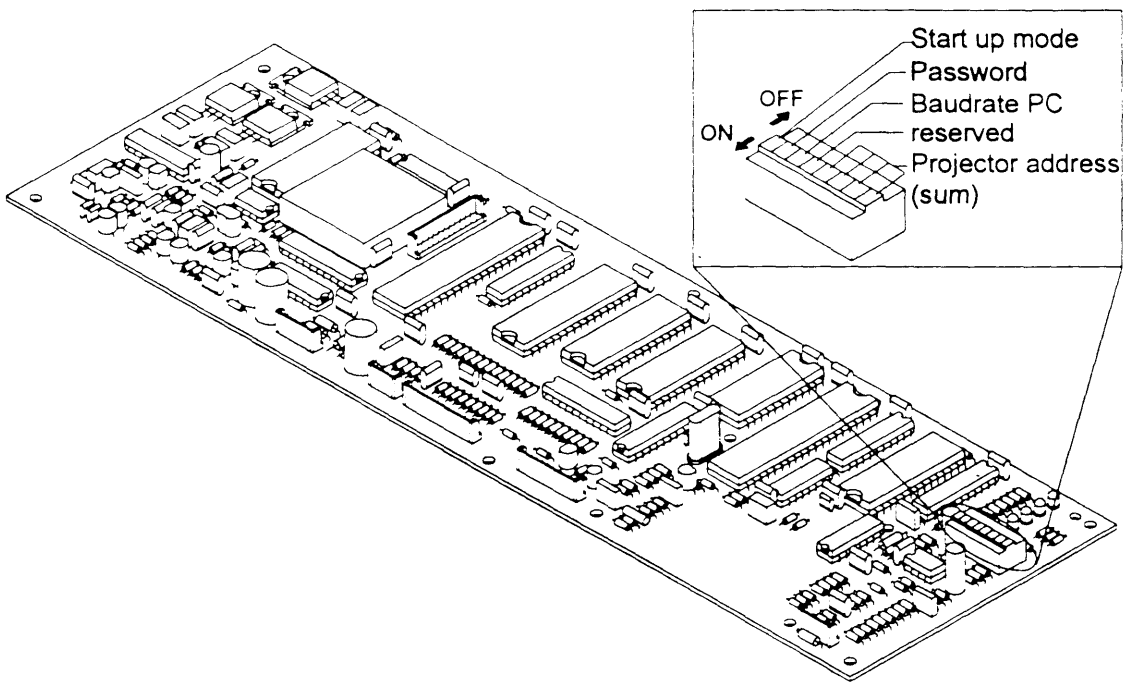


Each DIP switch has its own decimal value. The summary of the values associated to those DIP switches give the address (see table 'address setting').


Switch	Value
1	1
2	2
3	4
4	8

Example : address 7

DIP switch	1	2	3	4
setting	1	1	1	0

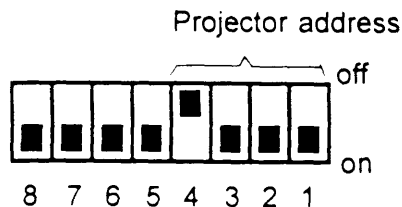

Note : With the address button on the RCU700, the projector will display its own address on the screen. Once the address button is pressed, to continue using your RCU, it is necessary to enter an address with the numeric keys, even when the address remains the same.

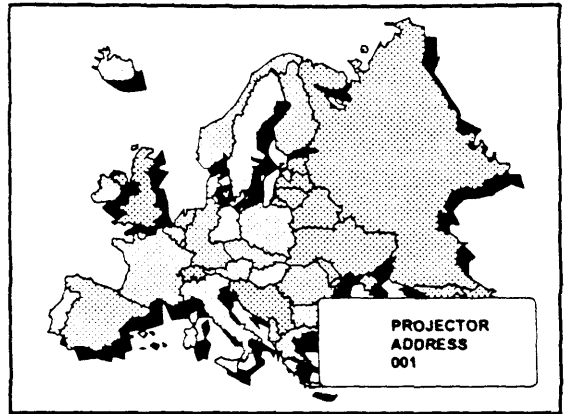


**b. Power up mode.**

The projector can start up in two different modes. The start up mode is determined by the position of DIP switch 8 on the controller unit.

Position of the DIP switch 8 :


ON : operational mode  
 OFF : stand-by mode

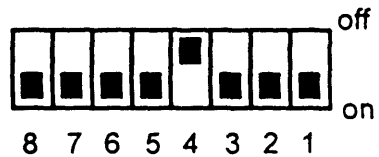

Power up mode

**1. Operational mode :**

When the power switch on the front of the projector is pressed, the projector displays the last selected source if available, otherwise it remains on that source number until the source becomes available.

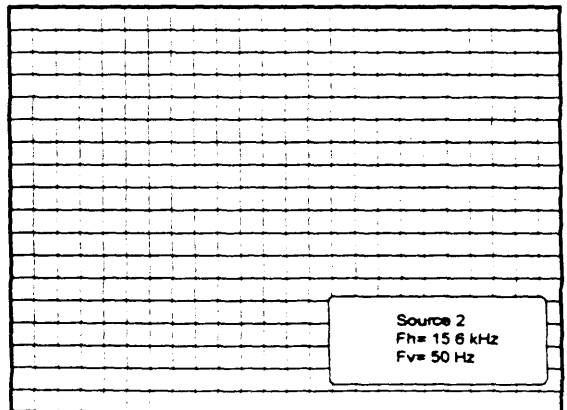



## 2. Stand by mode :

When the power switch on the front of the projector is pressed, the projector goes into stand-by mode. The stand-by key on the RCU700 or the local keypad is used to turn the projector ON and OFF.


## c. Baud rate for communication with a computer, e.g. IBM PC (or compatible), MAC, ....

*Computer communication is only available when the optional RS232 communication port is installed.*

The communication speed between projector and computer, e.g. PC or MAC, has 2 possible settings. With DIP switch 6 on the controller unit, labelled 'Baud rate PC' it is possible to select the baud rate (communication speed).

Position of DIP switch 6

ON : 9600 baud  
OFF : 1200 baud

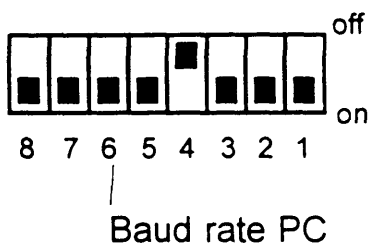


## d. Password mode

With DIP switch 7 on the controller unit, the important projector adjustments can be protected with a password. When the password feature is enabled, the customer has to enter a password before he can enter the specific adjustment (for more information about password setting and reprogramming the password, see Installation adjustment).

When the password menus are disabled (adjustments are unprotected), all adjustments are free. This position of the DIP switch is useful for qualified service technicians because they do not need a password during service.

Position of the DIP switch 7 :

ON : password disabled  
OFF : password enabled

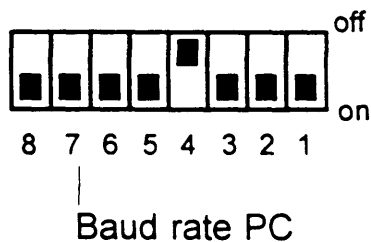




**POWER CONNECTION**

**POWER (MAINS) CONNECTION**

**SS POWER CONNECTION**

## Power (mains) cord connection

Use the supplied power cord to connect your projector to the wall outlet. Plug the female power connector into the male connector at the front of the projector.

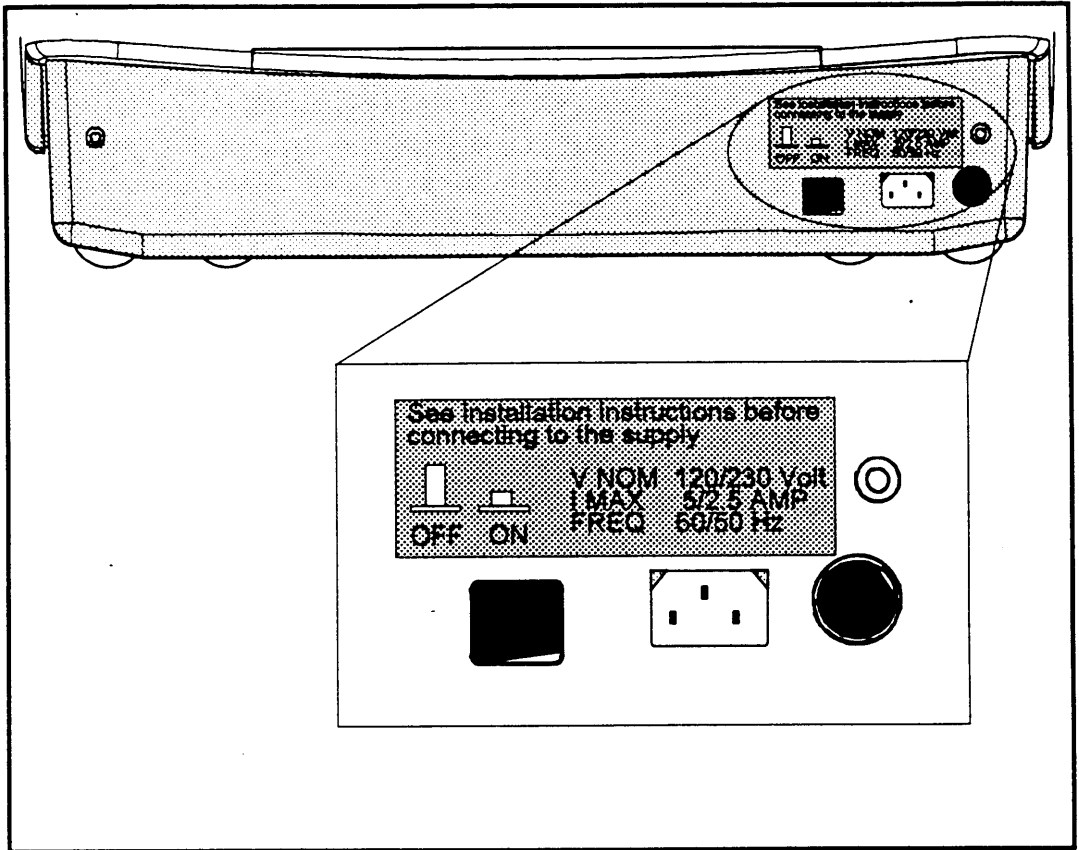

## Input power (mains) voltage adaptation.

### Attention

The BARCODATA 701 - 90 00719 leaves the factory to operate on a mains (power) input of 120 Vac.

## Fuses

### Warning

*For continued protection against fire hazard :*

- replace with the same type of fuse
- refer replacement to qualified service personnel

Fuse type : 2 x T5A/250V (Barco order number : 31 4104)

## Switching on/off

The projector is switched ON and OFF using the power (mains) switch ON/OFF.

Pressed : ON

Not pressed : OFF


The projector can start now in the 'operational mode' (image displayed) or in the 'stand by mode', depending on the position of the 'power up' dip switch on the controller unit. This DIP switch is set during installation by a qualified technician. If you want to change this start up mode, call a qualified technician.

Stand by indication lamp :

no light up : projector in operational mode

red : projector is in stand by.

Leds on the front plate of the projector

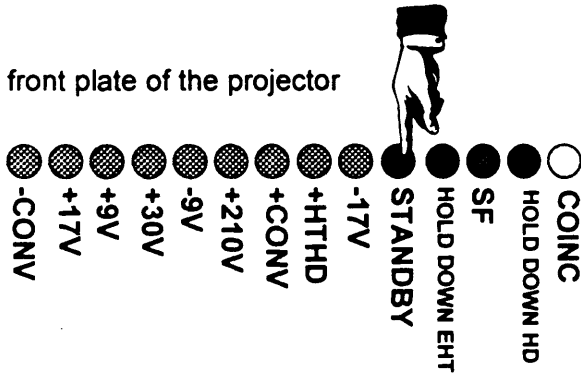



## INSTALLATION ADJUSTMENTS

Overview flow chart installation mode

Scheimpflug adjustment



Optical lens focusing

Raster centering

CRT projection angle adjustment

Alignment of the projector

Entering the adjustment mode

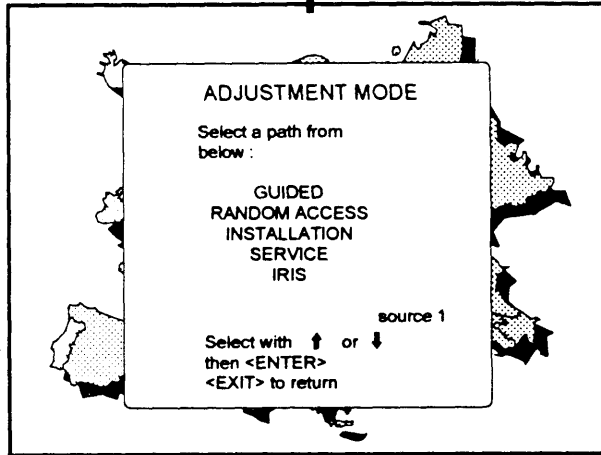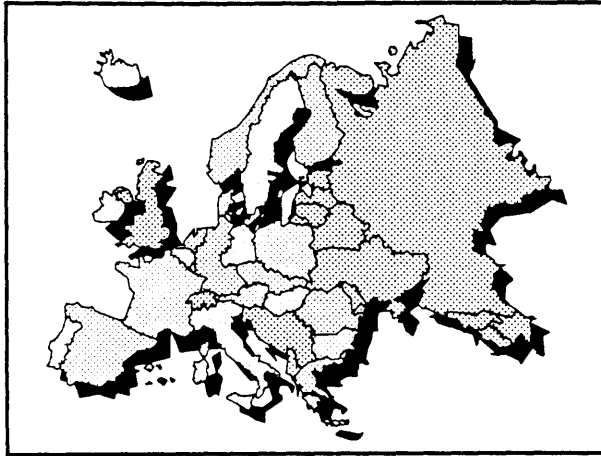

**Installation**  
(only for qualified technician)

**Random Access Adjustment**

**Guided Adjustment**


**Service**

**IRIS**  
(only with an IRIS800)



# INSTALLATION ADJUSTMENTS

## Overview flow chart installation mode.

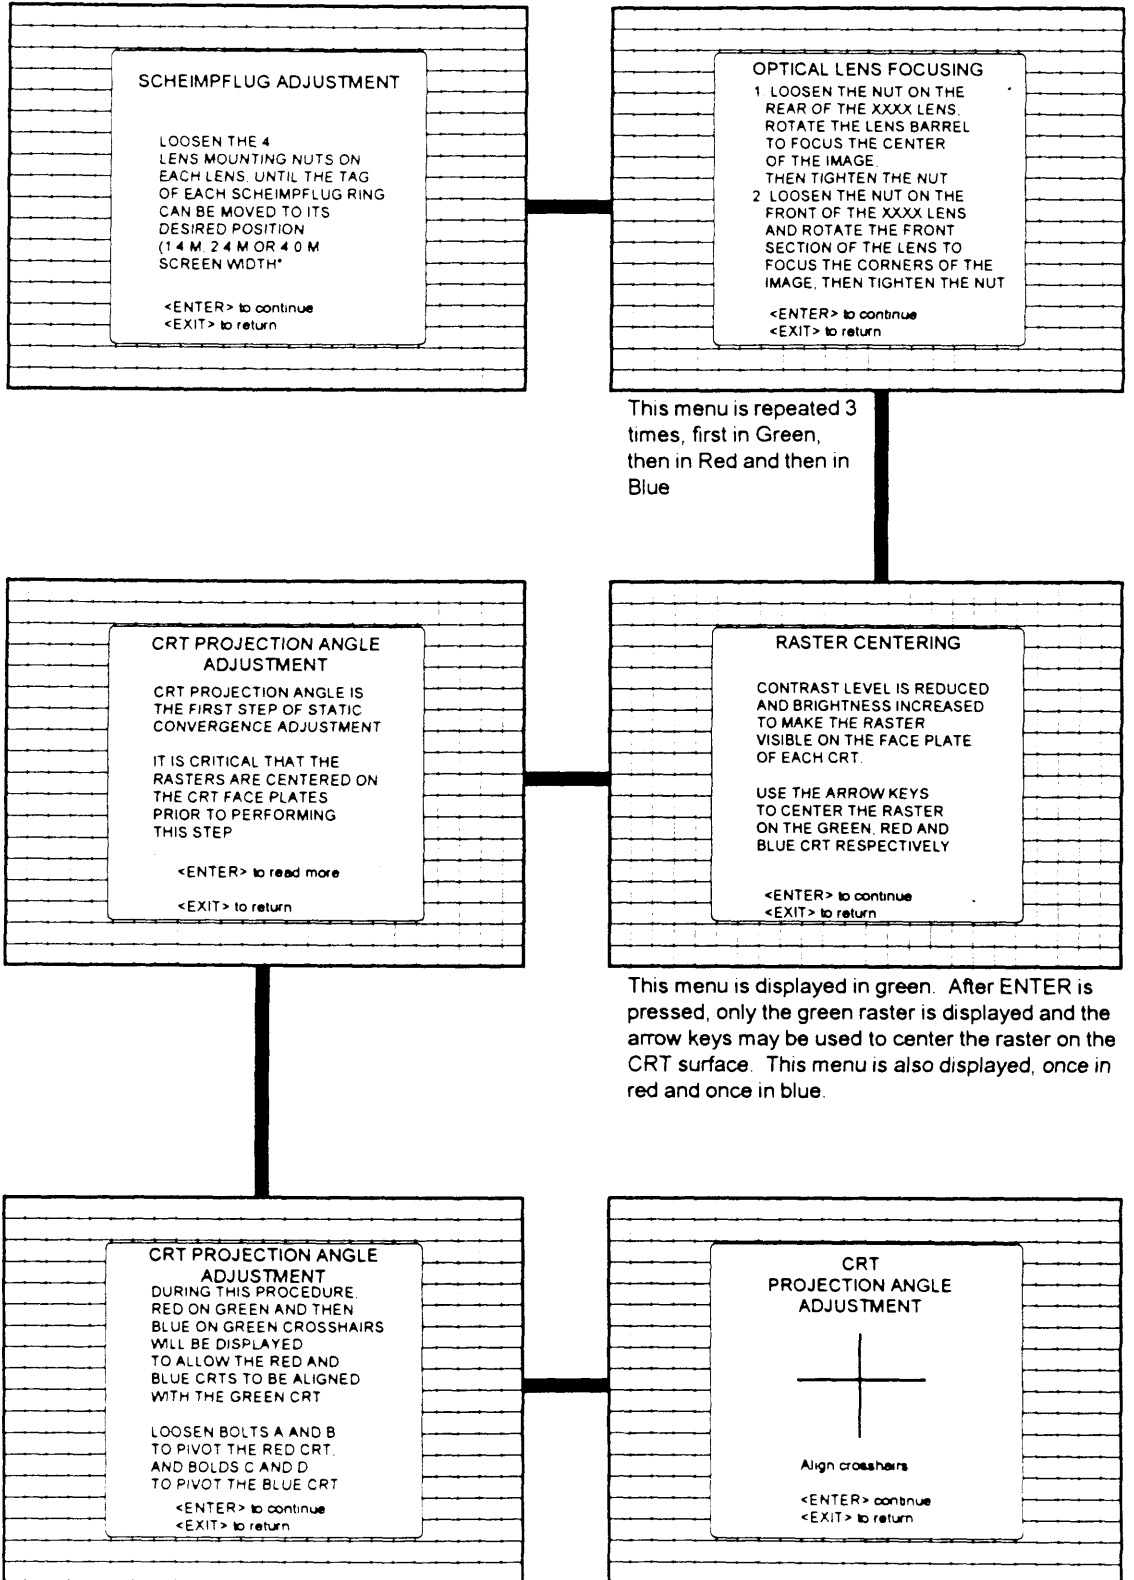


## Installation mode start up

It will be necessary to perform several mechanical adjustments while in the installation mode. Remove the top cover in order to gain access to the adjustment points (see Access to controls).

Two possible ways to enter the installation mode :


a) using the RCU700.

Press the **ADJUST** key.  
The projector displays the path selection menu.

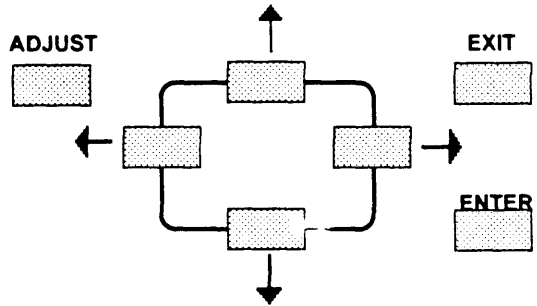


b) using the local keypad.

Press the **ADJUST** key.  
The projector displays the *General access menu*.

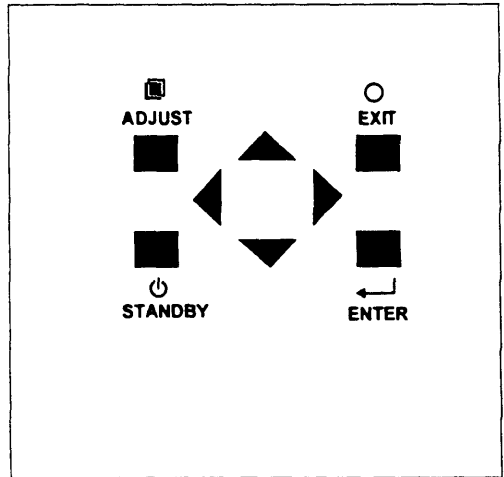


Use the arrow keys to highlight enter **ADJUST** and press **ENTER**. The path selection menu will be displayed.

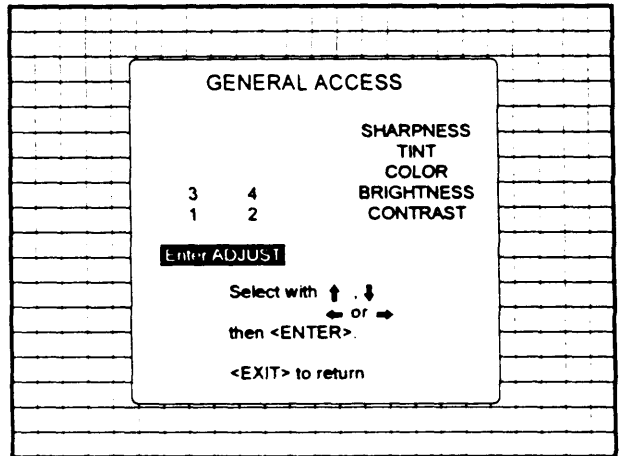

# INSTALLATION ADJUSTMENTS

Use the arrow keys to highlight Installation and press **ENTER**.

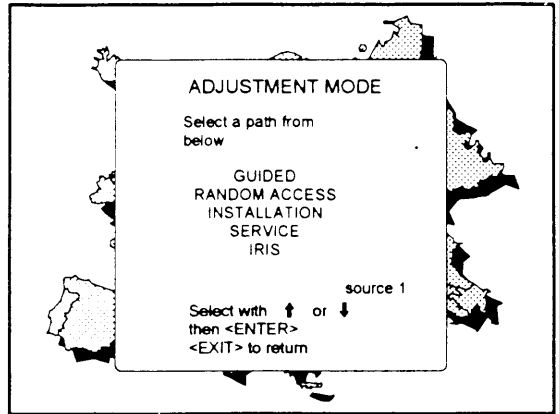

**ENTER** continues displaying a WARNING.


**EXIT** returns to operational mode.

**ADJUST** returns to operational mode.

A warning will be displayed on the screen.

If you are qualified installation or service personnel, press **ENTER** to start up the installation mode.

When entering the installation mode, the projector will automatically switch to the internal pattern on 15 kHz/50 Hz.

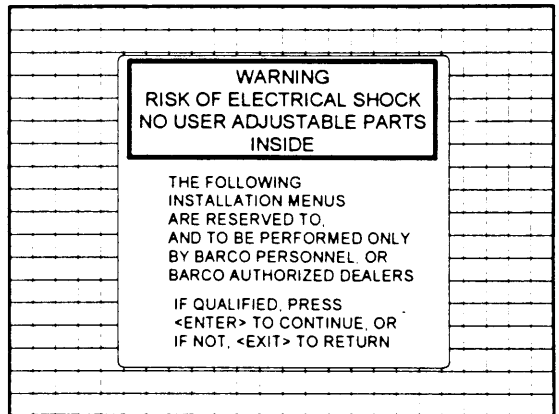

**ENTER** asks for your password.

**EXIT** returns to the path selection menu.

When the password mode is active, your password will be asked.

Your password contains 4 digits.

a) Adjusting the projector with the RCU700.

Enter the digits with the numeric keys on the RCU700.

Example : 2 3 1 9



For each digit entered, a 'X' appears on the screen under the displayed text 'enter password'.

When your password is correct, you get access to the 'Adjustment mode'.

When the entered password is wrong, The message '*Wrong password !!!*' will be displayed. The projector stays on the previous selected item.

Factory programmed password :

1992

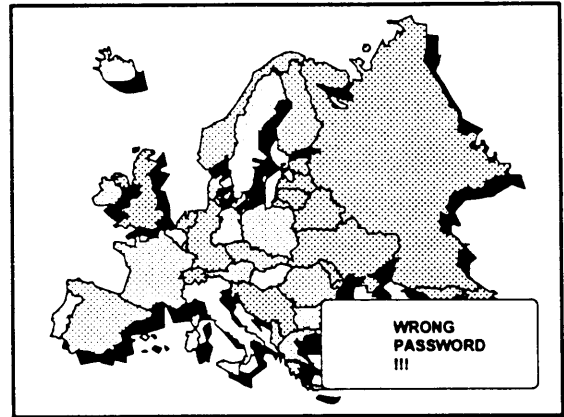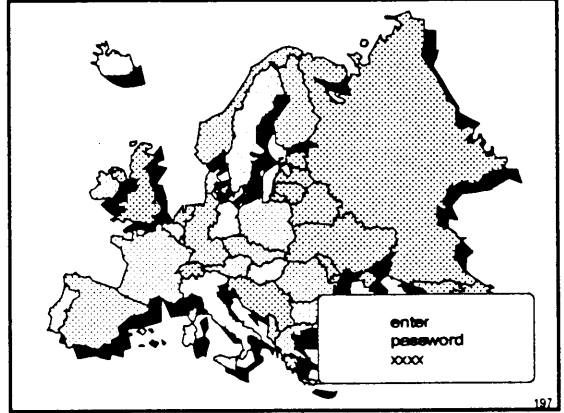


b) adjusting the projector with the local keypad.

When the 'compose password' menu is displayed, select with the arrow keys the first digit of your password and press **ENTER**. Continue by selecting the second digit with the arrow keys and press **ENTER**. Handle in the same way for the third and fourth digit.

When your password is correct, you get access to the 'Adjustment mode'.

When the entered password is wrong, the message '*Wrong password*' will be displayed.

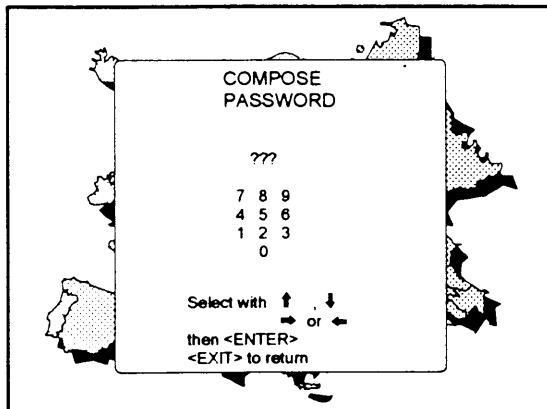

## Scheimpflug adjustment


The scheimpflug correction can be adjusted separately for the three tubes within 3 ranges:

- range 1 : 1.4 m (55") to 1.9 m (75"), optimum screen width 1.4 m (55")
- range 2 : 1.9 m (75") to 3.2 m (126"), optimum screen width 2.4 m (94")
- range 3 : 3.2 m (126") to 6 m (236"), optimum screen width 4 m (157")


A correct scheimpflug setting gives the possibility to focus the lenses for a sharp image in all screen areas.

To change the setting from one range to another, some mechanical actions have to be done.


range 1  
 min. SW : 1.40 m (55")  
 max. SW : 1.90 m (75")

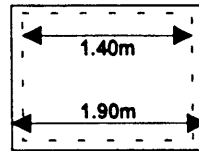

range 2  
 min. SW : 1.90 m (75")  
 max. SW : 3.20 m (126")

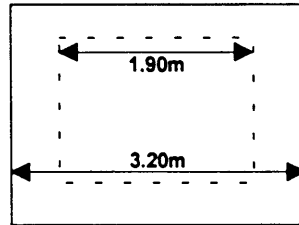


range 3  
 min. SW : 3.20 m (126")  
 max. SW : 6.00 m (236")

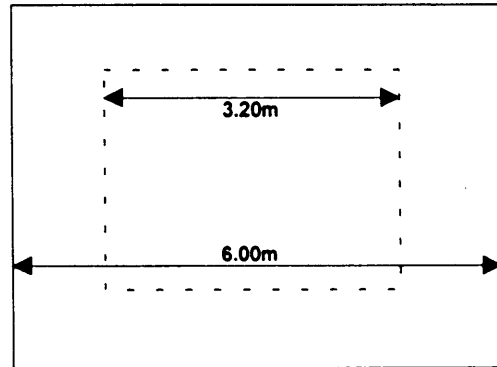


# INSTALLATION ADJUSTMENTS

1. Open the top cover (see Getting access to controls)
2. Loosen the lens bolts (do not remove them), and slide the lens to the front until the scheidflug ring can move freely (nutdriver 10 mm or screwdriver 6mm).

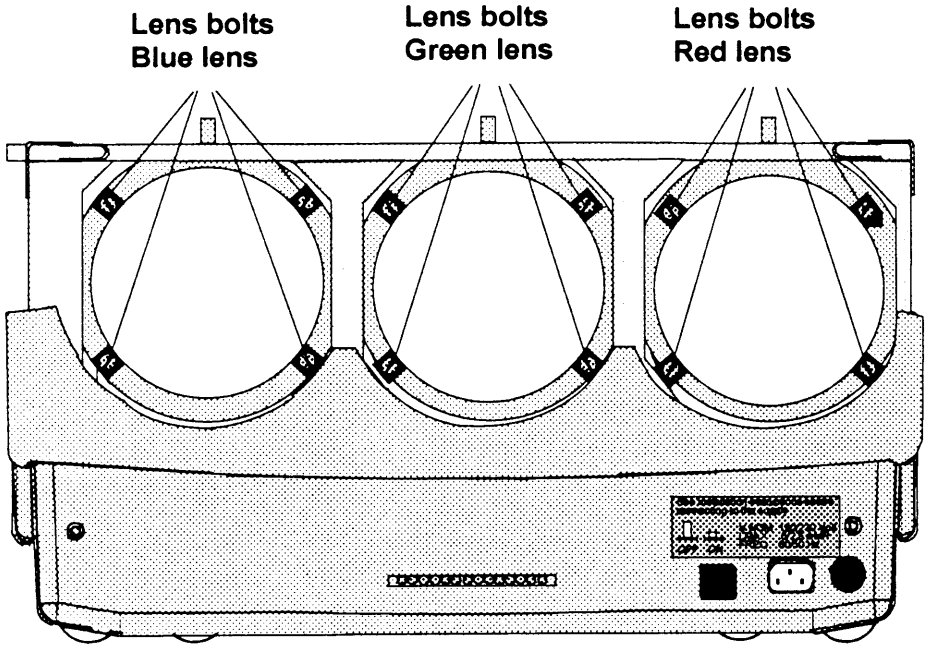

3. Push the scheidflug ring to its correct position (front view).

range 1 : to the right  
range 2 : in the middle  
range 3 : to the left

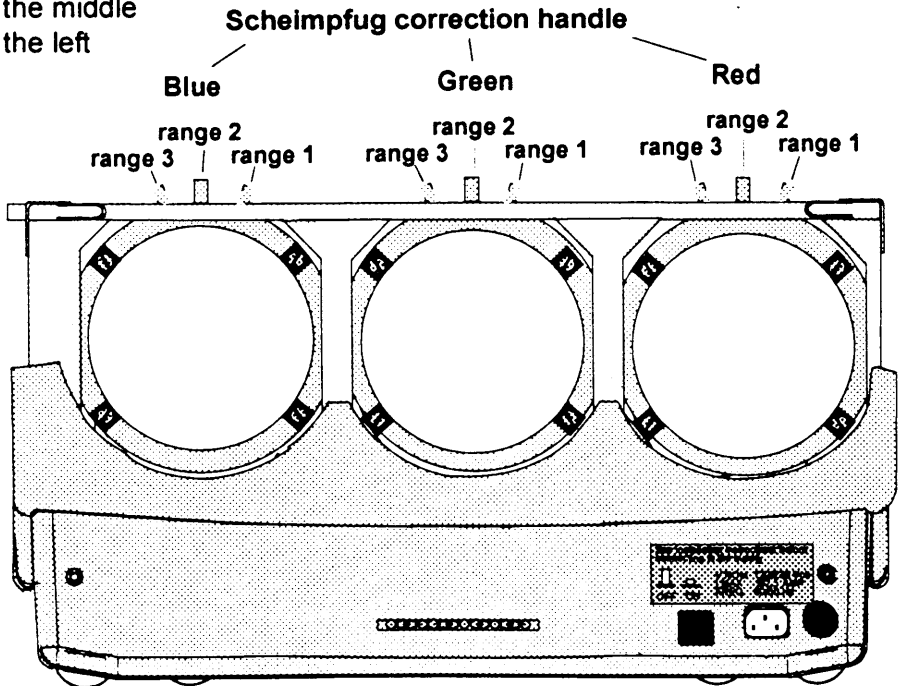

4. Push the lens back till it fits in the ring and secure the four bolts.

## Optical lens focusing

The optical focusing procedure is performed separately for each lens. The appropriate CRT will be switched on as the user proceeds through the optical focusing adjustment sequence.


Each lens has two focus adjustment points, one at the rear of the lens and one at the front. The center of the projected image is focused by loosening the wing nut at the rear end of the lens and rotating the lens barrel until the center of the image is clearly focused. The corners of the projected image are focused by loosening the wing nut at the front end of the lens and rotating the lens barrel until the corners of the image are clearly focused. Repetition of these adjustments may be necessary to optimize optical focusing. Press **ENTER** key to continue.

**OPTICAL LENS FOCUSING**

1. LOOSEN THE NUT ON THE REAR OF THE XXXX LENS, ROTATE THE LENS BARREL TO FOCUS THE CENTER OF THE IMAGE, THEN TIGHTEN THE NUT
2. LOOSEN THE NUT ON THE FRONT OF THE XXXX LENS AND ROTATE THE FRONT SECTION OF THE LENS TO FOCUS THE CORNERS OF THE IMAGE, THEN TIGHTEN THE NUT.

<ENTER> to continue  
 <EXIT> to return

**ENTER** continues to Raster centering.  
**EXIT** returns to scheinpfug adjustment  
**ADJUST** returns to operational mode.

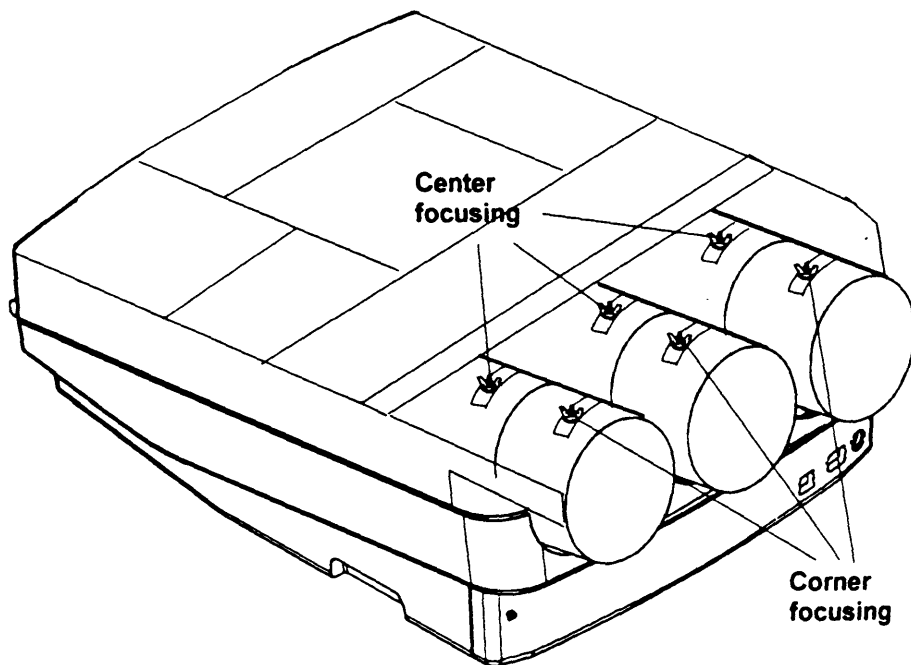

XXXX = respectively red, green and blue.




# INSTALLATION ADJUSTMENTS

## Electrical focusing

The electrical focus for red, green and blue is factory preset. When they have to be readjusted, follow the procedure as described below :

- Be sure the lenses are correctly focused.
- Open the top cover.
- Adjust separately the focus control for red, green and blue for the sharpest image on the screen.

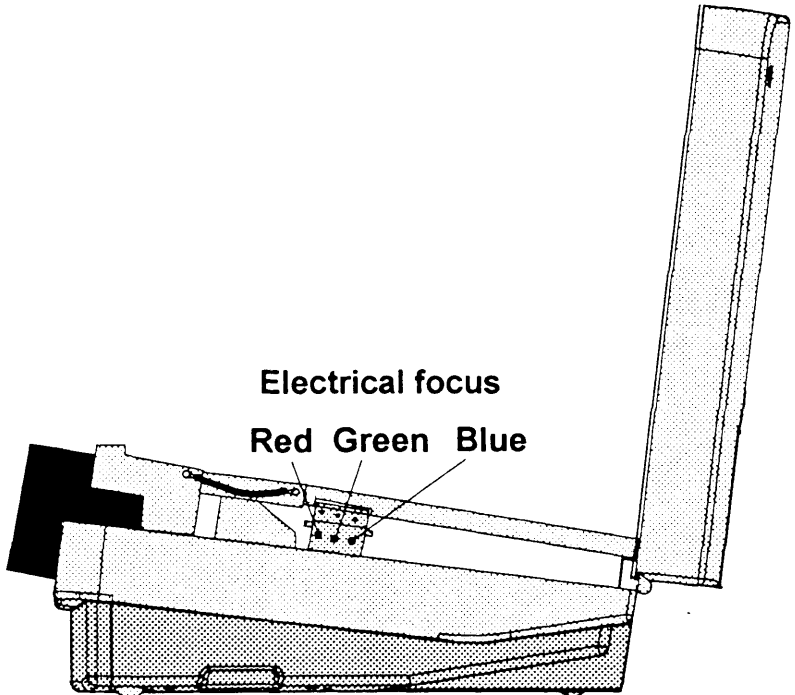

## Raster centering



The raster must be centered on the CRT screen surface of each tube, therefore, it is necessary to look into the lenses.

*Caution : To avoid eye discomfort while performing these adjustments, reduce the contrast and gradually increase the brightness level until the raster becomes visible behind the image.*


**Warning : In order to ensure maximum CRT longevity and to avoid CRT damage, do not shift the raster outside the phosphor area of the CRT.**

Press **ENTER** to display the raster on the green CRT.

Look into the green lens and shift the raster with the arrow keys until it is centered in the middle of the CRT faceplate.

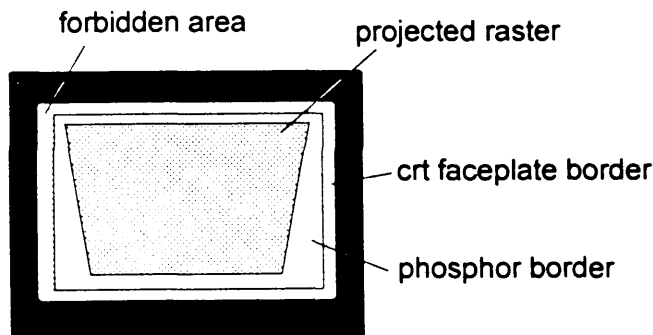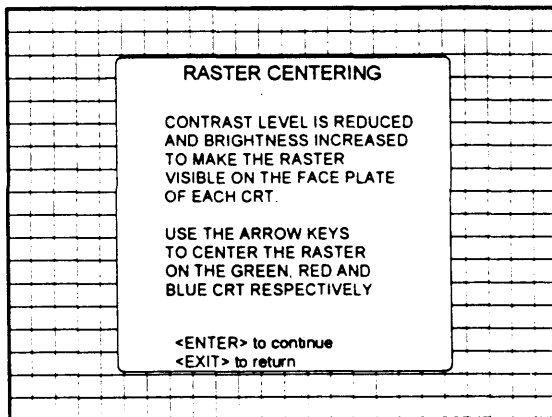


# INSTALLATION ADJUSTMENTS

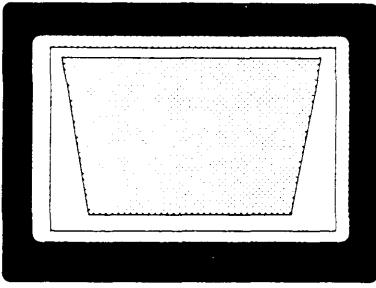

— correct raster position

wrong raster position

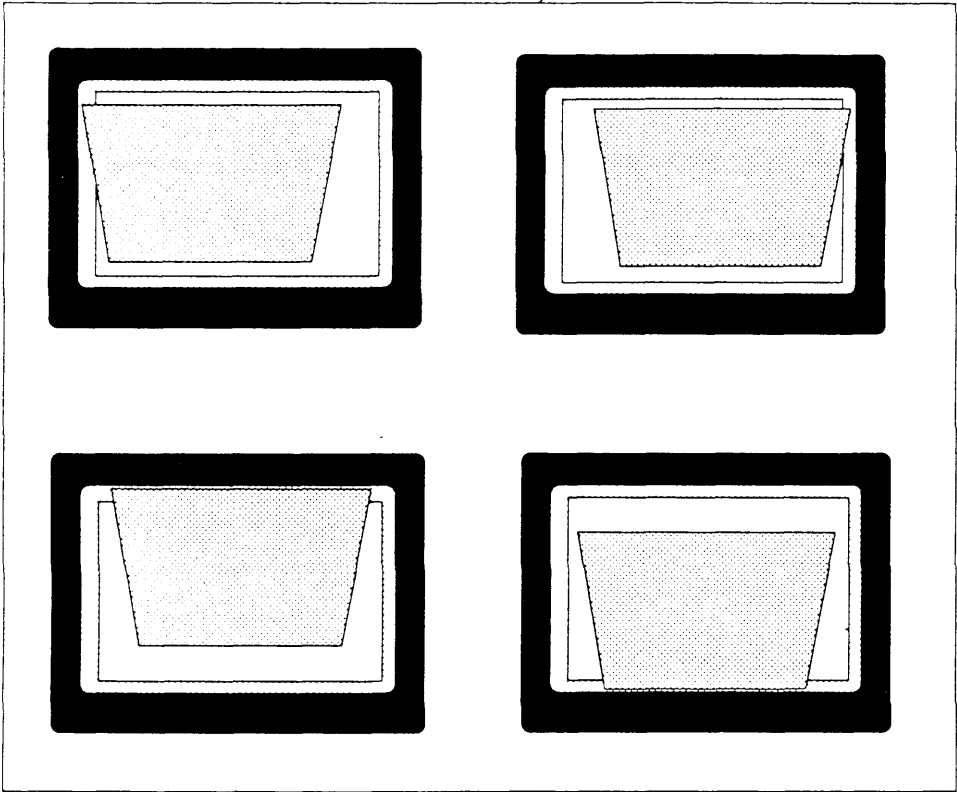

Press **ENTER** to activate the raster on the Red CRT faceplate.  
Shift the raster with the arrow keys until the raster is centered in the middle of the CRT faceplate.

Press **ENTER** to activate the raster on the Blue CRT faceplate.  
Shift the blue raster with the arrow keys until the raster is centered on the CRT faceplate.

Press **ENTER** to continue with the CRT projection angle adjustment

**ENTER** continues to CRT Projection angle Adjustment.

**EXIT** returns to Optical focusing.


**ADJUST** returns to operational mode.

## CRT projection angle adjustment


The projection angle of the red and blue CRT's is dependent on the desired size of the projected image. If the centers of green, blue and red do not coincide, the CRT projection angle must be adjusted. Never try to correct this misalignment with the shift correction or the static convergence controls. These controls may only be applied to correct small errors which cannot be corrected by the CRT angle adjustment.

Be sure that the rasters are centered on the CRT face.

Press **ENTER** to start the CRT angle adjustment procedure. A crosshairs (green and red) will be displayed on the screen.

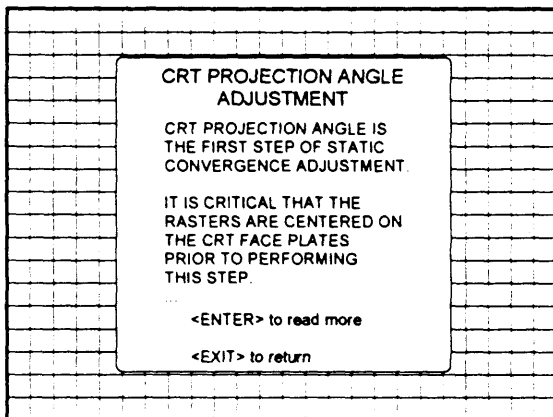


**ENTER** continues with the second part of the CRT projection angle adjustment.  
**EXIT** returns to Raster shift adjustment.

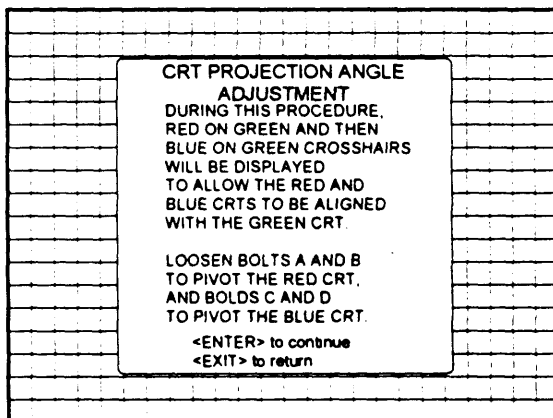




**ENTER** continues to the crosshairs alignment.  
**EXIT** returns to raster shift adjustment  
**A JUST** returns to operational mode.

# INSTALLATION ADJUSTMENTS


Projection angle correctly aligned for screen width SW1

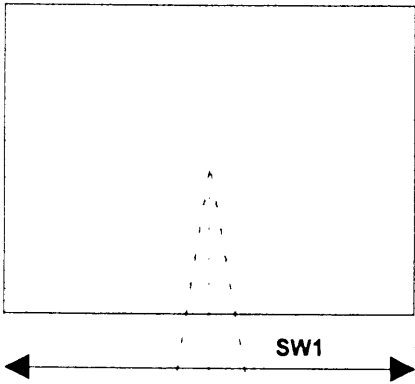

Projection angle mis-aligned for new screen width SW2. Re-alignment is necessary.

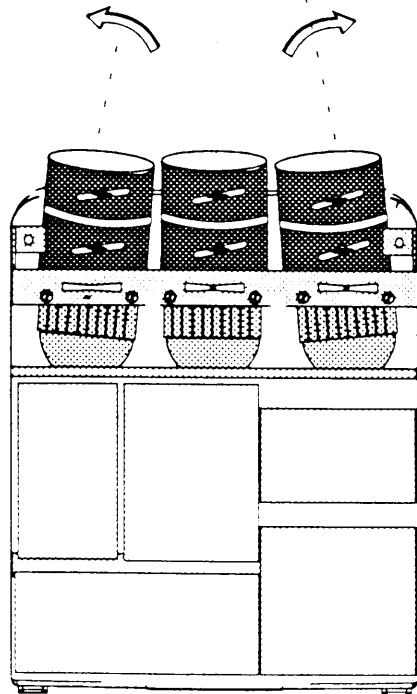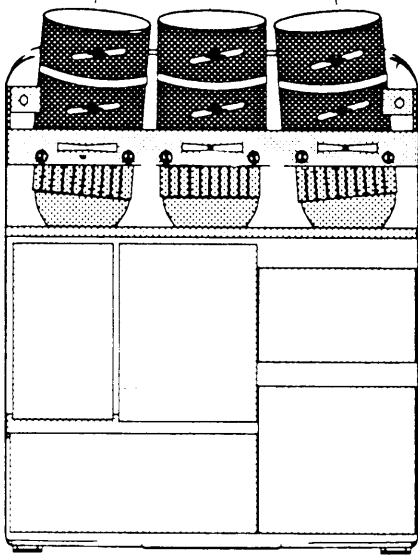
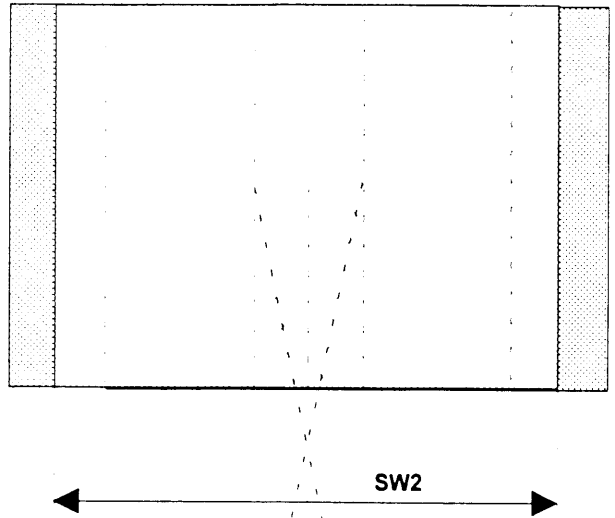


Screws A, B, C and D : upper fixation latch.  
 Screw A', B', C' and D' : lower fixation latch.

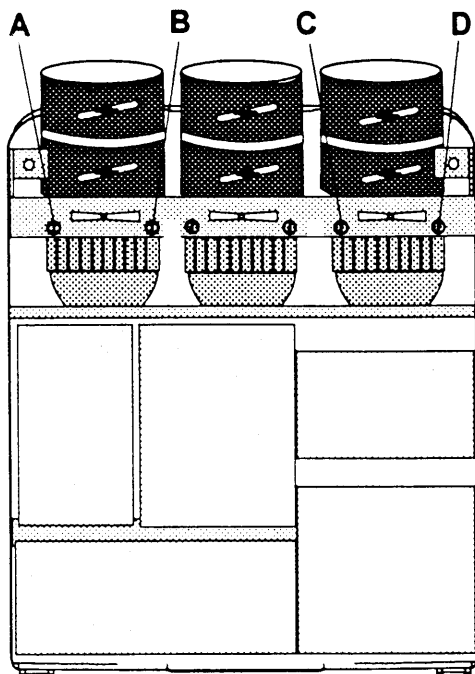


Loosen the four hexagon screws A, A', B and B', upper and lower fixation latch. These screws fasten the cooling house of the red tube.

Pivot the red CRT until the center of the red image coincides with the center of the green image. If the angle of the red CRT is corrected, tighten the four bolts.

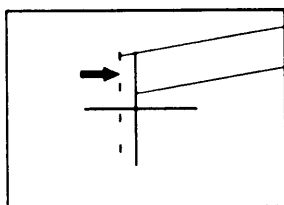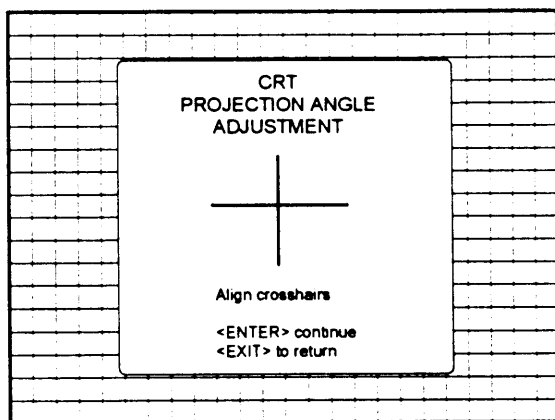

red crosshair  
 green crosshair

Move the red CRT towards the green CRT

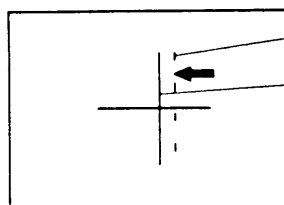



red crosshair  
 green crosshair  
 Move the red CRT to the outside, away from the green CRT

**ENTER** continues to blue and green crosshairs.  
**EXIT** will return to CRT projection angle adjustment.

# INSTALLATION ADJUSTMENTS


Loosen the four hexagon screws C, C', D and D', upper and lower fixation latch. These screws fasten the cooling house of the blue tube.

Pivot the blue CRT until the center of the blue image coincides with the center of the green image. If the angle of the red CRT is corrected, tighten the four bolts.

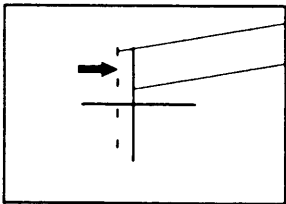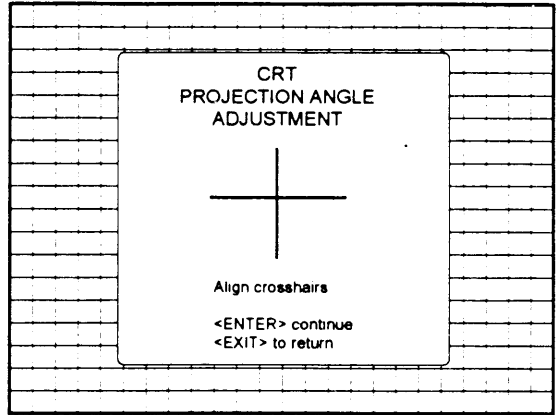

blue crosshair  
green crosshair

Move the blue CRT to the outside, away from the green CRT

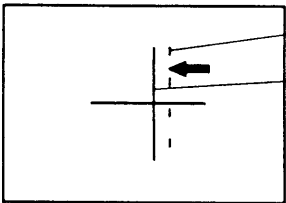

blue crosshair  
green crosshair

Move the blue CRT towards the green CRT

**ENTER** continues to the path selection menu.


**EXIT** returns to the CRT projection angle adjustment.

After finishing the installation adjustments procedure, the 'Path selection' menu S1 returns on the screen. You are now able to start the alignment procedure for the projector. You have the choice between :

- Guided Adjustment Procedure
- Random Access Adjustment Procedure

The result of both procedures will be the same. More explanation about both procedures is given in the owners manual.

The following page gives an overview of the image corrections.

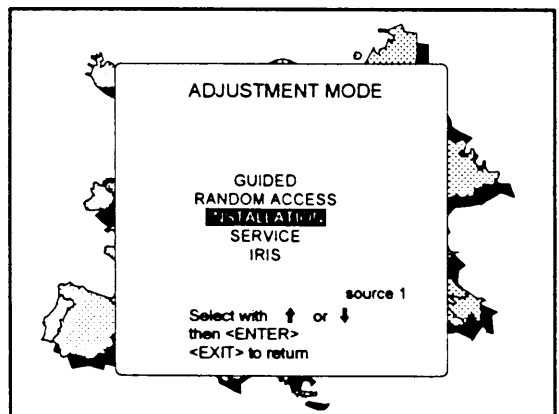

**Alignment of the projector.**

Overview of the corrections

For detailed information about these corrections and procedures to be followed, see owner's manual. (pages given hereafter are for the random access adjustment mode)

Shift corrections for the Red, Green and Blue image ..... 96

Left-Right adjustments ..... 98

- Vertical center line bow and skew
- Left and right keystone adjustment
- Left and right bow adjustment
- Horizontal size adjustment

Top-Bottom adjustments ..... 105

- Horizontal centerline bow and skew
- Top keystone adjustment
- Top bow adjustment
- Bottom keystone adjustment
- Bottom bow adjustment

Size-linearity adjustments ..... 112

- Horizontal size adjustment
- Vertical linearity adjustment
- Vertical size adjustment
- Horizontal phase adjustment

Convergence adjustments ..... 120

- Green only
- Red on green
- Blue on green

Blanking adjustment ..... 115

- Top-Bottom, Left-Right

Color adjustments ..... 89



**Ceiling mount adapter 700**

Ceiling mount adapter for 700 projectors. This interface makes it possible to mount the 700 projector to the BARCO ceiling mounted support for 600 projectors (art. no. 98 25550).

BARCO order number for the Ceiling mount adapter 700 : 98 27850.


The shipped box contains :

ref. on drawings

- 1 ceiling mount adapter
- 4 bolts M6x35 DIN933 (art. no. 36 23482) ②
- 4 fixation blocks (art. no. 80 3781) ③
- 4 bolts M5x35 DIN933 (art. no. 36 23378) ④
- 4 washers 53 DIN125 (art. no. 36 73796) ⑤


Depending on the type of bottom cover, follow the installation instructions as described:

*a) Bottom cover with fixation supports*

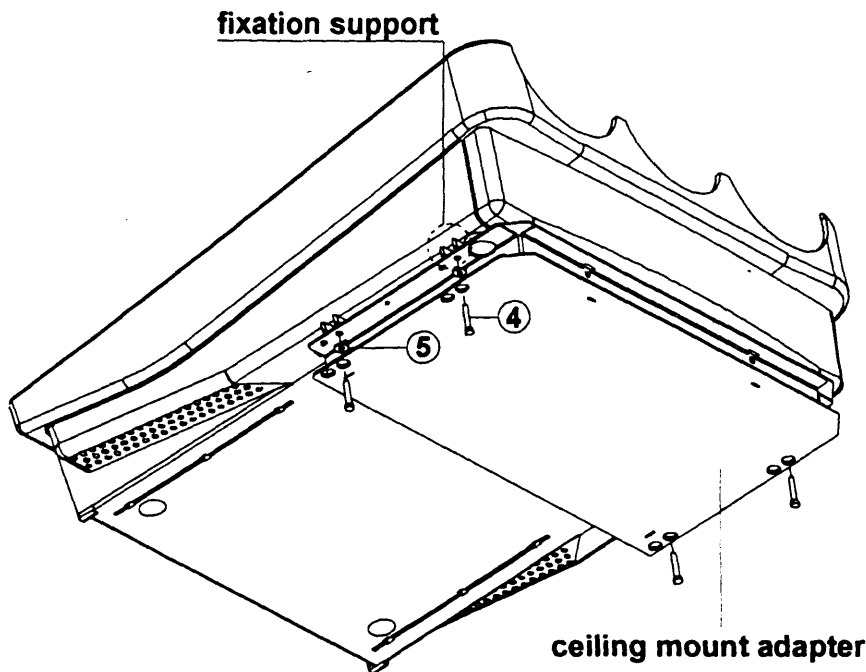

- Place the projector with its front feet into the provided holes of the ceiling mount adapter.
- Secure the ceiling mount adapter to the projector's fixation supports using the bolts ④ and washers ⑤. Refer to drawing above for the correct holes in the interface.

b) Bottom cover without fixation supports.

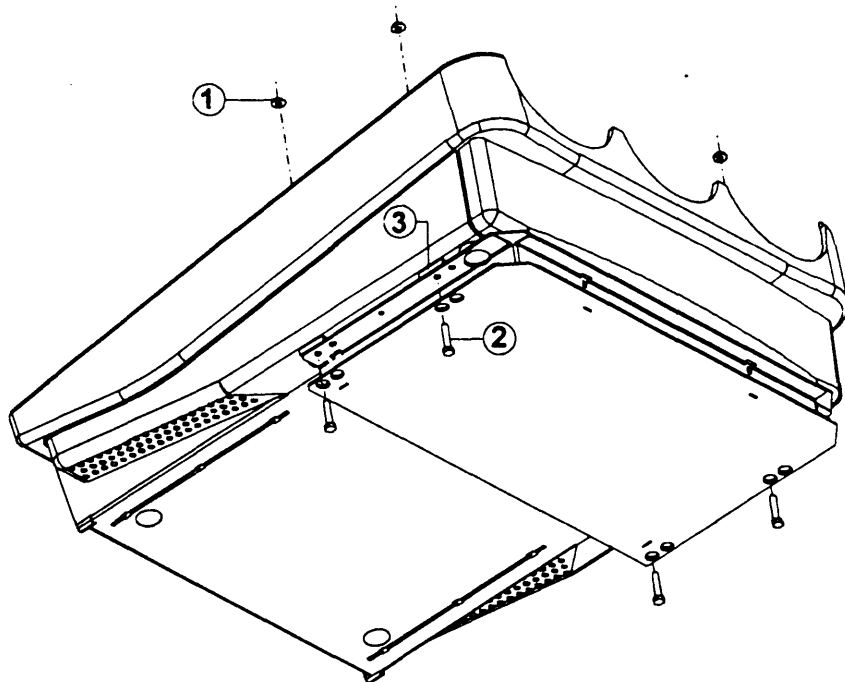


- Open the top cover.
- Remove the nuts ① securing the metal CRT frame unit to the bottom cover.
- Remove the bolts.
- Place the projector with its front feet into the provided holes of the ceiling mount adapter.
- Insert the 4 fixation blocks ③ between the bottom cover and the ceiling mount adapter.
- Insert the bolts ② (refer to drawing for the correct holes) and secure the mechanical interface to the bottom cover and the metal CRT frame unit with the previously removed nut ①.

## APPENDIX B : CEILING MOUNT KIT FOR 700 PROJECTORS

### Ceiling mount kit for 700 projectors.

This ceiling mount with pulley system enables to mount the BARCO 700 projector to the ceiling. The concept makes it possible to adapt the projector perfectly to the local mounting requirements in a safe and solid manner. The ceiling mount is specifically developed for rooms with a lowered ceiling, but can be used in other rooms as well by omitting the upper plate and the four screwed rods.

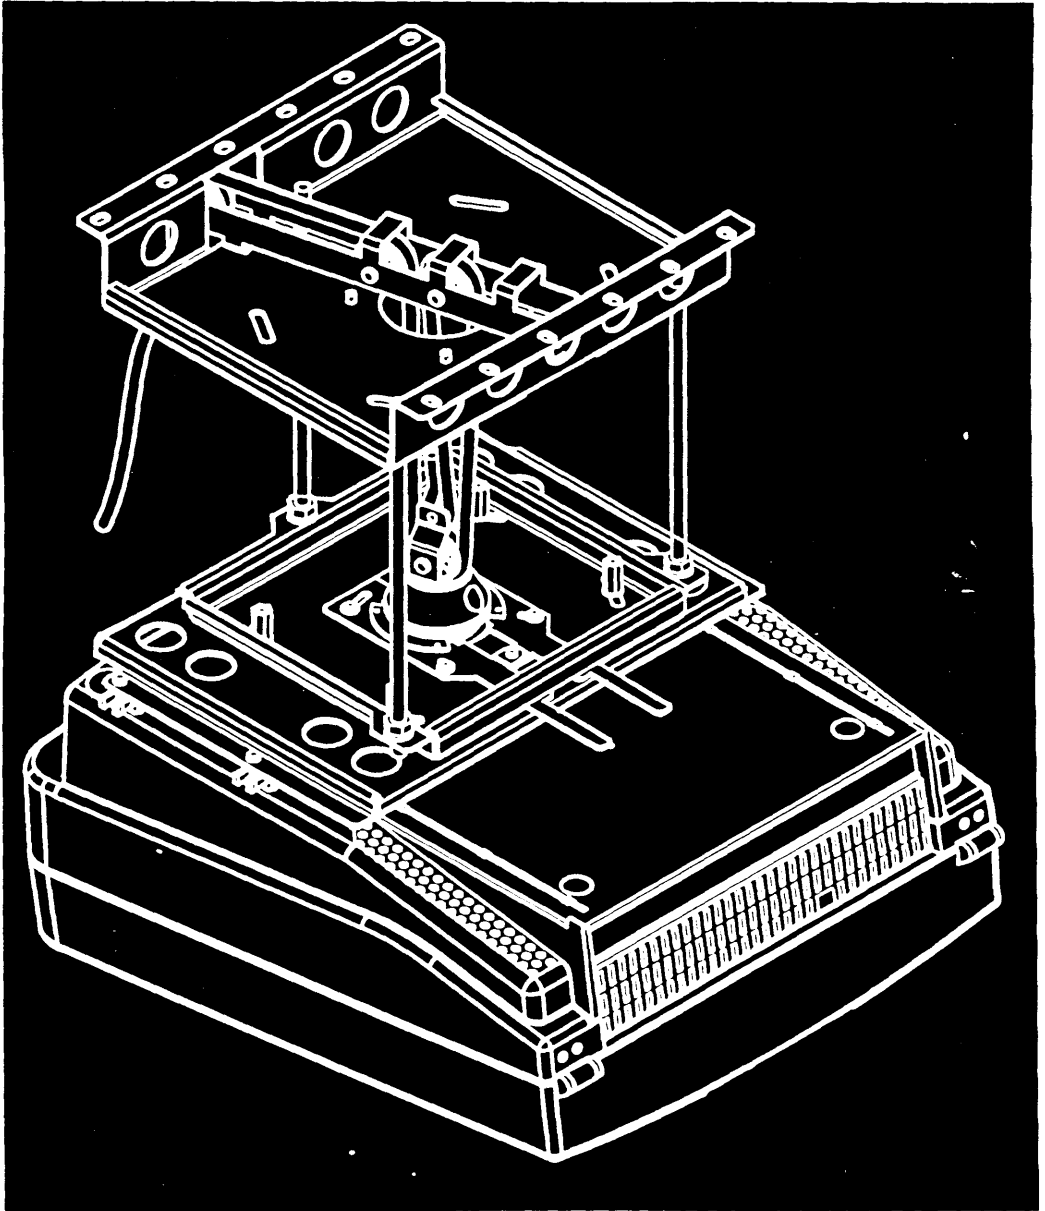

BARCO order no. : 98 27990.

The mounting instructions can be ordered by BARCO , order no. : 5975555.


**APPENDIX B : CEILING MOUNT KIT FOR 700 PROJECTORS**

**APPENDIX B : CEILING MOUNT KIT FOR 700 PROJECTORS 79**

# APPENDIX B : G2 ADJUSTMENT


## G2 adjustment

Enter the adjustment mode by pressing **ADJUST** and highlight *Service*. Press **ENTER** to start up the service mode.

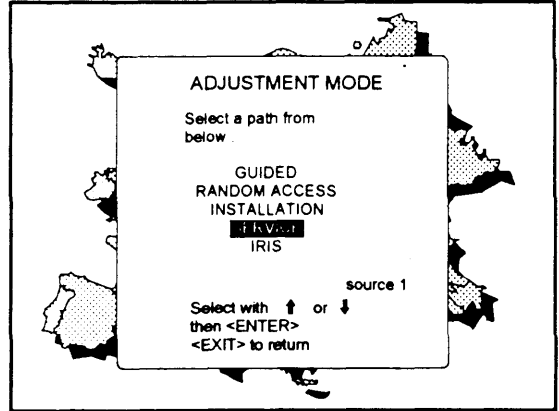


**ENTER** starts up the service mode.  
**EXIT** returns to operational mode.

Highlight **G2 adjust** and press **ENTER**. A safety notice will be displayed to warn the operator.

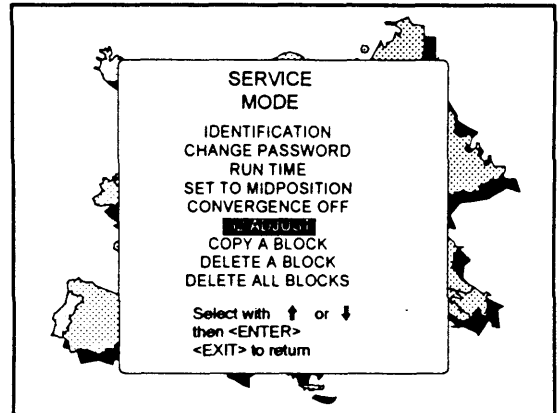


**ENTER** starts up the G2 adjust.  
**EXIT** returns to the path selection menu.

If you are qualified, press **ENTER** to continue with the G2 adjustment, otherwise press **EXIT** to return to the service menu.

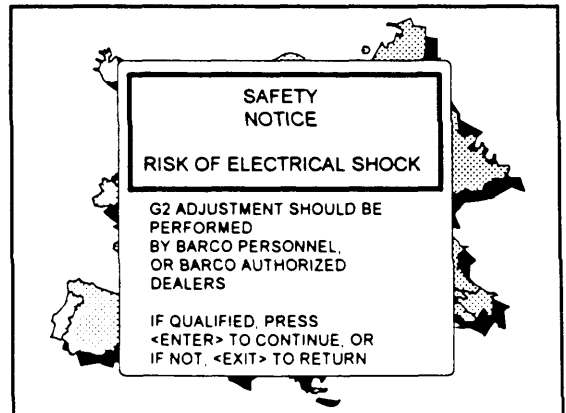


If **ENTER** is pressed, the G2 menu will be displayed.

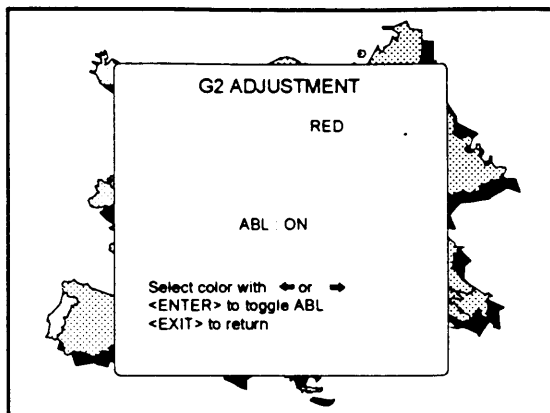

Open the top cover to reach the G2 controls and adjust these G2 controls for red, blue and green separately.

The controller automatically increases brightness and contrast until the raster behind the displayed text becomes visible.

Look to the projected image and observe the raster behind the image while the ABL function is ON.

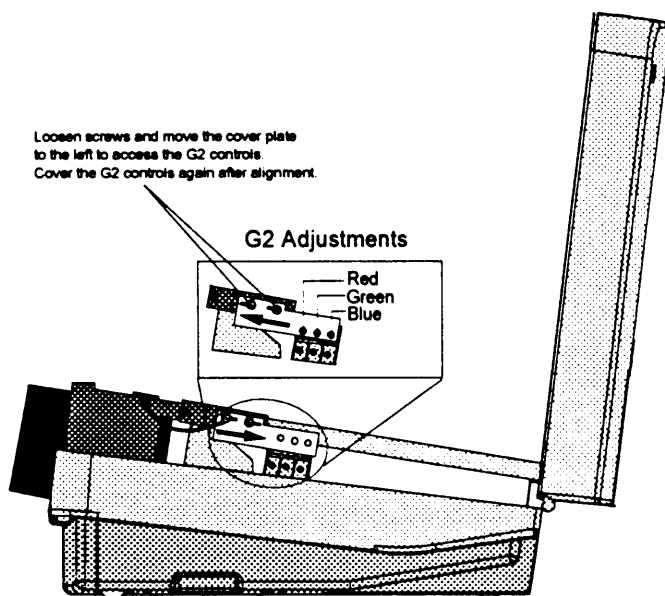

Switch ABL to OFF by pressing **ENTER** and adjust the G2 control until the raster brightness looks the same as when the ABL function is ON.

Check the correct raster adjustment by pressing **ENTER** to toggle ABL to ON. Repeat these steps if necessary.

Continue with the other colors. Use the right or left arrow key to select the next color.

*Note : The best result is obtained in a completely dark room or by looking into the lenses, but be aware that brightness and contrast are on a high level.*