

Date: 8/21/01

Software version: V2.36

### Addendum to the *CrystalImage* VS 2.0 Operating Instructions

1. Page 8: The RENAME and CHROMA DELAY functions within the SETUP menu have been removed. The FRAME SYNC function also has been replaced by a new function, SYNC TRACKING.

SYNC TRACKING allows fine adjustment of the frequency of the digital clocks within the VS 2.0 to allow perfect synchronization with the scanning circuitry in your video display. Imperfect synchronization can cause a "bending" at the top left corner of a CRT display, or periodic flashing (and possible bending) in a solid-state (D-ILA, LCD, or DLP) display.

The range of adjustment is +6 to -6, with 0 being the factory setting. Adjust for minimum bending, or to eliminate any periodic flashing of the picture.

2. A new function, POSITION ADJ., Has been added to the MENU: Via remote control, the user can be able to adjust the position of the image vertically and horizontally.
3. A new function, REMOTE CTL = VS 136 or AUX 053, has been added to the SETUP menu. These two selectable IR remote control codes prevent conflict with other remote control.

Factory preset is VS 136. To change code to AUX: Access to SETUP menu and select REMOTE CTL = AUX 053. On remote control (AVS-2000), press and hold the "SET" key and press "AUX" key, when red light is on, release both keys, then input 053 code.