

# NEC

MODEL PG-6000  
PG-9000  
PG-6000G  
PG-9000G

Multiple Frequency Projection Monitor

## SERVICE MANUAL


PART NO. 399910779



**Better Service**

**Better Reputation**

**Better Profit**

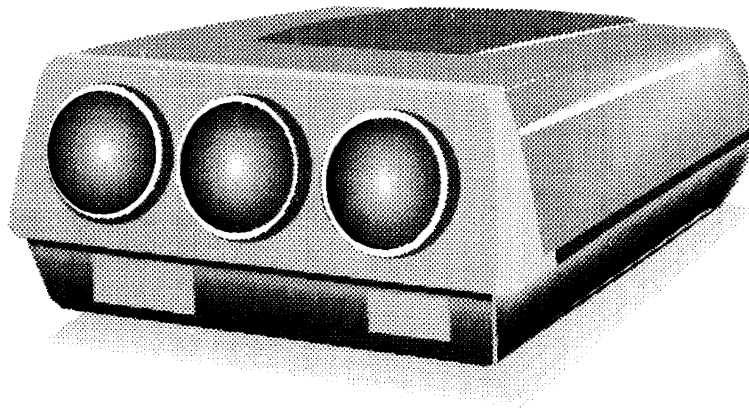

**SAFETY CAUTION:**

Before servicing this chassis, it is important that the service technician read and follow the "Safety Precautions" and "Product Safety Notice" in this Service Manual.

\* For continued X-radiation protection, replace picture tube with original type or NEC approved equivalent type.

**WARNING:**

SHOCK HAZARD - Use an isolation transformer when servicing.

## NEC Corporation

TOKYO, JAPAN

---

## Contents

<b>INTRODUCTION .....</b>	<b>1-6</b>
Features .....	1-6
Important Safeguards .....	1-7
Specifications .....	1-8
<b>PART NAMES AND FUNCTIONS .....</b>	<b>1-10</b>
Terminal panel on the front .....	1-10
Control panel on the rear .....	1-11
Remote control unit .....	1-12
Battery installation and replacement .....	1-15
Remote control cautions .....	1-15
Handling remote control and batteries .....	1-15
<b>BASIC OPERATION .....</b>	<b>1-16</b>
Projecting the Picture .....	1-16
Displaying the Menu and Adjustment Screen .....	1-17
Picture Adjustment .....	1-18
Position Adjustment .....	1-20
Sound Adjustment (only when used with the ISS-6010/ISS-6010G) .....	1-22
Input Selection .....	1-23
Source Information .....	1-25
Static Convergence Adjustment .....	1-26
Picture and Sound Mute .....	1-28
Normal and Load Function .....	1-28
<b>APPENDIX .....</b>	<b>1-29</b>
Screen Format in Projecting a Picture .....	1-29
<b>EXAMPLES OF CONNECTIONS .....</b>	<b>1-30</b>
Cautions on Connections .....	1-30
When Used in Stand Alone Operation .....	1-30
When Used with One Switcher (ISS-6010/ISS-6010G) .....	1-31
When Used with Two Switchers or More (100 inputs) .....	1-32
REMOTE 1 Terminal .....	1-34

## Installation

<b>INSTALLATION SETUP INSTRUCTION .....</b>	<b>2-2</b>
Before Installation .....	2-2
Note on Installation .....	2-3
Projection Distance and Screen Size for Ceiling Mount .....	2-4
Projection Distance and Screen Size for Desk Top .....	2-5
Projection Distance and Screen Size for Rear Projection .....	2-6
Ceiling Installation .....	2-7
<b>PROJECTION CONFIGURATION CHANGE .....</b>	<b>2-9</b>
Before Installation Change .....	2-9
Opening Top Cover .....	2-10
Scan Reversal .....	2-11
Adjusting Decorative Lens Panels .....	2-13
Changing Spacers .....	2-14
Changing the Angle of the CRTs .....	2-16

---

## Setup

<b>BEFORE SETUP .....</b>	<b>3-2</b>
Displaying the Menu and Adjustment Screen .....	3-2
On ADJUST MODE .....	3-4
Test Pattern .....	3-5
<b>SIGNAL ENTRY .....</b>	<b>3-6</b>
Signal Entry Procedures .....	3-6
Checking and setting Various Parameters .....	3-12
<b>ADJUSTMENT .....</b>	<b>3-18</b>
Setup Procedure .....	3-18
Lens Focus Adjustment .....	3-19
Electrical Focus Adjustment .....	3-20
Centering Magnet Adjustment .....	3-23
C. P. C Magnet Adjustment .....	3-24
Alignment Adjustment .....	3-25
Static Convergence Adjustment .....	3-29
Dynamic Convergence Adjustment .....	3-31
Point Convergence Adjustment .....	3-36
White Balance Adjustment .....	3-38
R, G and B Gain Adjustment .....	3-40
Checking and Setting the Running Time .....	3-42
Entering Passcode .....	3-44
Registering Passcode .....	3-45
Changing Your Passcode .....	3-47
Canceling Your Passcode .....	3-49
<b>SETTING .....</b>	<b>3-51</b>
Setting for Connection with the Switcher .....	3-51
Auto Power ON Mode Setting .....	3-53
Default Input Selection .....	3-55
Setting for Using Point Convergence .....	3-58
Video Mode Selection .....	3-60
On-screen Display Mode Setting .....	3-62
On-screen Display Color Setting .....	3-64
Date, Time Display Setting .....	3-66
Entering Date and Time .....	3-68
Auto Sequence Setting .....	3-70
Address Setting .....	3-78
Adjustment Items Auto Selection Setting .....	3-80

## Appendix

<b>TIMING CHARTS .....</b>	<b>3-83</b>
Pre-set Signals .....	3-83
Input Signal Reference Chart .....	3-85
Input Signal Timing .....	3-86

---

## Trouble Diagnosis

<b>TROUBLESHOOTING CHART .....</b>	<b>4-2</b>
No Power/Power Supply Problems .....	4-2
Projector Does Not Power UP .....	4-6
Projector Stays Locked in STAND BY mode .....	4-6
No High Voltage .....	4-7
HV Operation but No Video .....	4-9
Convergence Failure .....	4-12
Electric Focus Failure .....	4-13
<b>ERROR MESSAGE FUNCTION .....</b>	<b>4-7</b>
7-Segment Display Error Code List .....	4-7
Power Unit Failure Diagnosis .....	4-18
DEF PWB Failure Diagnosis .....	4-18
GAIN CTL/VIDEO OUT PWB Failure Diagnosis .....	4-19

## Trouble Repair

<b>Disassembly .....</b>	<b>5-2</b>
Method of Removing Each PANEL .....	5-2
Method of Removing Cathode-Ray Tube .....	5-5
Method of Removing Lens .....	5-7
Method of Removing the INPUT PWB .....	5-8
Method of Removing the CL7 PWB .....	5-9
Method of Removing the MOTHER PWB .....	5-10
Method of Removing the VIDEO MOTHER PWB .....	5-12
Method of Removing C-DRIVE PWB and F-DRIVE PWB .....	5-16
Method of Removing the POWER UNIT .....	5-16
Method of Removing the HIGH-VOLTAGE BLOCK .....	5-16
Method of Removing the HV PWB .....	5-17
Method of Removing the DEF PWB .....	5-18
Method of Removing the CR HIGH-VOLTAGE BLOCK .....	5-19
Method of Removing the STAY .....	5-20
Method of Removing the CHASSIS .....	5-22
<b>Adjustment Contents .....</b>	<b>5-24</b>
<b>Service (Field Technician) Adjustments .....</b>	<b>5-26</b>
Scope .....	5-26
High-Voltage Adjustment .....	5-27
DEF PWB .....	5-28
White Balance Procedure .....	5-32
Centering Magnets Adjustment .....	5-39
Focus Adjustment .....	5-40
ISS Switcher Connection .....	5-40
<b>Service (Bench) Adjustments .....</b>	<b>5-41</b>
V4-DEC PWB (PWC-3683) .....	5-41
SYSTEM PWB (PWC-3717) .....	5-46
WAVE PWB (PWC-3719) .....	5-50
POINT PWB (PWC-3718) .....	5-52

Timing Diagram .....	5-55
PWB Adjusting Point Diagram .....	5-58
<b>Wiring Method .....</b>	<b>5-64</b>
Method of Wiring the Video Mother PWB UNIT .....	5-64
Method of Wiring the DEF PWB UNIT .....	5-66
Method of Wiring the POWER SUPPLY UNIT .....	5-66
Method of Wiring the MOTHER PWB UNIT .....	5-67
Method of Wiring the HV PWB UNIT .....	5-68
Method of Wiring the FBT UNIT .....	5-69
Method of Wiring the CRT UNIT .....	5-71
Method of Wiring the TOTAL ASSEMBLY .....	5-74
<b>Paking .....</b>	<b>5-74</b>
<b>Replacement Parts List .....</b>	<b>5-76</b>
<b>Appearance Parts Location .....</b>	<b>5-109</b>
<b>Screw Table .....</b>	<b>5-111</b>

## **Schematic Diagram**

<b>Connection Diagram .....</b>	<b>6-2</b>
<b>Block Diagram .....</b>	<b>6-4</b>
V4-DEC PWB .....	6-4
GAIN CTL PWB .....	6-5
VIDEO OUT PWB .....	6-6
DEF PWB .....	6-7
SYSTEM PWB .....	6-8
WAVE PWB .....	6-9
POINT PWB .....	6-10
C-DRIVE PWB .....	6-11
F-DRIVE PWB .....	6-12
HV PWB .....	6-13
PS-A PWB .....	6-13
PS-B PWB .....	6-13
<b>Schematic Diagram/Voltage PWB/ Wave PWB .....</b>	<b>6-14</b>
INPUT PWB (PWC-3713) .....	6-14
V4-DEC PWB (PWC-3683) .....	6-16
GAIN CTL PWB (PWC-3715) .....	6-32
VIDEO OUT PWB .....	6-44
V-CRT PWB (R: PWC-3711D, G: PWC-3711E, B: PWC-3711F) .....	6-62
VIDEO-MOTHER PWB (PWC-3710B) .....	6-64
DEF PWB (PWC-3709A)/V-POSI PWB (PWC-3709B) .....	3-68
SYSTEM PWB .....	6-78
WAVE PWB (PWC-3719) .....	6-100
POINT PWB (PWC-3718) .....	6-124
C-DRIVE PWB (PWC-3712B) .....	6-140
F-DRIVE PWB (PEC-3712A) .....	6-146
HV PWB (PWC-3714) .....	6-150

---

MOTHER PWB (PWC-3710A) .....	6-154
PS-A PWB (PWC-3734) .....	6-162
PS-B PWB (PWC-3735) .....	6-164
PS-SB PWB (PWC-3736) .....	6-170
CTL PWB (PWC-3711A)/LED PWB (PWC-3711B)/ 7SEG PWB (PWC-3711C) .....	6-172

# INTRODUCTION

---

Before operating this projector, please read this manual carefully and completely. This manual will provide you with the basic instructions for operation of the projector. Installation, preliminary adjustments and procedures which require the opening of the projector and contact with electrical components should be performed by service personnel. For continued safe and reliable operation, use only cables supplied by the manufacturer for power. Adhere to all notes and warnings.

## Features

- ◆ Multi scan circuit automatically locks on video, superdata from 15kHz to 61kHz (MultiSync 6PG) and graphics signals from 15kHz to 90kHz (MultiSync 9PG). You can interface video and high resolution RGB signals from various computers, workstations and graphics boards.
- ◆ 7" CRTs with deflection angle 90 degrees produce a detailed picture with a resolution of 1280 × 1024 pixels.
- ◆ Impregnated cathode used in the CRTs makes possible 800 lumens of light output.
- ◆ ECP lens produces an image with true color reproduction.
- ◆ AKB circuit provides a stable white balance.
- ◆ The wide band video circuit provides of 70MHz of Video Bandwidth.
- ◆ Display size can be altered to accommodate any picture size from 60" to 300" diagonal. In addition to ceiling mounting, floor, desk top and rear installations are possible.
- ◆ Digital point convergence provides high accuracy for a projecting fine graphic displays. (This can be purchased as an optional item for the MultiSync 6PG)
- ◆ Easy accessing of adjustment item with on-screen menus.
- ◆ Accepts up to 100 inputs with the ISS-6010/ISS-6010G.
- ◆ Video system compatible with NTSC, PAL, SECAM and NTSC 4.43.
- ◆ Up to 100 convergence patterns can be stored in the stand alone mode in digital memory.
- ◆ Quick copy convergence for fast easy set up from one pre-set signal.
- ◆ Built in self diagnostics for on sight troubleshooting.
- ◆ Built in "CROSS HAIR", "CROSS HATCH", "DOT", "WINDOW" and "H (FOCUS)" test patterns for accurate setup.
- ◆ Source information status display.
- ◆ The SEQUENCER function allows the projector to automatically select input signals one after another.

### **Important Safeguards**

The following are important safety instructions designed to ensure the long life of your projector and to prevent fire and shock hazards. Be sure to read these safety instructions carefully and follow all warnings given below.

#### **Installation**

Place the projector on a flat, level surface and in a dry area free from dust and moisture. Do not place the projector in direct sunlight, near stoves or other heat radiating appliances. Smoke, steam and exposure to direct sunlight could adversely affect the internal components. Avoid rough handling when moving your equipment as a strong shock could damage its internal components. If installing the projector on the ceiling, use only parts supplied by the manufacturer. Observe all instructions and warnings.

#### **Power supply**

The PG-6000 and PG-9000 projector are designed to operate on 120V 60Hz, and the PG-6000G and PG-9000G are designed to operate on 220-240V 50Hz AC power supply. Make sure your local power supply matches these requirements before operation. Handle the power cord carefully and avoid excessive bending. A damaged cord may cause electric shock or fire. If the projector is not to be used for an extended period, remove the plug from the power outlet.

#### **Cleaning**

Unplug the projector from the power outlet before cleaning.

Clean the cabinet and front panel periodically with a soft cloth. If heavily stained, use a mild detergent solution. Never use strong detergents or solvents such as alcohol or thinner to clean your projector.

Lens cleaning: Avoid touching the lens surfaces.

Special coating is applied to the lens surfaces.

Consult your dealer for lens cleaning.

#### **Fire and Shock Precautions**

Adequate ventilation must be provided to prevent heat build-up inside the projector. Make sure the ventilation holes are unobstructed.

Keep the inside of the projector free from foreign objects, such as paper clips, nails, paper, etc. Do not attempt to retrieve such objects yourself or insert metal objects such as wire and screw-drivers inside the projector. If a hazardous object falls inside the projector, unplug it immediately and call a qualified electrical repairman for removal.

Do not set liquids on top of the projector.



# SPECIFICATIONS

---

Projection type	: Refraction type Projector and screen are separated
Projection system	: 3 lens and 3 CRT's in-line
Scanning frequency	: H 15 to 61kHz / V 38 to 150Hz (PG-6000/PG-6000G) H 15 to 90kHz / V 38 to 150Hz (PG-9000/PG-9000G)
Retrace time	: H 4.0 $\mu$ S (fH 15 to 30kHz) H 2.5 $\mu$ S (fH 30 to 90kHz) V 350 $\mu$ S
Video bandwidth	: 70MHz (-3dB)
CRT	: 7 inch liquid cooling Deflection angle 90 degrees
Lens	: Hybrid lenses multilayer coating F1.0
Picture size	: 60 to 300 inches diagonal
Resolution	: 1000TV lines
Pixel resolution	: 1280 $\times$ 1024 dots
Light output	: 800 lumens (Small area peak high light brightness)
Contrast ratio	: 1 : 20(HDTV method)
High voltage	: 32kV
Input	: RGB signal 0.7Vp-p 75ohm positive (BNC) H/V sync 0.7 to 4.0Vp-p 75ohm negative or positive (BNC) COMP sync 0.7 to 4.0Vp-p 75ohm negative or positive (BNC) Sync on G 0.3 to 0.6Vp-p 75ohm negative (BNC) Video 1.0Vp-p 75ohm positive (BNC) or (switchable) S-video; Y 1.0Vp-p 75ohm positive C 0.28Vp-p 75ohm (burst level) Video system NTSC, PAL, SECAM and NTSC4.43
Convergence	: Digital convergence (Pre-set 100 positions) Quick copy convergence Static and wave convergence Point convergence; PG-6000/PG-6000G Optional PG-9000/PG-9000G Standard
Convergence limits	: Less than 0.2% of V-height
Warm up time	: 20 minutes
Setup signal	: Cross hairs, Cross hatch, Dot, Window pattern, H test pattern
Power supply	: AC 120V 60Hz (PG-6000/PG-9000) AC 220-240V 50Hz (PG-6000G/PG-9000G)
Power consumption	: PG-6000/PG-6000G 430W PG-9000/PG-9000G 500W
Input current	: 5.8A (AC 120V) PG-6000/6.7A (AC 120V) PG-9000 3.8A (AC 220-240V) PG-6000G/4.4A (AC 220-240V) PG-9000G
Safety and regulation	: PG-6000/PG-9000; Meets FCC class A requirements UL Approved (UL 1950) Governed by IEC 950 CSA certified Meets DHHS requirements PG-6000G/PG-9000G; Meets TÜV GS requirements Governed by EN 60950 and IEC 950 Meets FTZ class B requirements Governed by DBP Vfg. 243 Meets x-ray requirements Governed by § 10 Röntgenverordnung (RöV)


Cabinet dimensions	: 610(W) × 754(D) × 309(H) mm 24 1/8(W) × 29 5/8(D) × 12 1/8(H) inch
Weight	: 56 kg/ 123.4lbs
Remote control	: Wired application Wireless (operating distance 7m/23ft.)
Remote control functions	: User remote (RC-6010); Power ON/OFF, Input signal select, Picture mute, Bright, Contrast, Color 1), Sharpness 1), Tint 2), Volume 3), Sound mute 3), Source information, Static convergence, Normalize, Enter, End Full function remote (RC-6011); Test, Display, Help, Information, Input list, Static focus, Edge focus, H/V position, White balance select, Static convergence, Wave convergence, Point convergence, H/V amplitude, H/V linearity, H/V key-stone, H/V pin-cushion, H/V blanking, Tilt, Skew, H/V bow, Store, Normalize, Enter, End
Main control function	: Power ON/OFF, Input signal select, Picture mute, Bright, Contrast, Color 1), Sharpness 1), Tint 2), Volume 3), Sound mute 3), Source information, Static convergence, Normalize, Enter, End
External control	: Power ON/OFF, Input signal select, Picture mute, Remote control data input
PC control	: Acceptable
Supplied accessories	: Full function remote control unit (RC-6011), User remote control unit (RC-6010), Remote cable 4m/13ft., Remote cable 16m/52ft., AC line cable, Ceiling mounting kit, User's manual, Installation manual (not included with PG-6000G/PG-9000G), Picture size spacers, Projector control software (one manual and one floppy disk)
Environment	: Temperature 0 to 40 degrees C Humidity 0 to 90% non-condensing Storage -10 to 50 degrees C
Sound emission	: PG-6000/PG-9000 45dB PG-6000G/PG-9000G 70dB (A). Complies with DIN 45635 (or ISO 7779)

- 1) This works only for VIDEO signals.
- 2) This works only for NTSC video signals.
- 3) This works only with the Switcher operation.

Specifications are subject to change without notice.

The dimensions given for the projector do not include protruding parts.

# PART NAMES AND FUNCTIONS

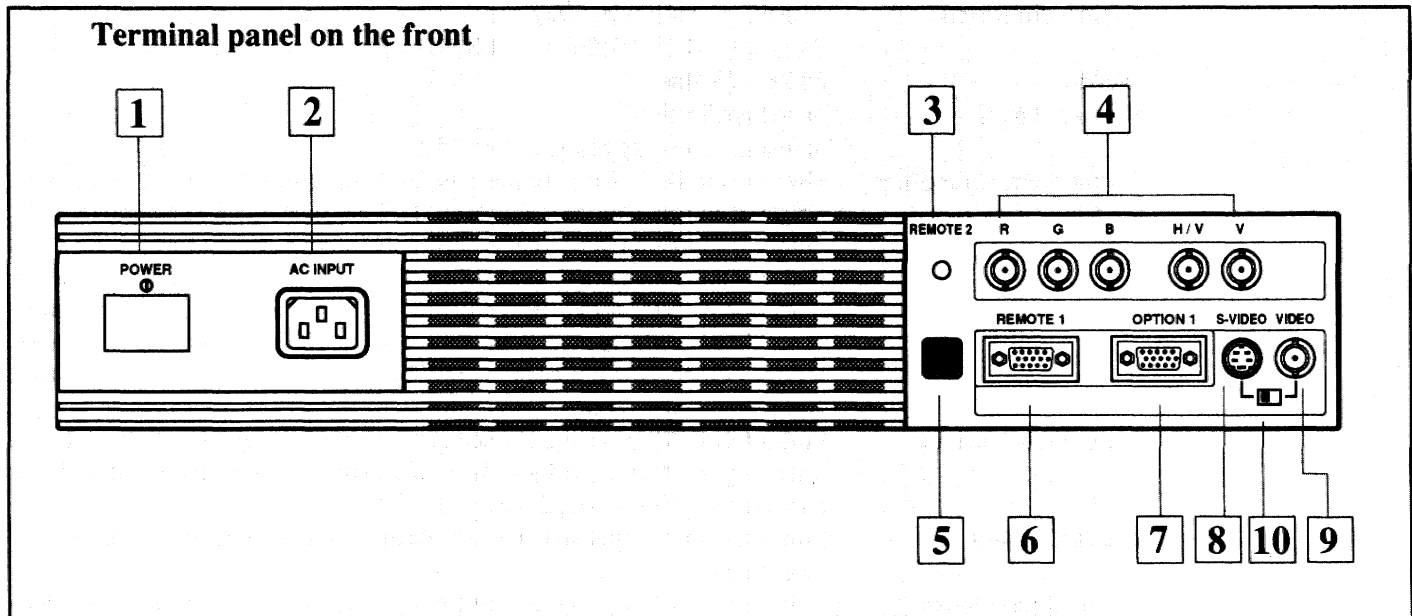

## 1 POWER Switch (Main power)

Press to turn the main power on. The STANDBY indicator is lit.

In this condition you can start up the projector by pressing the POWER ON button on the remote control or the POWER button on the rear panel.

Press again to turn the main power off.

**NOTE:** When turning off the main power, first return the projector to the standby condition by pressing the POWER OFF button on the remote control or the POWER button on the rear panel and then turn off the main POWER switch. These procedures are to protect your projector and the connected equipment.

## 2 AC INPUT

Connect the supplied power cord here.

## 3 REMOTE 2 Jack

When the supplied full function remote control is used in the wired condition, connect the supplied remote cable here. The wireless control does not work when the plug of the remote cable is inserted here.

## 4 R,G,B, H/V and V Input Terminals

Connect R, G, B, H (Horizontal sync) and V (Vertical sync) outputs of the external equipment (such as the Switcher). If using a component with a combined sync (SYNC) output, connect it to the H/V terminal.

## 5 Remote Sensor

Receives the signal from the supplied remote control when used in the wireless condition.

## 6 REMOTE 1 Terminal

This terminal allows external control of the projector from either the Switcher or from an external control. When the Switcher is used, connect to the REMOTE 1 terminal on the back of the Switcher.

**NOTE:** Only the ISS-6010/ISS-6010G is compatible with this projector.

## 7 OPTION 1 Input Terminal

For future system expansion.

## 8 S-VIDEO Input Terminal

Connect to the S-video output of the external equipment such as VCR with an S-video output.


## 9 VIDEO Input Terminal

Connect to the video output of the external equipment such as video equipment.

## 10 S-VIDEO/ VIDEO Select Switch

Selects either the S-VIDEO input or the VIDEO input terminal.

## Control panel on the rear

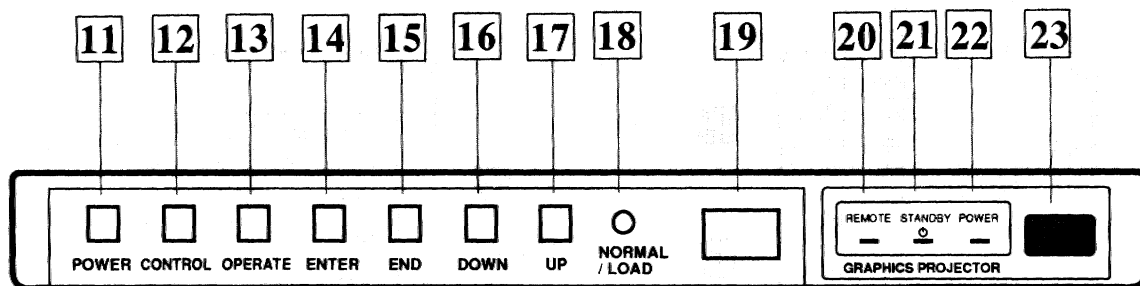

### 11 POWER Button

Turns the projector on or off when the projector is in the standby condition (Main Power switch on and Standby indicator lit).

### 12 CONTROL Button

Used with other buttons, similar to a shift key on a typewriter or computer. This is the same with the CTL button on the remote control.

### 13 OPERATE Button

Press to display the OPERATE menu. You can select the following adjustment functions from this menu.

- |            |                |
|------------|----------------|
| 1/PICTURE  | 4/INPUT SELECT |
| 2/POSITION | 5/SOURCE INFO  |
| 3/SOUND    | 6/STATIC       |


### 14 ENTER Button

Executes menu selection and switches to selected input.


### 15 END Button

Exits the adjustment mode.

### 16 DOWN Button

Used to decrease the selected adjustment level or move the cursor downward. When used with the CONTROL button, the DOWN button works as the CURSOR  button on the remote control unit.

### 17 UP Button

Used to increase the selected adjustment level or move the cursor upward. When used with the CONTROL button, the UP button works as the CURSOR  button on the remote control unit.

### 18 NORMAL/LOAD Button

Returns the adjustment data to the standard level (factory preset level).

Pressing this button with holding down the CONTROL button returns the adjustment data to the last stored level (LOAD function).

### 19 Select Counter

Displays the selected slot number.

### 20 REMOTE Indicator

Flashes when the projector receives a signal from the remote control.

### 21 STANDBY Indicator

Lights up when the projector's main POWER switch is on. Flashes when the projector might not be connected with the Switcher correctly or when the Switcher might be turned off.

### 22 POWER Indicator


Lights up when the projector is turned on.

### 23 Remote Sensor


Receives the signal from the supplied remote control when used in the wireless condition.

## PART NAMES AND FUNCTIONS

### Remote control unit

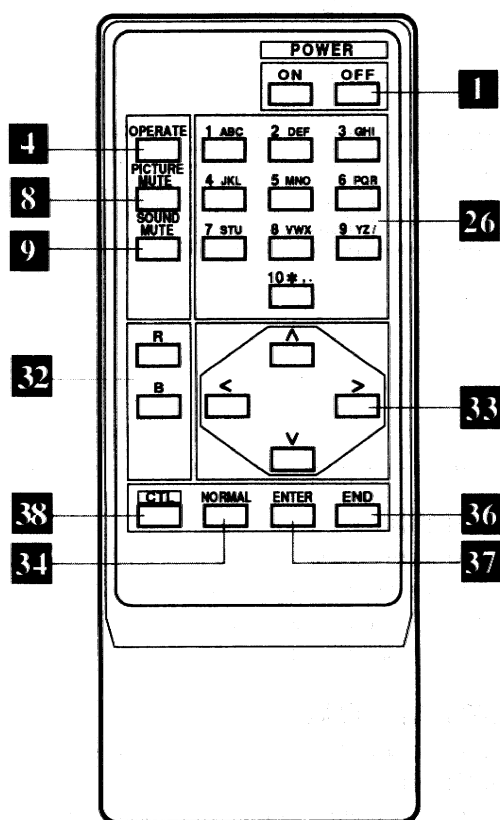

User Remote Control  
RC-6010

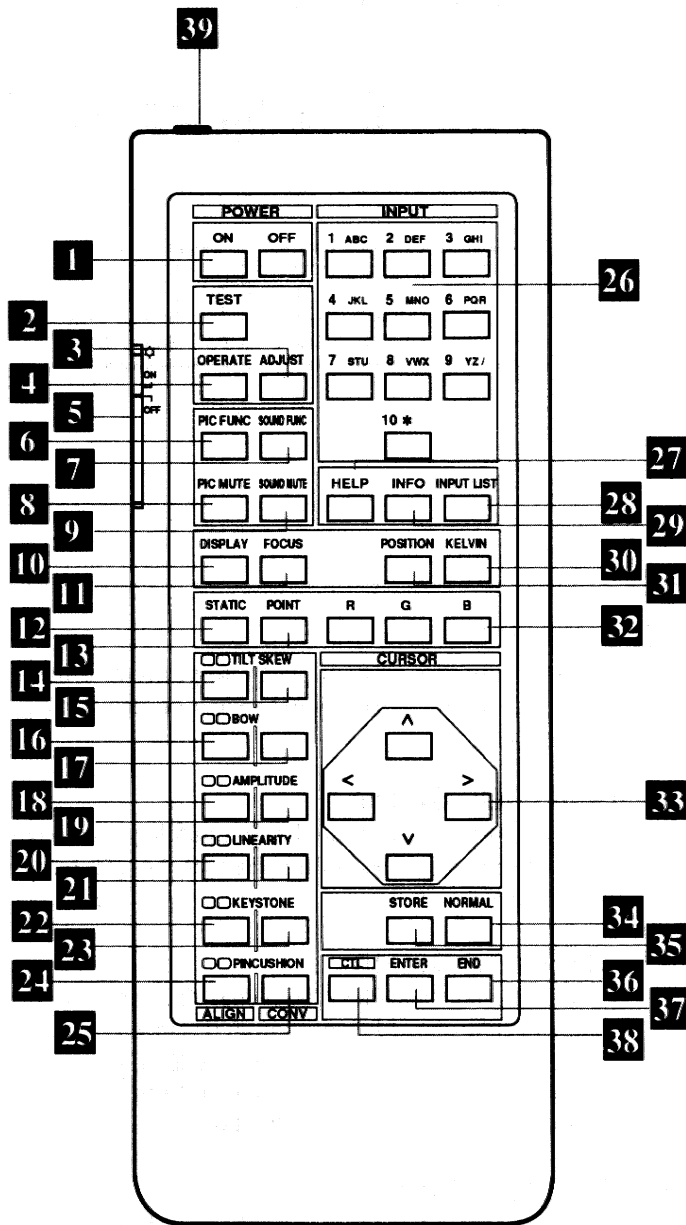

Full Function Remote Control  
RC-6011

**NOTE:** The full function remote control is designed for setup adjustment. Use the user remote control for normal operation.

**1 POWER Buttons (ON/OFF)**

Press the ON button to turn the projector on when the projector is in the standby condition (STANDBY indicator lit). Press the OFF button to return the projector to the standby condition.

**2 TEST Button**

Press to display the "TEST PATTERN" menu from which you can select the preferred test pattern.

**3 ADJUST Button**

Press to display the "ADJUST" menu.

**4 OPERATE Button**

Press to display the "OPERATE" menu.

**5 Backlight Switch**

Turns the backlight on and off.

**6 PIC FUNC Button**

Press to display the picture adjustment screen.

**NOTE:** Some function items will not be used depending on the input video signal.

**7 SOUND FUNC Button**

Press to display the VOLUME adjustment screen. You can adjust the volume of the ISS-6010/ISS-6010G Switcher.

**8 PICTURE(PIC) MUTE Button**

Press to mute the picture. Press again to return the picture.

**9 SOUND MUTE Button**

Press to mute the sound. Press again to return the sound.

**NOTE:** This works only with the ISS-6010/ISS-6010G.

**10 DISPLAY Button**

Press to turn on or off the ON-SCREEN display.

**11 FOCUS Button**

Press to enter the FOCUS mode.

**12 STATIC Button**

Press to enter the STATIC mode. You can adjust the static convergence.

**13 POINT Button (when the point convergence board installed)**

Press to enter the POINT mode. You can adjust the point convergence.

**14 TILT SKEW ALIGN Button**

Press to enter the TILT, SKEW ALIGNMENT mode. You can adjust the tilt and the skew of the projected image.

**15 TILT SKEW CONV Button**

Press to enter the TILT, SKEW CONVERGENCE mode. You can adjust the tilt and the skew convergence for the red or blue CRT.

**16 BOW ALIGN Button**

Press to enter the BOW ALIGNMENT mode. You can adjust the horizontal and the vertical bow of the projected image.

**17 BOW CONV Button**

Press to enter the BOW CONVERGENCE mode. You can adjust the horizontal and the vertical bow convergence for the red or blue CRT.

**18 AMPLITUDE ALIGN Button**

Press to enter the AMPLITUDE ALIGNMENT mode. You can adjust the horizontal width and the vertical height of the projected image.

**19 AMPLITUDE CONV Button**

Press to enter the AMPLITUDE CONVERGENCE mode. You can adjust the horizontal and the vertical convergence amplitude for the red or blue CRT.

**20 LINEARITY ALIGN Button**

Press to enter the LINEARITY ALIGNMENT mode. You can adjust the horizontal and the vertical linearity of the projected image.

## PART NAMES AND FUNCTIONS

---

### **21 LINEARITY CONV Button**

Press to enter the LINEARITY CONVERGENCE mode. You can adjust the horizontal and the vertical linearity convergence for the red or blue CRT. Pressing with CTL button controls the LINEAR-BALANCE convergence.

### **22 KEY STONE ALIGN Button**

Press to enter the KEY STONE ALIGNMENT mode. You can adjust the horizontal and the vertical key-stone of the projected image. Pressing with CTL button controls the KEY-BALANCE alignment.

### **23 KEY STONE CONV Button**

Press to enter the KEY-STONE CONVERGENCE mode. You can adjust the horizontal and the vertical key-stone convergence for the red or blue CRT. Pressing with CTL button controls the KEY-BALANCE convergence.

### **24 PIN CUSHION ALIGN Button**

Press to enter the PIN-CUSHION ALIGNMENT mode. You can adjust the horizontal and the vertical pin-cushion of the projected image. Pressing with CTL button controls the PIN-BALANCE alignment.

### **25 PIN CUSHION CONV Button**

Press to enter the PIN-CUSHION CONVERGENCE mode. You can adjust the horizontal and the vertical pin-cushion convergence for the red or blue CRT. Pressing with CTL button controls the PIN-BALANCE convergence.

### **26 INPUT Button**

Selects menus and switches input signals.

### **27 HELP Button**

Press to display the explanation of the current selected function and available functions.

### **28 INPUT LIST Button**

Press to display the list of the recorded input signals.

### **29 INFO Button**

Press to display the various parameters and settings of the currently displayed image.

### **30 KELVIN Button**

Press to enter the WHITE BALANCE mode. You can adjust the white and the black level.

### **31 POSITION Button**

Press to enter the position mode. You can adjust the horizontal and vertical position and horizontal and vertical blanking.

### **32 R, G and B Buttons**

Turn each CRT beam on and off separately. When using with the CTL button, you can select the CRT to be adjusted during convergence and center focus adjustments. Note that the G button is only on the full function remote control.

### **33 CURSOR Buttons**

Used for increasing and decreasing control levels, cursor movement and convergence adjustments.

### **34 NORMAL Button**

Returns the adjustments level for each VIDEO or RGB input signal to its original factory preset level. When pressed once, the confirmation message will be displayed. When "YES" is selected and ENTER is pressed, the data will be returned to the factory preset level. Pressing with CTL returns the adjustment data to the last stored level (LOAD function).

### **35 STORE Button**

Memorizes the adjustments setting of each VIDEO or RGB input signal separately.

When pressed once, the confirmation message "STORE?" will be displayed. When selecting "YES" and ENTER is pressed, the data will be stored in memory.

### **36 END Button**

Ends the adjustment mode.

### **37 ENTER Button**

Executes menu selection and switches to selected input.

### **38 CTL Button**

Used with other buttons, similar to a shift key on a typewriter or computer.


### **39 Remote Control Jack**

Insert the plug of the supplied remote cable here when the full function remote control is used in the wired condition. The wireless control does not work when the plug of the remote cable is inserted here.


## Battery installation and replacement

### User remote control


- 1 Press down on the battery compartment cover and slide the cover in the direction of the arrow.

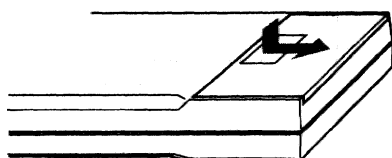

- 2 Install the two new batteries, making sure that their polarity matches the (+) (-) diagrams inside the battery compartment. Incorrect polarity could damage the unit.

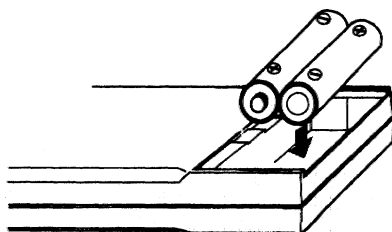

- 3 Close the battery compartment cover.

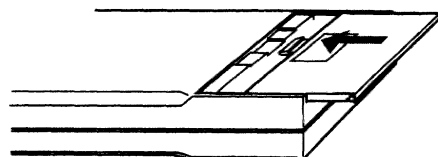

**NOTE:** The remote control is powered by two 1.5V AA batteries.

### Remote control cautions


Use the remote control within the valid operating range within a distance of about 7m (23 ft.) and at 30 degrees angle left and right.

### Handling remote control and batteries


- Do not drop or mishandle the remote.
- Do not get the remote wet. If the remote gets wet, wipe it dry immediately.
- Avoid heat and humidity.
- When not using the remote for a long period, remove the batteries.
- Do not use new and old batteries together, or use different types together.
- Do not take apart the batteries, heat them, or throw them into a fire.
- Avoid using the full function remote control as wireless with the backlight switch ON for an extended period of time. This can cause short battery life.

### Full function remote control


- 1 Press down on the battery compartment cover and slide the cover in the direction of the arrow.

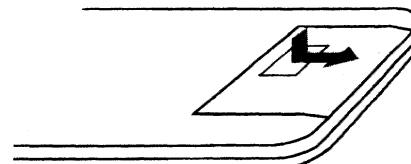

- 2 Install the two new batteries, making sure that their polarity matches the (+) (-) diagrams inside the battery compartment. Incorrect polarity could damage the unit.

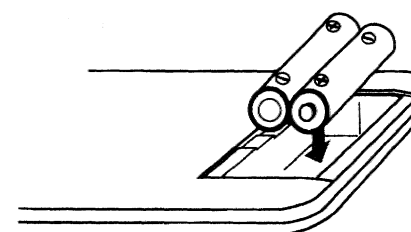


- 3 Close the battery compartment cover.

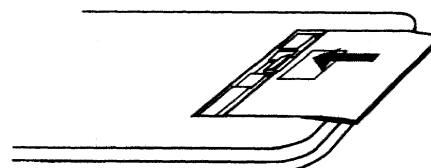



# BASIC OPERATION

## Projecting the Picture

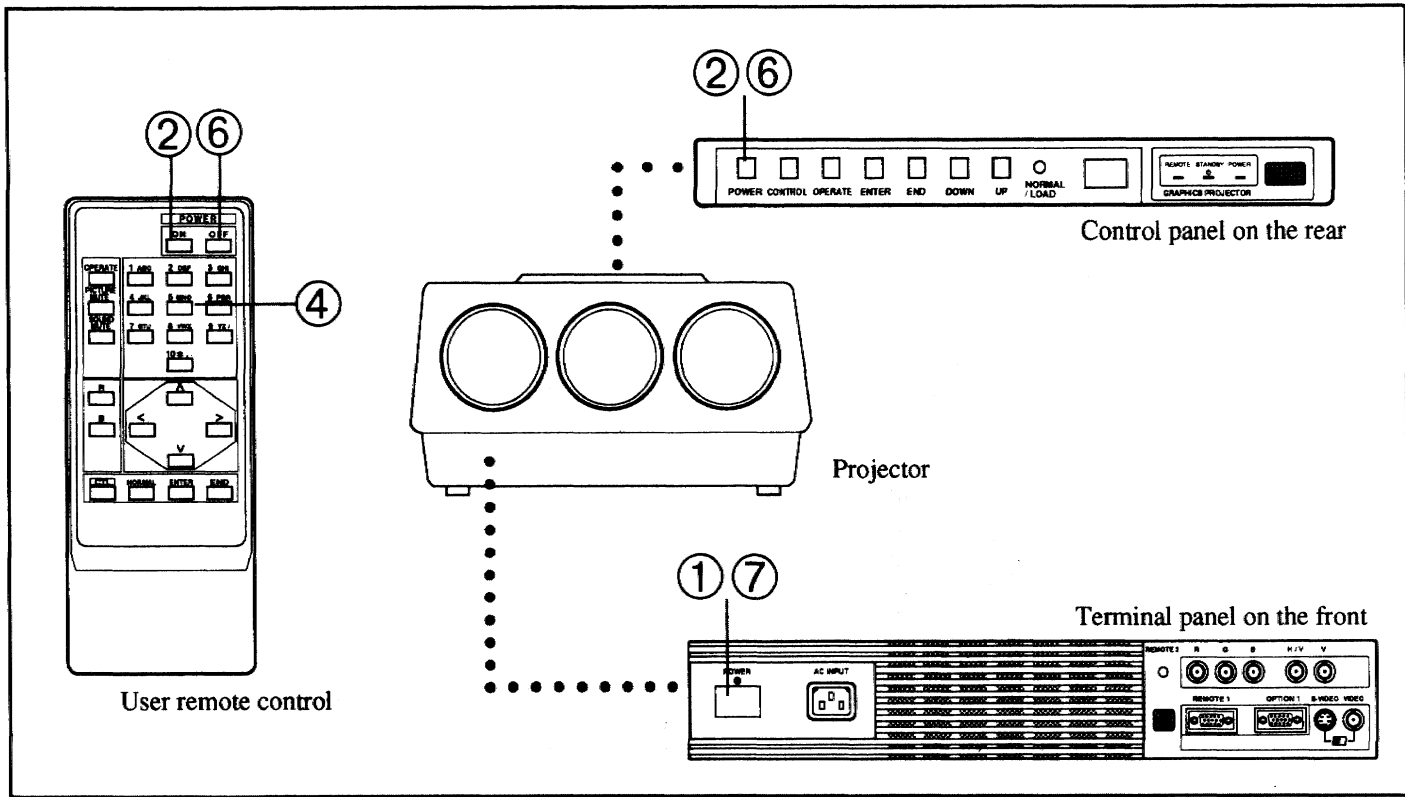

To project the picture source, proceed as follows:


- ① Turn on the main power of the projector.
    - Press the POWER switch on the front terminal.
  - ② Turn on the connected equipments power.
  - ③ Turn on the power.
    - Press the POWER ON button on the remote control or the POWER button on the rear panel.
  - ④ Select an input signal source by pressing one of the ten INPUT buttons on the remote control. You can also select a signal from the "INPUT SELECT" list.
    - See page 1-23 "INPUT SELECTION" for more details.
  - ⑤ Adjust the picture and sound.
    - See page 1-18 through 1-22 for more details.
- NOTE:** The volume function works only with the ISS-6010/ISS-6010G.
- ⑥ To turn off the power, press the POWER OFF button on the remote control or the POWER button on the rear panel.
  - ⑦ Press the POWER switch on the front terminal to turn off the main power of the projector.
  - ⑧ Last, turn off the connected equipment power.

## Displaying the Menu and Adjustment Screen

You can easily access your desired screen by selecting menus.  
Depending upon button selection, your desired screen will be displayed as shown below:

### ■ OPERATE menu

**NOTE:** Examples of the screen display are only when used with the ISS-6010/ISS-6010G.

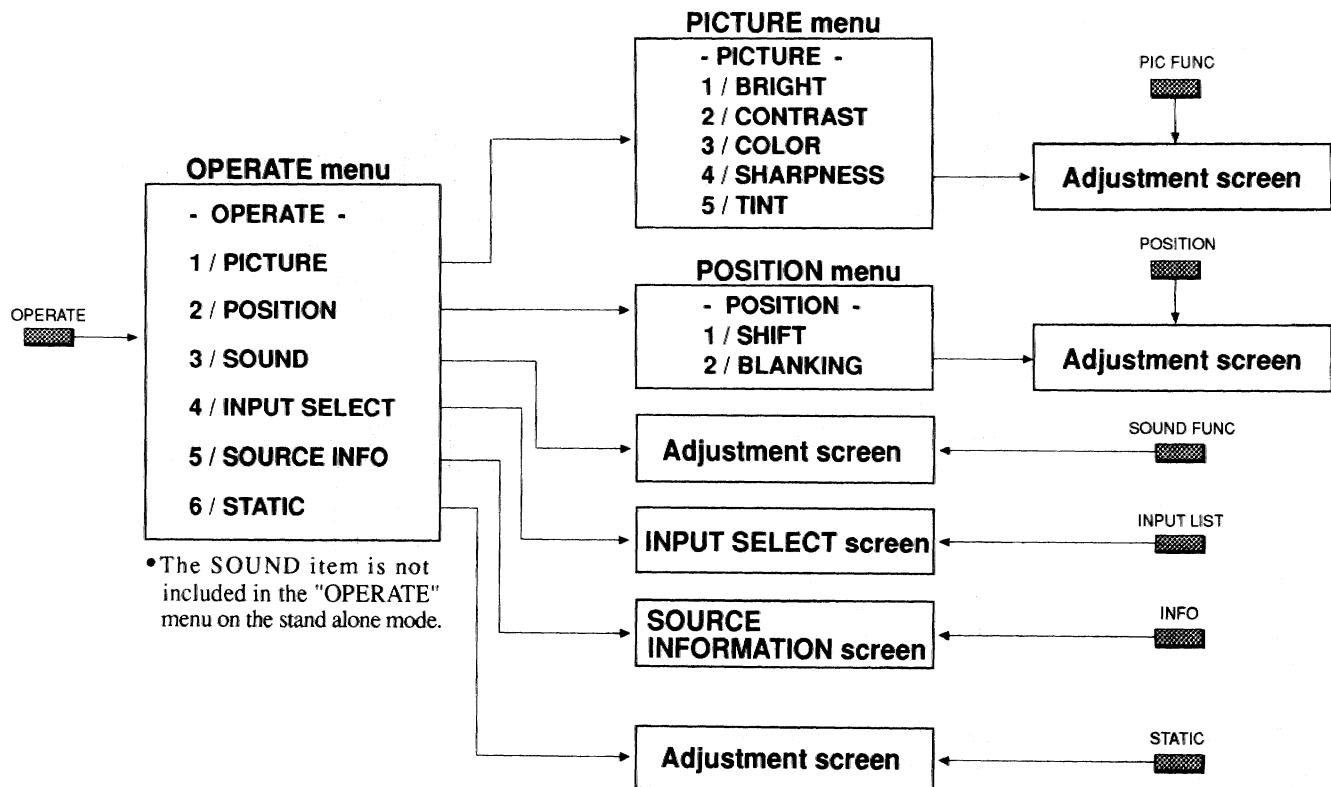

•The PIC FUNC, POSITION, SOUND FUNC, INPUT LIST, INFO and STATIC buttons are on the full function remote control only.

**CAUTION:** Do not display a bright and still picture for longer than 20 minutes.  
This could damage the CRTs.





**NOTE:** The explanation of the operation on the following pages is for use with the remote control. You can also operate the projector using the buttons on the control panel of the projector.

## BASIC OPERATION

### Picture Adjustment

To adjust the picture for each input, proceed as follows:

**NOTE:** The Color, Sharpness, and Tint controls are not included in the "PICTURE" menu for RGB signal. The Tint control is not included in the "PICTURE" menu for SECAM/PAL signal.


 

 
- ① Press the OPERATE button.
  - The "OPERATE" menu will be displayed.
- ② Use the CURSOR  or  button to highlight the "1/PICTURE" and press the ENTER button to display the "PICTURE" menu. You can also select the "PICTURE" menu directly by pressing the INPUT "1" button.
- ③ Use the CURSOR  or  button to select a picture function and then press the ENTER button. You can also select an item directly by pressing an Input button.
  - The picture adjustment screen will be displayed.

#### Items to select

- BRIGHT ( Brightness control )      • CONTRAST ( Contrast control )
- COLOR ( Color intensity control )      • SHARPNESS ( Picture detail control )
- TINT ( Red and green values control )

**NOTE:** You can enter the picture adjustment screen directly using the PIC FUNC button on the full function remote control. Each time you press the PIC FUNC button, the picture functions will rotate as follows:

→ CONTRAST → COLOR → SHARPNESS → TINT →  
BRIGHT ←

- ④ Use the CURSOR buttons to adjust a picture to your preference.
  - The CURSOR  or  button increases the level.
  - The CURSOR  or  button decreases the level.
- ⑤ To end this adjustment, press the END button to display the "STORE?" screen.
  - Whenever the END button is pressed, the screen will be changed in this order:  
"PICTURE" menu → "OPERATE" menu → "STORE?" menu
  - If the picture adjustments have not been changed, the "STORE ?" menu will not be displayed.



```
- OPERATE -  
1 / PICTURE  
2 / POSITION  
3 / SOUND  
4 / INPUT SELECT  
5 / SOURCE INFO  
6 / STATIC
```

```
- PICTURE -  
1 / BRIGHT  
2 / CONTRAST  
3 / COLOR  
4 / SHARPNESS  
5 / TINT
```

PICTURE

- BRIGHT -

-----▼----- 60%

- ⑥ Use the CURSOR  or  button to select either "YES" or "NO" and press the ENTER button.
- Will be returned to the source screen.

**Items to select**

- YES ----- The data will be stored
- NO ----- The data will not be stored

- To exit this mode without storing the current status, select "NO".  
If the current status is not stored due to other button operation, the "STORE ?" menu will be displayed.




 
STORE ?	
<b>YES</b>	NO

## BASIC OPERATION

### Position Adjustment

Adjust the position and screen area.

Proceed as follows:

- ① Press the OPERATE button.
  - The "OPERATE" menu will be displayed.
- ② Use the CURSOR  or  button to highlight the "2/POSITION" line. Press the ENTER button to display the "POSITION" menu. You can also select the "2/POSITION" menu directly by pressing the INPUT "2" button.
- ③ Use the CURSOR  or  button to select either "SHIFT" or "BLANKING" and press the ENTER button. You can also select the item directly by pressing the INPUT "1" or "2" button.
  - The selected adjustment screen will be displayed.

#### Items to select

 

 

- SHIFT (Position of the picture)
- BLANKING (Screen area)

**NOTE:** You can enter the position adjustment screen directly using the POSITION button on the full function remote control. The POSITION button will toggle between the SHIFT and BLANKING.

- ④ Adjust the position or screen area.

#### When selecting SHIFT:

Use the CURSOR buttons to move the position of the picture.

- Pressing  or  moves the picture left or right.
- Pressing  or  moves the picture up or down.


**NOTE:** Adjust to position the picture in the center of the raster. Over shift-adjusting to the top of the raster may cause the top of the picture to curve.

```
- OPERATE -  
1 / PICTURE  
2 / POSITION  
3 / SOUND  
4 / INPUT SELECT  
5 / SOURCE INFO  
6 / STATIC
```

```
- POSITION -  
1 / SHIFT  
2 / BLANKING
```

#### POSITION

- SHIFT -









H  
V   +10%  
-90%

## When selecting BLANKING:

1) Hold down the CTL button and press CURSOR buttons to choose the right, left, top or bottom edge.

- The marker on the selected side will turn to a solid color.



2) Adjust the blanking using the CURSOR buttons.

- Top (U) and Right (R) ---- Pressing  or  increases.  
Pressing  or  decreases.
- Bottom (D) and Left (L) -- Pressing  or  increases.  
Pressing  or  decreases.

⑤ To end this adjustment, press the END button to display the "STORE?" menu.

- Whenever the END button is pressed, the screen will be changed in this order:

"POSITION" menu → "OPERATE" menu → "STORE?" menu



⑥ Use the CURSOR  or  to select either "YES" or "NO" and press ENTER.

- If the position adjustments have not been changed, the "STORE?" menu will not be displayed.
- Will be returned to the source screen.

### Items to select

- YES ----- The data will be stored
- NO ----- The data will not be stored

- To exit this mode without storing the current status, select "NO".  
If the current status is not stored due to other button operation, the "STORE ?" menu will be displayed.

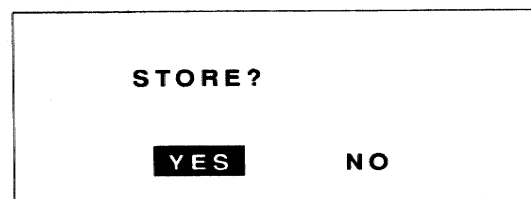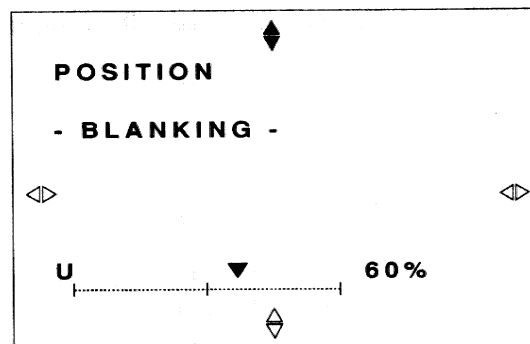



## BASIC OPERATION

### Sound Adjustment (only when used with the ISS-6010/ISS-6010G )




 
Adjust the volume to your preference.

Proceed as follows:

- ① Press the OPERATE button.
  - The "OPERATE" menu will be displayed.
- ② Use the CURSOR  or  button to highlight the "3/SOUND" line and press the ENTER button to display the "VOLUME" screen. You can also select the "VOLUME" screen directly by pressing the INPUT "3" button.

```
- OPERATE -  
1 / PICTURE  
2 / POSITION  
3 / SOUND  
4 / INPUT SELECT  
5 / SOURCE INFO  
6 / STATIC
```



**NOTE:** You can enter the VOLUME adjustment screen directly using the SOUND FUNC button on the full function remote control.

- ③ Use the CURSOR buttons to adjust the volume.
  - The CURSOR  or  button increases the volume.
  - The CURSOR  or  button decreases the volume.
- ④ To end this adjustment, press the END button to display the "STORE?" menu.
  - Whenever the END button is pressed, the screen will be changed in this order:  
"OPERATE" menu → "STORE?" menu

SOUND

- VOLUME -

-----▼----- 60%

- ⑤ Use the CURSOR  or  button to select either "YES" or "NO" and press the ENTER button.
  - If the VOLUME data has not been changed, the "STORE?" menu will not be displayed.

#### Items to select

- YES -----The data will be stored
- NO -----The data will not be stored

STORE?



YES

NO



- To exit this mode without storing the current status, select "NO".  
If the current status is not stored due to other button operation, the "STORE ?" menu will be displayed.



## Input Selection

You can switch from one input to any other input signal.  
Proceed as follows:

- ① Press the OPERATE button.
  - The "OPERATE" menu will be displayed.
- ② Use the CURSOR  or  button to highlight the "4/INPUT SELECT" and press ENTER to display the "INPUT SELECT" list. You can also select the "INPUT SELECT" list directly by pressing the INPUT "4" button.

**NOTE:** You can display the "INPUT SELECT" list directly using the INPUT LIST button on the full function remote control.

- ③ Use the CURSOR  or  button to highlight the signal to be switched to and press ENTER to change to the selected input signal.

**NOTE:** To advance to the next page or to the previous page, hold down the CTL button then press the CURSOR  or  button. To directly access a page, hold down the CTL button then any one of the INPUT buttons.

**NOTE:** Pressing the INFO button on the full function remote control will display the "SOURCE INFORMATION" screen of the signal highlighted. Pressing the END button will return to the "INPUT SELECT" list.

- ④ To end the INPUT SELECT list, press the END button.
  - Whenever the END button is pressed, the screen will be changed in this order:  
"OPERATE" menu → Source screen

**Continued on the next page.**

```

- OPERATE -
1 / PICTURE
2 / POSITION
3 / SOUND
4 / INPUT SELECT
5 / SOURCE INFO
6 / STATIC
  
```

P01 INPUT SELECT			
ISS-6010		SW 2 LEVEL	
NO	INPUT	NAME	DATE
01	M-01 S-01	VTR-1	12/01/92
02	M-01 S-02	VTR-2	12/03/92
03	M-01 S-03	VIDEO-1	12/11/92
04	M-01 S-04	VTR-3	12/24/92
05	M-01 S-05	RGB-1	12/25/92
06	M-01 S-06	VIDEO-2	12/30/92
07	M-01 S-07	VIDEO-3	12/31/92
08	M-01 S-08	NTSC	01/15/93
09	M-01 S-09	PAL	01/16/93
10	M-01 S-10	SECAM	01/29/93



## BASIC OPERATION

### NOTE:

- While you are viewing a source screen, you can also select the input signal directly by pressing the INPUT "1" through "10" button. In this case INPUT buttons function as follows:

#### When using the projector in stand alone operation:

INPUT 1 → Changed to the VIDEO input or S-VIDEO input on the projector

INPUT 2 → Changed to the RGB input on the projector



#### When using the projector with the ISS-6010/ISS-6010G:

INPUT 1 through 10 → Changed to the corresponding number slot of the ISS-6010/ISS-6010G

#### When using the projector with two ISS-6010/ISS-6010G or more:

To switch to another input signal, enter the master slot number, then the slave slot number by using INPUT buttons and press the ENTER button.

For example: If you want to select a signal from the no. 3 slot of the slave Switcher which is connected to the no. 2 slot of the master Switcher, first press the INPUT "2" button, then the INPUT "3" button and finally press the ENTER button.

- When pressing any one of the INPUT buttons to directly access one signal among two or more of the same signals, the projector will output the signal listed in the upper line automatically. To select the one listed in the lower line, use the CURSOR  or  button and press the ENTER button.

### INPUT SELECT List Format

Page (P 01 to P10)      Connection condition of the Switcher

P01    INPUT SELECT				
ISS-6010			SW 2 LEVEL	
NO	INPUT		NAME	DATE
01	M-01	S-01	VTR-1	12/01/92
02	M-01	S-02	VTR-2	12/03/92
03	M-01	S-03	VIDEO-1	12/11/92
04	M-01	S-04	VTR-3	12/24/92
05	M-01	S-05	RGB-1	12/25/92
06	M-01	S-06	VIDEO-2	12/30/92
07	M-01	S-07	VIDEO-3	12/31/92
08	M-01	S-08	NTSC	01/15/93
09	M-01	S-09	PAL	01/16/93
10	M-01	S-10	SECAM	01/29/93

The Switcher connected

Slot number of the master Switcher

Slot number of the sub Switcher



Source name of input signal

Date registered

## Source Information

This is for viewing the signal information and the current status of various setting.

Proceed as follows:

- ① Press the OPERATE button.
  - The "OPERATE" menu will be displayed.
- ② Use the CURSOR  or  button to highlight the "5/ SOURCE INFO" line and press the ENTER button to display the "SOURCE INFORMATION" screen. You can also select the "SOURCE INFORMATION" screen directly by pressing the INPUT "5" button.

**NOTE:** You can enter the "SOURCE INFORMATION" screen directly using the INFO button on the full function remote control.

- ③ To end the "SOURCE INFORMATION" screen, press the END button.
  - Whenever the END button is pressed, the screen will be changed in this order:  
"OPERATE" menu → Source screen

**NOTE:** You can not change NAME, LOCK, SYNC DETECT, COLOR TEMP, AKB, COUNTER and TIMER in this screen.

```


- OPERATE -
1 / PICTURE
2 / POSITION
3 / SOUND
4 / INPUT SELECT
5 / SOURCE INFO
6 / STATIC
    
```

### SOURCE INFORMATION

```

M-01 S-01      NAME      LOCK
                *****  ON
                OFF
FREQUENCY
fh = ***,**KHz
fv = **,** Hz
SYNC DETECT
  AUTO  COMP.
  MANUAL SEPA.
          G-SYNC
SYNC
HD(+)  VD (+)
VIDEO MODE
NTSC 3.58
COLOR TEMP
3200°K
6500°K
9300°K
AKB
ON
OFF
COUNTER  TIMER
*****  **:*
    
```

### SOURCE INFORMATION Screen Format

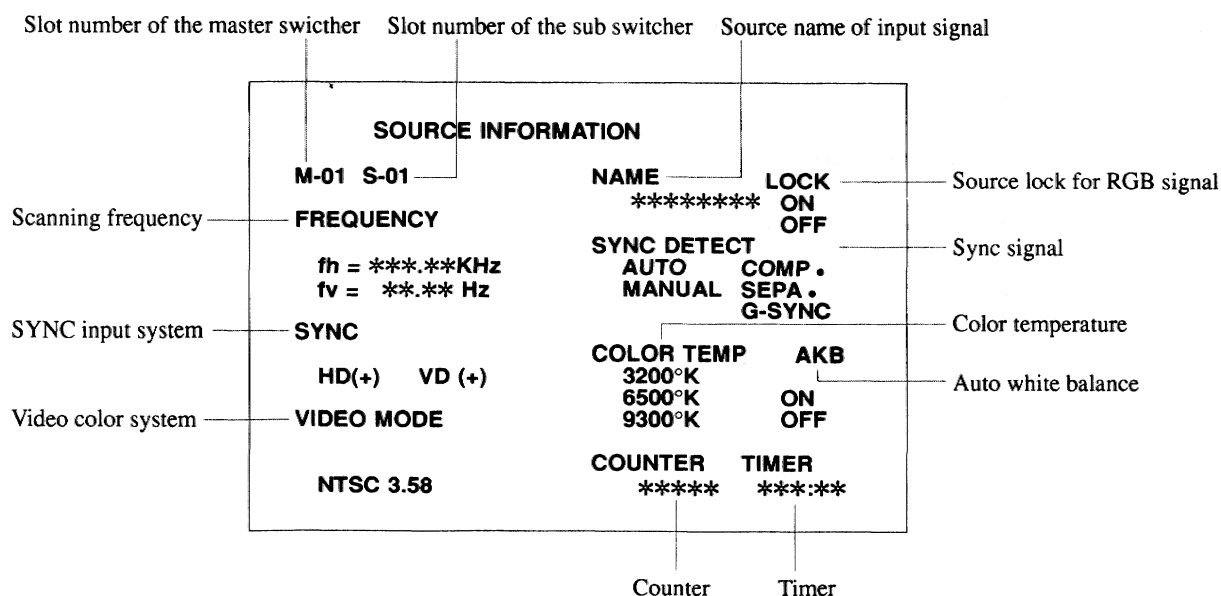

**NOTE:** The example of the screen display is only when used with the ISS-6010/ISS-6010G.



## BASIC OPERATION

### Static Convergence Adjustment





Adjust for the red and blue CRTs to place their pattern on top of the green test pattern (center only).

**NOTE:** The static convergence adjustment should be performed for R and B CRT.

Proceed as follows:

- ① Press the OPERATE button.
  - The "OPERATE" menu will be displayed.
- ② Use the CURSOR  or  button to highlight the "6/STATIC" line and then press the ENTER button to display the STATIC adjustment screen. You can also select the STATIC adjustment screen directly by pressing the INPUT "6" button.

**NOTE:** The "STATIC" adjustment can also be displayed by pressing the STATIC button on the full function remote control.

 
 


- ③ Press the R or B button to display the pattern to be aligned with the Green pattern (as used a reference color).
  - You can turn on or off each CRT beam (R and B) separately.
- ④ Hold down the CTL button then select the CRT you wish to adjust with the R and B buttons.
- ⑤ Align the center of the Red or the Blue pattern with the center of the Green pattern using the CURSOR buttons.
  - The CURSOR  or  button moves the pattern right or left.
  - The CURSOR  or  button moves the pattern up or down.
- ⑥ Repeat steps ③ to ⑤ for the other CRTs if necessary.
- ⑦ To end this adjustment, press the END button to display the "STORE?" menu.
  - Whenever the END button is pressed, the screen will be changed in this order:  
"OPERATE" menu → "STORE?" menu



```
- OPERATE -  
1 / PICTURE  
2 / POSITION  
3 / SOUND  
4 / INPUT SELECT  
5 / SOURCE INFO  
6 / STATIC
```

#### CONVERGENCE

- STATIC -

CRT - R -

H   +10%  
V   -10%

- ⑧ Use the CURSOR  or  button to select either "YES" or "NO" and press the ENTER button.
- If the STATIC convergence data has not been changed, the "STORE ?" menu will not be displayed.

**Items to select**

- YES -----The data will be stored
- NO -----The data will not be stored

- To exit this mode without storing the current status, select "NO".  
If the current status is not stored due to other button operation, the "STORE ?" menu will be displayed.

<b>STORE ?</b>	
<b>YES</b>	<b>NO</b>

## BASIC OPERATION

### Picture and Sound Mute

This function mutes a picture or sound.

#### To mute a picture or sound:



- Pressing PICTURE (PIC) MUTE mutes a picture.  
Pressing SOUND MUTE mutes sound.  
Pressing again restores the picture (or sound).

**NOTE:** When picture is muted, no "OPERATE" menu or "ADJUST" menu can be accessed.

### Normal and Load Function



Adjustment settings can be returned to the original factory preset level or the previously stored set level.

#### To return to the factory preset level (NORMAL):


- ① Press the NORMAL button.
  - A confirmation message will be displayed.
- ② Use the CURSOR  or  button to select "YES".
- ③ Press the ENTER button.
  - The NORMAL function will be executed.

**NOTE:** If you select "NO", you will exit this mode suspending current status.


#### To return to the last stored level (LOAD):

- ① Press the NORMAL button while holding down the CTL button.
  - A confirmation message will be displayed.
- ② Use the CURSOR  or  button to select "YES".
- ③ Press the ENTER button.
  - The LOAD function will be executed.

**NOTE:** If you select "NO", you will exit this mode suspending current status.

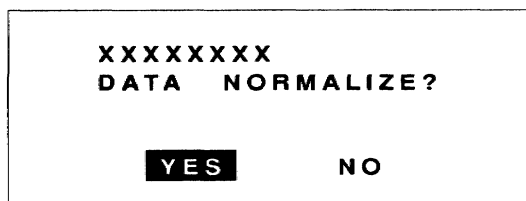


XXXXXXXX = Adjustment item to be normalized

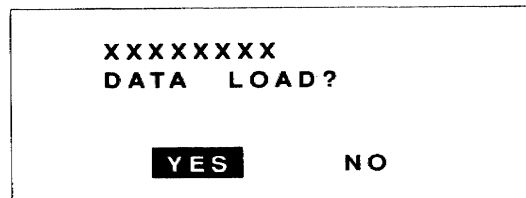

XXXXXXXX = Adjustment item to be loaded

## Screen Format in Projecting a Picture

**NOTE:** The example of the screen display is only when used with the ISS-6010/ISS-6010G.

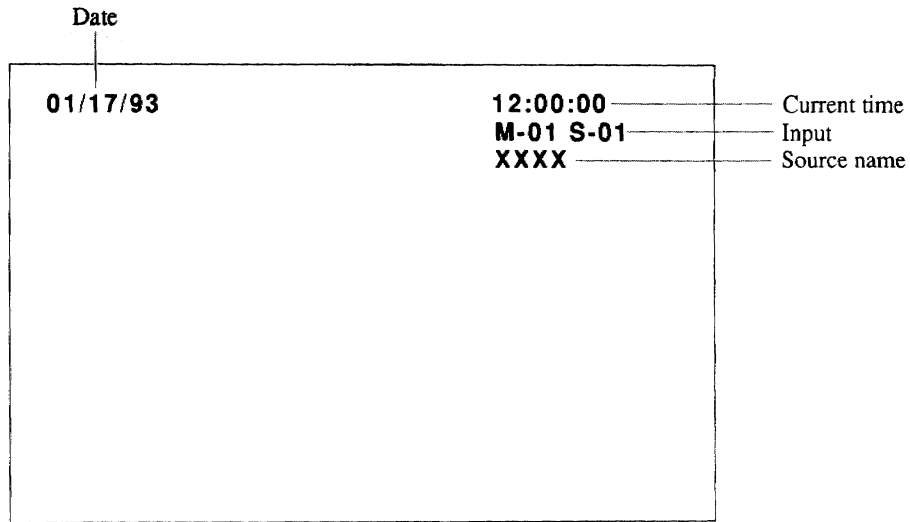


# EXAMPLES OF CONNECTIONS

## CAUTIONS ON CONNECTIONS:

- Unplug the projector and other equipment from the AC supply before making connections.
- Make sure that the plug of the power cord is properly connected to the power outlet. A loose connection may cause hum or noise.
- Confirm your connection layout with the user's manual accompanying the equipment to be connected with the ISS-6010/ISS-6010G Switcher.


## When Used in Stand Alone Operation

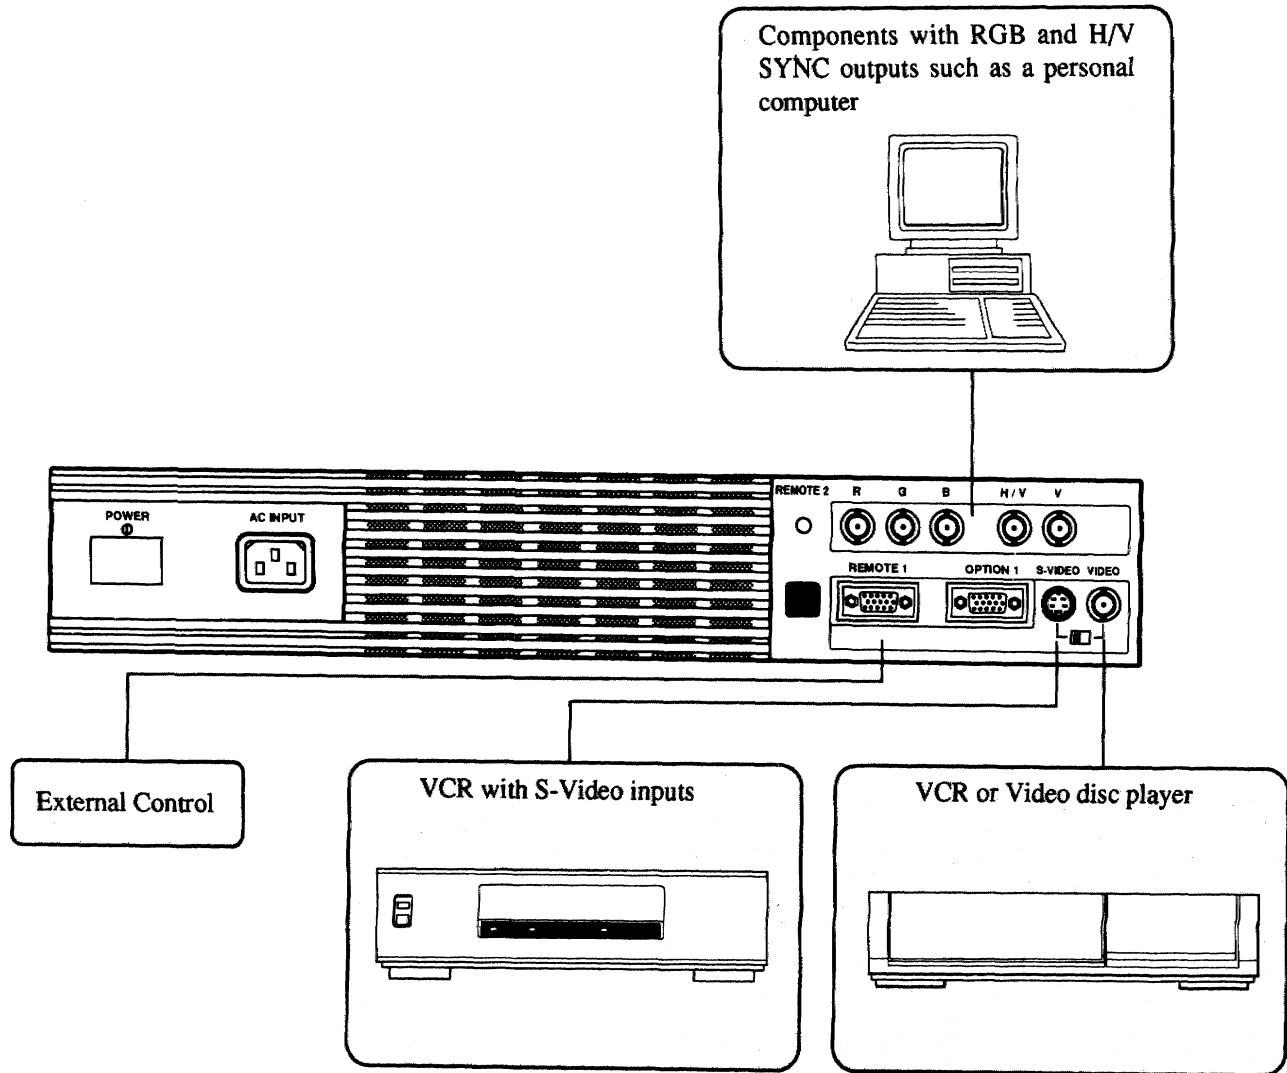

**NOTE:** This projector does not have built-in audio.

## When Used with One Switcher (ISS-6010/ISS-6010G)

Up to 10 input signals can be accepted when the projector is connected to one Switcher.  
Using the projector with the Switcher allows easy adjustment and signal selection.

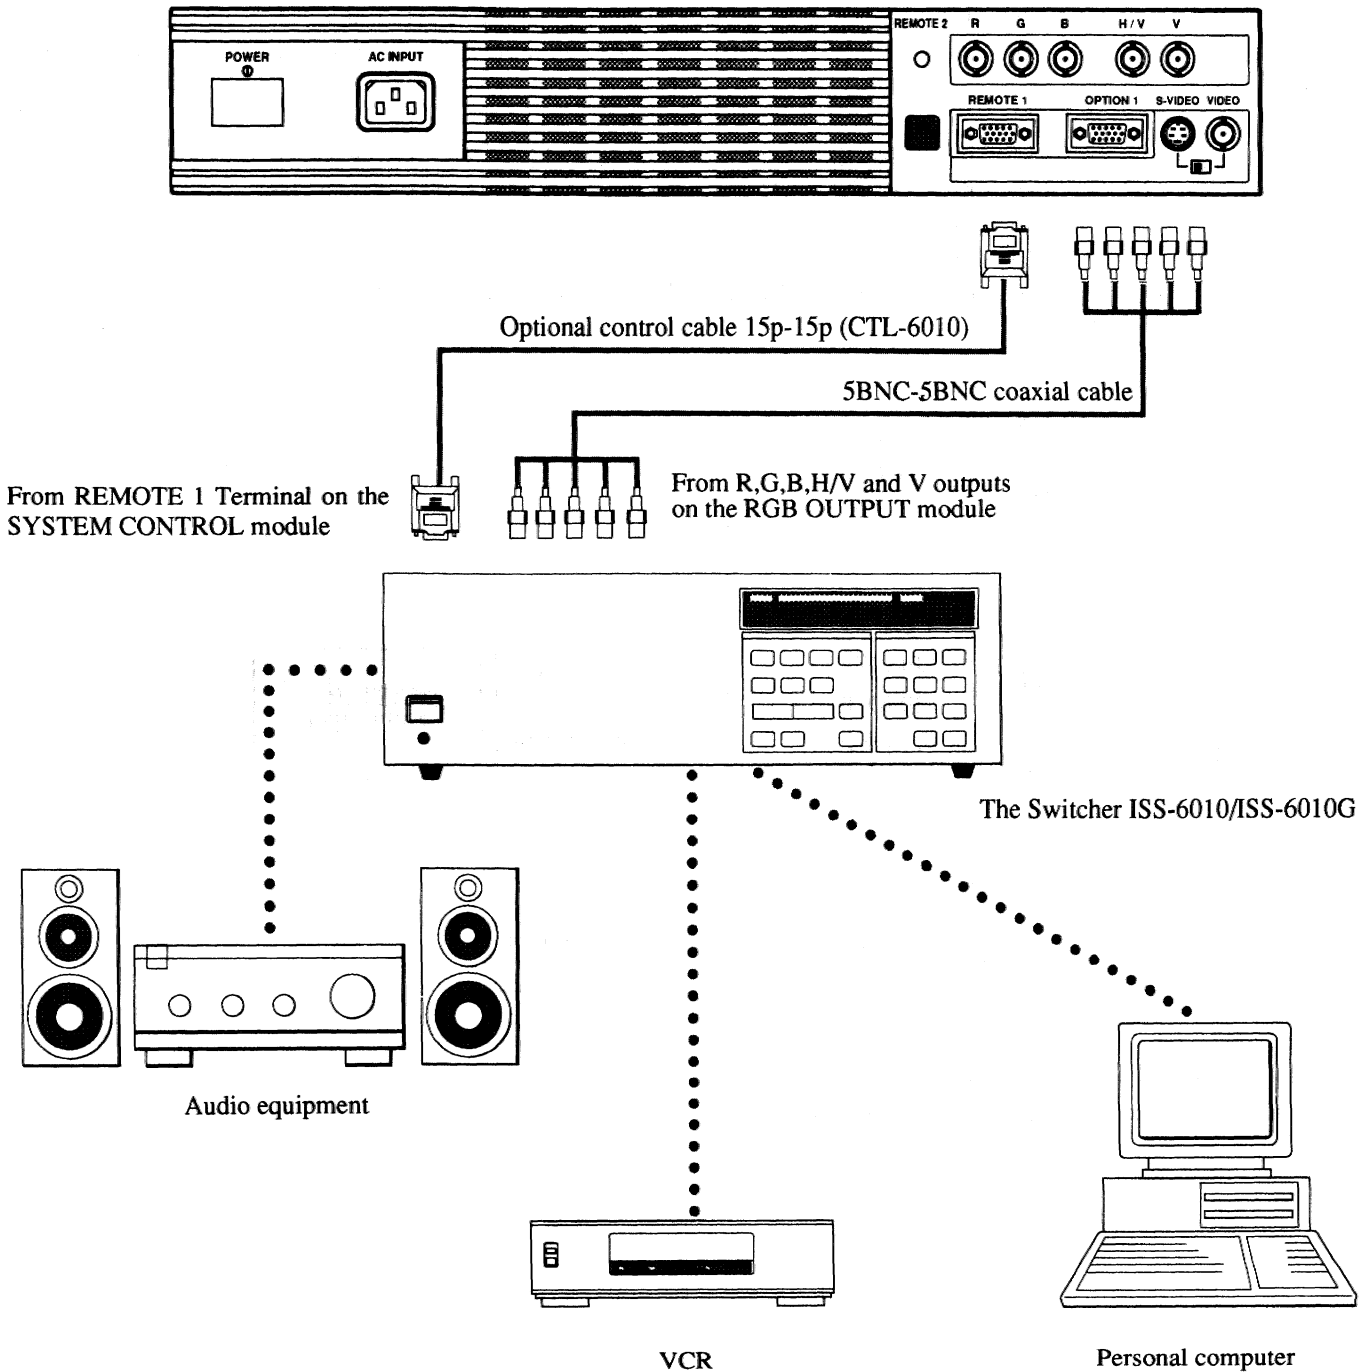

- For more information on the Switcher, refer to the user's manual accompanying the ISS-6010/ISS-6010G Switcher.
- Cables mentioned above are not included with the projector.



## EXAMPLES OF CONNECTIONS

### When Used with Two Switchers or More (100 Inputs)


Up to 100 inputs can be accepted with Switcher.

#### How to make connections:

- ① Connect the REMOTE 1 terminal of the master Switcher to the REMOTE 1 of the projector using the optional control cable(15p-15p/CTL-6010).
- ② First connect the REMOTE 2 terminal of the master Switcher to the REMOTE 1 terminal of the first slave Switcher using the same optional control cable as mentioned above. Second connect the REMOTE 2 terminal of the first slave to the REMOTE 1 of the second slave, and the REMOTE 2 terminal of the second slave to the REMOTE 1 terminal of the third slave (--- and the REMOTE 2 of the ninth slave to the REMOTE 1 of the tenth slave). Connect all the Switchers with optional control cables.



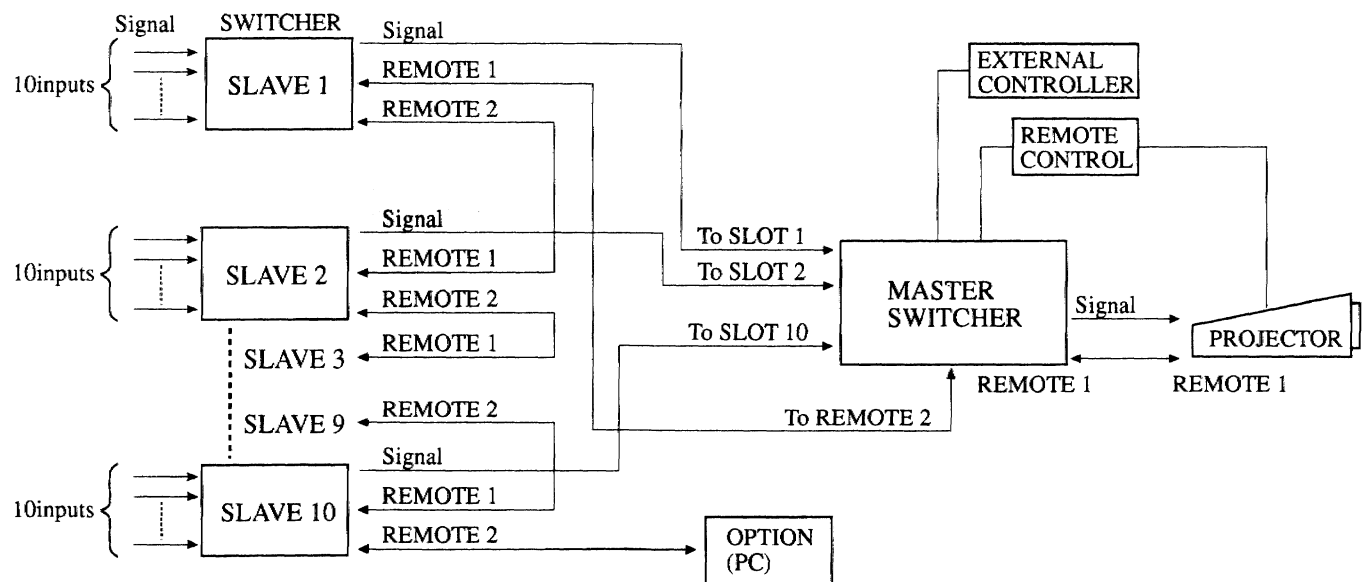


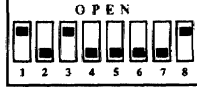





#### NOTE:

- Be sure to set all the Slide switches (S8603) of the Switcher to RS-422 positions. Set the one on the last slave Switcher to the appropriate position to match the connected equipment such as a personal computer. (RS-422/RS-232 for PC control of projector)
- Set the DIP switch S8601 of the Switcher.
- This operation does not work with the GP-3000/GP-3000G and the GP-5000/GP-5000G.




- Refer to the user's manual accompanying the Switcher.
- Cables mentioned are not included with the projector.

Set the DIP switch(S8601) of the Switcher as follows:

ISS-6010 ISS-6010G	Output to	Setting of S8601
Master	The Projector	
Slave 1	Slot 1 of the Master	
Slave 2	Slot 2 of the Master	
Slave 3	Slot 3 of the Master	
Slave 4	Slot 4 of the Master	
Slave 5	Slot 5 of the Master	
Slave 6	Slot 6 of the Master	
Slave 7	Slot 7 of the Master	
Slave 8	Slot 8 of the Master	
Slave 9	Slot 9 of the Master	
Slave 10	Slot 10 of the Master	

**NOTE:** Slave numbers 1 to 10 must correspond to the master's slot numbers 1 to 10.

### REMOTE 1 Terminal

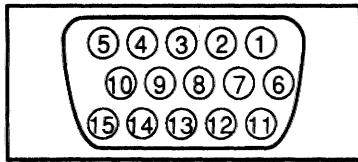

This terminal is used for either connecting the ISS-6010/ISS-6010G Switcher or an external control unit (non NEC equipment). When the Switcher is used, connect it with the optional control cable (15-15 pin; 50 ft./16m; CTL-6010) to this terminal.

**When used with the Switcher.**

Pin No.	FUNCTION
1, 2, 6 and 7	Sending and receiving data when the Switcher is used.
4	Input signal selection.
13	Input for external remote control data.
3, 8, 9, 11 and 12	Used inside the Projector. Normally set to OPEN.
14	Use/non-use of external control.
5	POWER ON/OFF
10	PICTURE MUTE ON/OFF
15	Ground

**When used in stand alone operation.**

Pin No.	SHORT/OPEN	FUNCTION
14	SHORT OPEN	External control mode ON External control mode OFF
5	SHORT OPEN	POWER ON POWER OFF
10	SHORT OPEN	PICTURE MUTE OFF PICTURE MUTE ON
4	SHORT OPEN	VIDEO RGB

"SHORT" means to connect with pin 15

- When in the external control mode, the POWER, INPUT and PICTURE MUTE buttons on the remote control will not function.
- Pin 13 is the external remote signal terminal. The projector can be controlled by the same format signal as the supplied remote control from the external controller regardless of setting Pin 14.

**NOTE:** When turning the power on using the external control, short Pin 5 about three seconds after supplying the AC power to the projector; when turning the power off using the external control, power off the AC supply to the projector about three seconds after opening Pin 5. These procedures are to protect your projector and the connected equipment.

