


About error codes

When a critical operational error occurs, the power will be automatically turned off and the error code will light up on the error code window inside the front cover. You can check the code without removing the cover. Refer to the chart below for the meanings.

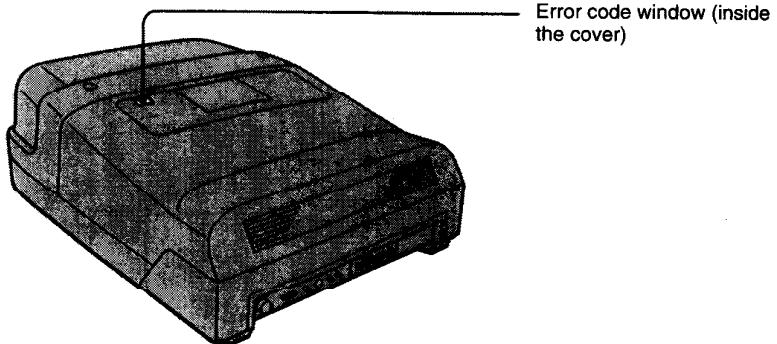

Y: Error occurrence

Error Code	FAN stop	(H stop) 115V down	IK-over	V-stop	HV-over	Power down
01.....	Y	-	-	-	-	-
02.....	-	Y	-	-	-	-
03.....	Y	Y	-	-	-	-
04.....	-	-	Y	-	-	-
05.....	Y	-	Y	-	-	-
06.....	-	Y	Y	-	-	-
07.....	Y	Y	Y	-	-	-
08.....	-	-	-	Y	-	-
09.....	Y	-	-	Y	-	-
0A.....	-	Y	-	Y	-	-
0b.....	Y	Y	-	Y	-	-
0C.....	-	-	Y	Y	-	-
0d.....	Y	-	Y	Y	-	-
0E.....	-	Y	Y	Y	-	-
0.....	Y	Y	Y	Y	-	-
10.....	-	-	-	-	Y	-
11.....	Y	-	-	-	Y	-
12.....	-	Y	-	-	Y	-
13.....	Y	Y	-	-	Y	-
14.....	-	-	Y	-	Y	-
15.....	Y	-	Y	-	Y	-
16.....	-	Y	Y	-	Y	-
17.....	Y	Y	Y	-	Y	-
18.....	-	-	-	Y	Y	-
19.....	Y	-	-	Y	Y	-

Error Code	FAN stop	(H stop) 115V down	IK-over	V-stop	HV-over	Power down
1A.....	-	Y	-	Y	Y	-
1b.....	Y	Y	-	Y	Y	-
1C.....	-	-	Y	Y	Y	-
1d.....	Y	-	Y	Y	Y	-
1E.....	-	Y	Y	Y	Y	-
1.....	Y	Y	Y	Y	Y	-
20.....	-	-	-	-	-	Y



Others

Notes

- When the error code lights up, all the previous adjustment data will be cleared.
- The error code disappears when the MAIN POWER switch is turned off and the power cord is disconnected.
- The error code lights up every time the power is turned on until the critical operational error cause is returned to normal.